



Equipment Specification

BRISTOL—CITROEN

BRISTOL '405' 1955-58—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			Terminal block	1955-58	37101B	Windshield wipers—cont'd		
Boot lamp	1955-58	31175A	Warning lights			Outer casing	1955	745054
Dipper	1955-58	31284A	Direction indicator ..	1955-58	*38106A	Motor to wheelbox ..	1956-58	744099
Flasher	1955-58	031046	Ignition	1955-58	38104A	" " " " " "	1955	740963
Fog and driving lamp ..	1955-58	31113A/D	Main beam	1955-58	*38105A	Wheelbox to wheelbox	1956-58	745179
Ignition and lighting ..	1955-58	31270A/B	Petrol reserve	1955-58	38103A	End tube " " " "	1955-58	740746
Knob	—	316285	Windshield wipers			Ferrule, casing retaining	1955-58	740715
Panel	1955-58	*78312A	Motor	1955-56	*75280A	Arm	1955-58	741839
Petrol reserve	1955-58	*31261D	" " " " " "	1957-58	*75232A	Blade	1955-58	*738735
Knob	—	317463	Wheelbox	1955	72635B	Overdrive equipment		
Solenoid, starting motor	1955-58	*76411E	" " " " " "	1956-58	72683A	Switches		
Solenoid operating ..	1955-58	*31282A	Crosshead and rack assy.			Control	1955-58	31500A
Stop lamp	1955-58	31082D/E	Cut to 37 $\frac{1}{2}$ " " "	1955-58	741263	Interrupter	1955-58	*31077E
Windshield wiper ..	1955-58	*31302D						

BRISTOL '406' 1958-60

Ammeter	1958-60	36242A	Relay, horn	1958-60	*33116B	Windshield wipers		
Battery	1958-60	GT9A	Starting motor	1958-60	25026E	Motor	1958-60	75310A
Coil, ignition	1958-60	*45054H/K	Steering column control			Wheelbox	1958-60	72686B
Control box	1958-60	*37187A/L	Stop bracket	1958-60	323736	Crosshead and rack assy.	1958-60	744256
Distributor	1958-59	*40592A	Contact	1958-60	323738	Outer casing		
" " " " " "	Later	40629A	Bracket and contact plate	1958-60	*324338	Motor to wheelbox ..	1958-60	54710550
Flasher unit	1958-60	35010A	SWITCHES			Wheelbox to wheelbox	1958-60	54710551
Fuse box	1958-60	033239	Boot lamp	1958-60	31175F	End tube	1958-60	740746
Generator	1958-60	22258E/F	Courtesy	1958-60	*31302D	" " " " " "	1958-59	744133
Horn			Dipper	1958-60	31284A	Arm	1960	54711538
Low note	1958-60	69046F	Door pillar	1958-60	31175F	" " " " " "	1958-60	*737907
High note	1958-60	69047F	Flasher	1958-60	031046	Blade	1960	54711283
LAMPS			Ignition and lighting ..	1958-60	31270B	" " " " " " Later		
Boot	1958-60	53343A	Knob	—	316285	Overdrive equipment		
Flasher, front and rear ..	1958-60	*52272D	Panel	1958-60	*78312A	Solenoid, transmission		
Flasher, repeater ..	1958-60	52326B	Reverse lamp	1958-60	*31077E	gear	1958	*76505B
Front grille illumination ..	1958-60	39006A	Solenoid, starting motor	1958-60	*76411E	ditto	1959-60	76515A
Number plate illumination	1958-60	53518A	Solenoid operating ..	1958-60	*31282A	Switches		
Reverse	1958-60	*52246B	Stop lamp	1958-60	31082E/J	Interrupter	1958-60	*31077E
Stop tail and reflex ..	1958-60	53377B	Windshield wiper ..	1958-60	31847A	Manual control ..	1958-60	31500B
Petrol reserve valve ..	1958-60	78037A	Terminal block	1958-60	37101B			
Relay, foglamp	1958-60	33093A						

BRUSH ELECTRIC Battery Vehicle 1951-55

Fuse box	1951-55	37104A	LAMPS			Windshield wipers		
Horn	1951-55	*069213	Roof lamp	1951-55	*56017A	Motor	1951-55	*75126A
Horn push	1951-55	76205A	Mirror	1951	62515A	Arm	1951-55	*735049
			Reflex reflector	1952-55	*062562	Blade	1951-55	727802

CITROEN 15 h.p. 1946-55

Ammeter	1946-54	36033D	LAMPS, Head, Home—			Trafficators	1946-52	*54017B
Coil, ignition	1946-54	*45020A/B	<i>continued</i>			" " " " " "	1953-55	54044A/D
" " " " " "	1955	*45012B	R.H.D., dip left			Warning lights		
Control arm	1946	*310518	(L.H. and R.H.) ..	1951-52	*50718F	Flasher	1951-54	*38069A
" " " " " "	Later	31110A	ditto	1953-55	51473A	Main beam	1949-54	*38069A
" " " " " "	1947-50	31129A	Head, Export			Windshield wipers		
Control box	1946-48	*37031A/B	R.H.D., dip left ..	1950-52	*50718F	Motor	1946-48	*75066A
" " " " " "	1949-50	37057E	L.H.D., dip right ..	1950-52	*50775E	" " " " " "	1949-50	*75055K
" " " " " "	1951-52	37065E	Number plate illumination			" " " " " "	1951	*75055L
" " " " " "	Later	*37138A/D	and boot	1954-55	53308A	" " " " " "	1952-55	75152A
Distributor	1946-49	40100E	Side	1946-55	52030A	" " " " " "	1946-48	735691
" " " " " "	Later	*40219A/B	(U.S.A.)	1953-55	*52162B/D	Clutch housing		
" " " " " "	1950	*40219D	Stop tail and number plate	1946	*53028B	Wheelbox		
" " " " " "	Later	*40219E/F	" " " " " "	1947-52	*53063B	With switch	1949-50	72608A/D
" " " " " "	1951-52	40236B/D	Stop tail (Export) ..	1949-50	*53151B/D	" " " " " "	1951-55	72567A/H
" " " " " "	Later	*40332A/E	Tail and flasher (U.S.A.)	1953-54	53200A	Less switch	1949-50	72607A/B
Flasher unit	1953-54	*35003A	Reflex reflector (U.S.A.)	1946	*255273	" " " " " "	1951-55	72568A/E
Flasher relay	1953-54	33117A	Starting motor	1946-48	25502A	Bracket, shaft, short	1946-48	737243
Fuse box	1952-55	033239	" " " " " "	1949-55	25531A/D	Bracket coupling ..	1946-48	729036/S
Generator	1946	*228199	" " " " " "			Link, primary	1946-48	734756
" " " " " "	1947-50	22416B	SWITCHES			" " " " " " secondary	1946-48	737281
" " " " " "	1951-52	*22250E/F	Ignition	1951-55	31287A	Crosshead and rack assy.		
Horn	Later	22258D	Ignition and lighting ..	1946-50	*34025B	Cut to 34 $\frac{1}{2}$ " " "	1949-52	736177
Low note	1946-48	*69021A	Solenoid, starting motor	1946-48	76022B	Crosshead and rack assy.	1953-55	738764
" " " " " "	1949-50	*69011F	Solenoid operating ..	1949-55	*76411D/E	Outer casing		
" " " " " "	1955	69046A	" " " " " "	1946-54	317063	Motor to wheelbox ..	1949-55	739870
High note	1946-48	*69022A	Starting motor	1955	31363A	Wheelbox to wheelbox	1949-52	*739943
" " " " " "	1949-50	*69012F	Stop lamp	1946	*764150	" " " " " "	1953-55	739937
" " " " " "	1955	69047A	Spring	1946-53	31281B	3", offside wheelbox ..	1949-55	740031
LAMPS			Stop lamp		*31571A	Grommet		
Head, Home			Trafficator	1954-55	31440A	Housing or wheelbox	1946-52	733874
R.H.D., dip left (L.H.)	1946	*50253B	" " " " " "	1951	31190A	Wheelbox	1953-55	733695
" " " " " " non-dip (R.H.)	1946	*50254B	" " " " " "	1951-52	031046	Arm	1946-54	*735076
" " " " " " dip left (L.H.)	1947-50	*50716D	Knob	1953-55	31250F	" " " " " "	1955	*735098
" " " " " " non-dip (R.H.)	1947-50	*50717D		1953-55	311156	Blade	1946-55	727707

* See Supersession Chart
L.H.D. .. Left hand drive

† No longer available—refer to Wiper Conversion Set Section.
R.H.D. .. Right hand drive

L.H. .. Left hand

R.H. .. Right hand

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

CITROEN—COMMER

CITROEN 23 h.p. 1946-55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-53	36033D	LAMPS—continued			Trafficators	1949-52	*54017B
Coil, ignition	1949-53	*45020A/B	Side	1949	52164A	" Later	1952-55	54044A/D
"	1954-55	*45012B	"	1950-52	52134A/B	Warning lights		
Control arm	1949-50	31129A	"	1953-55	52030A	Flasher	1951-53	*38069A
Control box	1946-55	37057E	" (U.S.A.)	1949-50	52134A/B	Main beam	1949-53	*38069A
Distributor	1946-55	40173A/E	"	1953	*52162B/D	Windshield wipers		
Flasher unit	1953	*35003A	Stop tail and number plate	1949-50	*53029A	Motor	1949-50	*75055K
Flasher relay	1953	33117A	"	1951-52	*53063B	"	1951	*75055L
Generator	1946-55	22430E	Tail and flasher indicator			" Later	1951-55	75152A
Horn			(U.S.A.)	1953	53200A	Wheelbox		
Low note	1949-51	*69019A	Reflex reflector (U.S.A.)	1953	*57035D	With switch	1949-50	72608A/D
"	1955	69046A	Starting motor	1949-55	25513A/D	"	1951-55	72567A/H
High note	1949-51	*69020A	SWITCHES			Less switch	1949-50	72607A/B
"	1955	69047A	Ignition	1951-55	31287A	"	1951-55	72568A/E
LAMPS			Ignition and lighting ..	1949-50	*34025B	Crosshead and rack assy.		
Head, Home			Solenoid, starting motor	1949-55	*76411D/E	Cut to 34 $\frac{1}{8}$ "	1949-55	736177
R.H.D., dip left (L.H.)	1949-50	*50861A	Solenoid operating ..	1949-54	*317063	Outer casing		
" non-dip (R.H.)	1949-50	*50862A	Stop lamp	1955	31363A	Motor to wheelbox ..	1949-55	739870
" dip left	1951-52	*50718F	Spring	1949-53	31281B	Wheelbox to wheelbox	1949-52	*739943
(L.H. and R.H.) ..	1953-55	51473A	Trafficator	1951	*315714	"	1953-55	*739979
Head, Export			" Later	1951-52	031046	3" offside wheelbox ..	1949-55	740031
R.H.D., dip left ..	1951-52	*50718F	Lever	1953-55	31250F	Grommet, wheelbox ..	1949-53	733874
L.H.D., dip right ..	1951-52	*50775E		1953-55	311156	"	1954-55	733695
Number plate illumination						Arm	1949-54	*735076
and boot	1955	53308A				"	1955	*735098
						Blade	1949-55	727707

CITROEN 2CV 1954-60

Ammeter	1954-60	*36113A	SWITCHES			Warning light, petrol		
Coil, ignition	1954-60	45057A/B	Ignition	1954-60	31287A/B	Van	1954-60	38094A
Horn	1957-60	*70146A/B	Trafficator	1954-60	31250A/H	Windshield wipers		
LAMPS			Lever	—	311156	Arm	1956-60	*735096
Number plate illumination			Trafficators	1954-60	54053A	Blade	1956-60	727802
(Van)	1954-60	A53101						
		E/H						

CITROEN DS19 1956-60: ID19 1959-60: 'Safari' 1960

Ammeter	1957-59	36233B/D	LAMPS—continued			Warning lights		
Bulb holder, panel light ..	1960	863511	Stop	1958-60	53686A/E	High pressure	1960	38158A
Bulb	—	987	" ("Safari" only) ..	1960	53600A/E	Ignition	1960	38185A
Coil, ignition (ID19 only)	1959-60	*45053K	Tail	1956-60	*53533A/B	Main beam	1960	38210A
Control box	1956	37183H	" ("Safari" only) ..	1960	*53902A/B	Oil	1960	38209A
"	1957-60	*37187K/L	Reflex reflector	1956-60	57111A	Windshield wipers		
Fuse box	1956-60	033239	Starting motor	1956-60	25553B	Motor	1958-60	75330A
Generator	1956	*22483B	SWITCHES			Wheelbox	1958-60	72704A
"	1957-60	22258E/F	Dimmer and demister ..	1956-59	78311A	Crosshead and rack assy.	1958-60	743955
Horn			Knob, dimmer	1960	78346A	Outer casing		
Low note	1956-60	69046B/F	" demister	1956-60	768972	Motor to wheelbox		
High note	1956-60	69047B/F	Ignition	1956-60	768973	Left hand	1958-60	745678
LAMPS			Interior light	1956-60	31126B	Right hand	1958-60	745677
Flasher, rear	1956-60	*52272A/D	Knob	1956-60	316144	End tube	1958-60	740746
Head, Home			Panel	1956-59	*78320A	Ferrule, casing retaining	1958-60	740715
R.H.D., dip left ..	1956-60	51988A/D	Knob	1956-59	768972	Grommet, wheelbox ..	1958-60	740811
Number plate illumination	1956-59	53101H	Solenoid, starting motor	1956-60	*76411E	Arm, left hand	1958-60	745968
"	1960	53518A	Solenoid operating (ID19			Arm, right hand	1958-60	745967
Reverse	1960	53378A	only)	1959-60	31363A	Blade	1958-60	737897

CLECCO ELECTRICS Battery Vehicle 1952-54

Fuse box	1952-54	*37137B	LAMPS—continued			Windshield wipers		
Horn	1952-54	*069213	Tail and number plate ..	1952-54	*53007B	Motor	1952-54	*75120A
Horn push	1952-54	76205A	SWITCHES			Arm	1952-54	*735049
LAMPS			Lighting	1952-54	34065A	Blade	1952-54	727802
Side	1952-54	52102A						

COMMER 8 cwt. Van 1946-52: Estate Car 1949

Battery	1946-47	SG9A	Control box	1946	*37003A	Generator	1946-47	22449A
"	1948-49	GT9A	"	1947	*37031A	"	1948	*22411A
"	1950-52	GT7A	"	1948	37057E	"	1949	*22250A
			"	1949-51	37065E	"	1950-51	*22250E/F
Coil, ignition	1946-52	*45020A/B	" Later	1951-52	*37138B	" Later	1951-52	22258D
			Distributor	1946	*40042B/D	Horn	1946-48	069344
			"	1947-52	*40050A/J	" Later	1948-52	*69011F

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued



COMMER 8 cwt. Van 1946-52: Estate Car 1949—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			LAMPS—continued			SWITCHES—continued		
Head, Home			Stop tail and number plate	1946	*524753	Windshield wiper ..	1948-52	31192A
R.H.D., L.H. and R.H.	1946	50129A	" " " " "	1947-48	*53060A	Knob ..	—	*315077
" dip left (L.H.)	1947	50511A	Stop tail ..	1949	53131B	Trafficators ..	1946-48	*54009B
" non-dip (R.H.)	1947	50512A	" " " " Later	1949	*53151B/D	" " " " Later	1948-50	*54018D
" dip left (L.H.)	1948-49	*50792B	" " " " " "	1950-51	53178B/D	" " " " " "	1950-52	*54048A
" non-dip (R.H.)	1948-49	*50578E	" " " " " "	1951-52	53172A/B	Warning light (main beam)	1950-52	38052B
" dip left (L.H.)	1950	50572F	Mirror ..	1946	620511	Windshield wipers		
" non-dip (R.H.)	1950	*53573F	Rear reflector (U.S.A.) ..	1950-52	65424A	Motor ..	1946-47	75066A
" dip left (L.H.)	Later	1950-51	Starting motor ..	1946-47	*250603	" " " " " "	1948-50	*75053J
" non-dip (R.H.)	Later	1950-51	" " " " " "	1948	25016A	" " " " " "	1951	*75053K
R.H.D., dip left	1951	*50954A	" " " " " "	1949	*25024A	" " " " " "	1952	75150A
(R.H. and L.H.)	Later	50941A	" " " " " Later	1949-52	25022A/L	Clutch housing ..	1946-47	737357
" " " " " "	1952		Steering column control			Wheelbox ..	1948-52	*72548A/K
Head, Export			Home ..	1946-47	323801	Bracket, with shaft and		
R.H.D., L.H. and R.H.	1947-48	50519A	Export ..	1946-47	323821	coupling ..	1946-47	735395
" dip left			Steering column control			Bracket, shaft, short ..	1946-47	737243
(L.H. and R.H.)	1949	*50792B	" " " " " Later	1947-48	32724B/D	Bracket coupling ..	1946-47	729036/S
" " " " " "	1950-51	*50445K	" " " " " "	1949-50	32786E	Link ..	1946-47	733813
" " " " " "	1951	*50954A	" " " " " "	1951	32862B/F	Crosshead and rack assy.	1948	736177
" " " " " "	1952	50941A	" " " " " " Later	1951-52	32856B/F	ditto Cut to 42 1/2"	Later	1948-52
L.H.D., dip right	1950-51	*A50445K						736307
(L.H. and R.H.)	Later	*50804D				Outer casing		
" " " " " "	1951-52					Motor to wheelbox ..	1948	739868
Head, Export Europe						ditto " " " " " "	1948-52	*739832
(not France) ..	1950-51	*B50445K				Wheelbox to wheelbox	1948	739937
ditto ..	1951-52	*50963A				ditto " " " " " "	1948-51	*739957
Head, Export France						ditto " " " " " "	1952	*739982
" " " " " "	1948-49	50664E				Grommet, housing or		
" " " " " "	1950-51	*50790E				wheelbox ..	1946-48	733874
" " " " " "	1951-52	*50962A				ditto " " " " " "	1948-52	735349
Head, Export U.S.A.						Grommet, scuttle ..	1946-47	729378
" " " " " "	1949-50	50806A				Arm ..	1946-47	*735098
" " " " " "	1951-52	50811A				" R.H.D. " " " " " "	1948	*737425
Number plate illumination	1949-52	53093E				" L.H.D. " " " " " "	1948-52	*737524
Side ..	1946	52036A				Blade ..	1946-47	727707
" " " " " "	1947	*52066A				" " " " " "	1948	737424
" " " " " "	1950-52	52139B				" " " " " " Later	1948-50	*737433
" (U.S.A.)	1949	52139B				" " " " " "	1951-52	738724

COMMER 'Express' Delivery Van and Pick-up Truck 1953-60

Ammeter (special orders)	1955-57	36197A	LAMPS—continued			SWITCHES—continued		
Battery ..	1953-58	GT7A	Head, Export France	1953	*50962A	Solenoid operating	1955-60	31447A
" " " " " "	1959-60	BT7A	" " " " " "	1953-55	*51341A	Starting motor ..	1953-54	76423A
Bulb holder, speedometer	1955-57	39007A	" " " " " "	1956-59	51739B	Coupling ..	—	764428
Coil, ignition ..	1953-56	*45020A/B	" " " " " "	1959-60	58271A	Stop lamp ..	1953-60	31281B
" " " " " "	1957-59	*45053H/J	Head, Export Sweden	1959-60	58610A	Spring ..	1953-56	*315714
" " " " " "	1960	*45054M	Head, Export U.S.A.	1953	50811A	" " " " " "	1957-60	315774
Control box ..	1953-55	*37138B/D	" " " " " "	1953-55	51343A	Windshield wiper	1953-60	*31261A/D
" " " " " "	1956-59	37182A/H	" " " " " "	1956-60	51741B	Knob ..	1953-58	317456
" " " " " "	1959-60	37182J	" " " " " " Later	1960	58493A	" " " " " "	1959-60	54330754
" " " " " "	1960	37182K	Number plate illumination	1953-60	53093E/H	Trafficators ..	1953-54	*54048A
Distributor			Roof ..	1953-54	*56051A	Warning lights		
S.V. Engine ..	1953-56	*40050A/J	Side ..	1953-54	52139E	Flasher ..	1953-54	*38092A
O.H.V. Engine — from			Side and flasher (U.S.A.)	1953-54	*52162F	" " " " " "	1955-60	38119A
Chassis No. F460001 ..	1956	*40428A/B	" " " " " (all models)	1955-56	*52240B	Main beam ..	1953-54	*38069A
O.H.V. Engine ..	1956-58	40492A	" " " " " " Later	1957	*52372A/B	" " " " " "	1955-60	38118A
Distributor ..	1959-60	40492B	Stop tail ..	1958-60	52403A/D	Windshield wipers		
" " " " " "	1960	40492D/E	Stop tail and flasher	1953-54	53178B/D	Motor ..	1953-54	75150A
Flasher unit ..	1953-55	*35003A	U.S.A. ..	1955-60	53178E/J	" " " " " "	1955-56	*75200B
" " " " " "	1956	*35004A	All models ..	1953-54	65424A	" " " " " "	1957-58	75296A/B
" " " " " "	1957-60	35011A	Rear reflector ..	1955-56	*7035A	" " " " " "	1959-60	75296E
Flasher relay ..	1953-60	33117A/D	Reflex reflector ..	1957-59	57095A	Wheelbox ..	1953-54	*72548A/K
Fuse box ..	1953-60	033239	" " " " " "	1960	57122A	" " " " " "	1955-60	72663D/F
Generator ..	1953-56	22258D	Starting motor ..	1953-60	25022A/L	Crosshead and rack assy.		
" " " " " "	1957-60	22258E/F	" " " " " " Later	1960	25022M	Cut to 42 1/2" ..	1953-54	736307
Horn			Steering column control ..	1953	25022N/Q	" " 42 1/2" " " " "	1955	*743231
Low note ..	1953-54	69011F	ditto " " " " " "	1953-60	32868J/L	Outer casing	1956-60	743235
" " " " " "	1955-60	69046A/F				Motor to wheelbox ..	1953-54	*739832
High note (optional) ..	1953-54	*69012F				" " " " " "	1955	745029
" " " " " "	1955-60	69047A/F				" " " " " "	1956-60	745138
Horn relay (when twins						Wheelbox to wheelbox	1953-54	*739982
fitted) ..	1955-60	*33116B				" " " " " "	1955	740814
LAMPS						" " " " " "	1956-60	745139
Head, Home			SWITCHES			End tube ..	1953-54	740031
R.H.D., dip left	1953	50941A	Dipper ..	1953-60	31284A	" " " " " "	1955-60	740746
" " " " " "	1953-55	51336A	Heater ..	1953-54	*78245A	Ferrule, casing retaining	1955-60	740715
" " " " " "	1956-60	51736B	Knob ..	—	*768548	Grommet, wheelbox ..	1953	735349
Head, Export			Ignition ..	1953-60	31187D	Arm, left hand drive ..	1953-54	*737576
L.H.D., dip right	1953	50973A	Knob, choke control ..	1955	326624	" " " " " "	1955-60	745074
" " " " " "	1953-54	*51337A	Lighting ..	1953-55	*31200A	" right hand drive ..	1953-54	*737524
" " " " " "	1955-56	*51737B	" " " " " "	1956	31126B	" " " " " " Later	1955-60	745073
Head, Export Europe			" " " " " "	1957-60	31200E	Blade ..	1953-60	738724
(not France) ..	1953	50967A	Knob ..	1953-58	316128			
ditto ..	1953-55	51339A	Solenoid, starting motor	1959-60	54330753			
ditto ..	1956-59	51738B/D		1955-60	*76411E			
(except France & Sweden)								
Later	1959-60	58270A						

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



COMMER 'Cob' Light Van 1957-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1957-58	GLTW7A	LAMPS—continued			SWITCHES—continued		
" (cold climates) ..	1959-60	BT7A	Head, Export France ..	1957	51739B	Stop lamp	1957	31281B
Coil, ignition	1959-60	BT9A	" " " " Later	1958-59	51990D/E	Spring	—	31577A
Control box	1957-60	*45053	Head, Export Sweden ..	1959-60	58656A	Stop lamp	1958-60	31082E/H
" " " " Later		H/M	Head, Export U.S.A. ..	1957	51741B	Cap	—	31607Z
" " " " " "			" " " " " "	1958-60	51991D/E	Windshield wiper ..	1957	31192D
Distributor	1957	37182H	Number plate illumination	1957-60	53278B	Knob	—	317453
" (high compression)	1958-59	37182J	Side and flasher	1957	52240B	Warning light (main beam)		
" " " " " "	1960	37182K	" " " " " "	1957-58	*52372A/B	(U.S.A.)	1959-60	38118A
" " " " " "	1958-59	*40050J	Stop tail and flasher ..	1959-60	52403B	Windshield wipers		
" " " " " "	1960	*40562A	Stop tail, flasher and reflex	1957	53178F	Motor	1957-58	75296A/B
" " " " " "	1960	40530A/D	ditto (N. America) ..	1958-60	53640A/D	" " " " " "	1959-60	75296E
" " " " " "	1958	40492A	ditto " " " " " "	1958-59	53754A	Wheelbox	1957-58	72663F
" " " " " "	1959-60	40492B	Reflex reflector	1960	53752F	" " " " " "	1959-60	72673A
" " " " " "	1960	40492D/E	Relay, horn (when twins	1957	57095A/D	Crosshead and rack assy.		
Flasher unit	1957-60	35011A	fitted)	1957-60	*33116B	Cut to 43 1/2"	1957-60	743235
Fuse box	1957	033239	Starting motor	1957-60	25022A/L	Outer casing		
" " " " " "	1958-60	033277	" " " " " "	1960	25022M	Motor to wheelbox ..	1957	745138
Generator	1957-60	22258E/F	" " " " " "		25022N/Q	Wheelbox to wheelbox	1958-60	743517
Horn			Steering column control ..	1957	32940D	" " " " " "	1957	743139
Low note	1957-60	69046E/F	" " " " " "	1958-60	33508B	End tube " " " "	1958-60	743706
High note (optional) ..	1957-60	69047E/F	SWITCHES " " " "			" " " " " "	1957-60	740746
LAMPS			Dipper	1957-60	31284A/D	Arm, left hand drive ..	1957	745074
Head, home			Flasher	1957	31533A	" " " " " "	1958-59	741845
R.H.D., dip left ..	1957	51736B/D	" " " " " "	1958-60	31737A/B	" " " " " "	1960	54711558
" " " " " "	1958-60	51971E/H	" " " " " "	1958-60	31738A	" " right hand drive ..	1957	745073
Head, Export Europe			Housing		348539	" " " " " "	1958-59	741844
(not France)	1957	51738B	Ignition and lighting ..	1957-60	31270B	" " " " " "	1960	54711557
ditto	1958-59	51989D/F	Knob		316285	Blade	1957	738724
(except France & Sweden)			Starting motor	1957-60	76423A	" " " " " "	1958-60	737897
Later	1959-60	58365A	Coupling	1957	764428			
			" " " " " "	1958-60	764466			

COMMER 'Cob' Series II 1960

Battery	1960	BT7A	LAMPS—continued			SWITCHES—continued		
" (cold climates) ..	1960	BT9A	Head, Export Europe			Starting motor	1960	76423A
Coil, ignition	1960	45102E	(except France & Sweden)	1960	58359A	Coupling	—	764466
Control box	1960	37290D/E	Head, Export France ..	1960	58360A	Stop lamp	1960	31802D
Distributor			Head, Export Sweden ..	1960	58657A/B	Warning light (main beam)		
High compression ..	1960	40681A	Head, Export U.S.A. ..	1960	51779A/H	(U.S.A.)	1960	38118A
" " " " " "	1960	40641B	Number plate illumination	1960	53278B	Windshield wipers		
Low compression ..	1960	40682A	Side and flasher	1960	52403D	Motor, left hand drive	1960	75389A
" " " " " "	1960	40682B	Stop tail, flasher and reflex	1960	*53648F	" " right hand drive	1960	75388A
Flasher unit	1960	35011A	ditto (U.S.A.)	1960	53753F	Wheelbox	1960	72734A
Fuse box	1960	033287	Starting motor	1960	25022Q	Crosshead and rack assy.		
Generator	1960	22700D	" " " " " "		33508B	Cut to 44 1/2"	1960	744256
" (temporary			Steering column control ..	1960		Outer casing		
alternative)	1960	*22704A	SWITCHES			Motor to wheelbox ..	1960	54711609
Horn	1960	69092D	Dipper	1960	31800A	Wheelbox to wheelbox	1960	743706
LAMPS			Cap, rubber	—	54331425	End tube	1960	740746
Head, Home			Flasher	1960	31737B	Arm, left hand drive ..	1960	54711535
R.H.D., dip left ..	1960	51777A/K	Ignition and lighting ..	1960	31270F	" " right hand drive ..	1960	54711534
			Knob	—	316285	Blade	1960	54711282

COMMER 15/25 cwt. 1946-48

Battery	1946-48	SG11A	LAMPS			SWITCHES—continued		
Coil, ignition	1946-48	*45020A/B	Head			Panel	1946-48	*314129
Control box	1946-48	*37032A/B	Left hand	1946-48	*50204A	Solenoid, starting motor	1946-48	76428A
Distributor	1946-48	*409624	Right hand	1946-48	*50205A	Stop lamp	1946-48	31281B
Fuse box	1946-48	*385175	Side	1946-48	*52074A	Spring	—	315543
Generator	1946-48	*22446A	Stop tail and number plate	1946-48	*53063B	Warning light	1946-48	*318505
Horn	1946-48	069344	Starting motor	1946-48	*255378	Windshield wipers		
			SWITCHES			Motor	1946-48	75129A
			Horn and dipper	1946-48	*380148	Arm	1946-48	*735096
			Ignition and lighting ..	1946-48	*34014B	Blade	1946-48	727802

COMMER 25 cwt. Lyons Van 1949-50

Battery	1949-50	SG11A	LAMPS			SWITCHES		
Coil, ignition	1949-50	*45020A/B	Head, Home			Horn and dipper	1949-50	*31061B
Control box	1949-50	37065E	Left hand	1949-50	*50583A	Ignition and lighting ..	1949-50	*34020B
Distributor	1949-50	409930A	Right hand	1949-50	*50584A	Starting motor	1949-50	76427B
Fuse box	1949-50	*385211	Side	1949-50	*52097A	Warning light	1949-50	*38015B
Generator	1949-50	*22446A	Tail and number plate ..	1949-50	*53007B			
" " " " " "	1950	*22435A/B	Starting motor	1949-50	*255378			
Horn	1949-50	069344						

* See Supersession Chart

R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

COMMER

COMMER 3/4 ton Forward Control Van and Passenger Chassis (Petrol & Diesel) 1960

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter (optional) ..	1960	36254A	LAMPS—continued			SWITCHES—continued		
Battery (Petrol) ..	1960	BT7A	Head, Export Europe			Starter and heater		
" (Petrol, Export) ..	1960	BTZ9A	(not France) ..	1960	58270A	(Diesel) ..	1960	31829A
" (Diesel) ..	1960	STXK13A	Head, Export France ..	1960	58271A	Escutcheon plate ..	—	54332117
Coil, ignition ..	1960	45102E	Head, Export U.S.A. ..	1960	58493A	Starting motor (Petrol) ..	1960	76423A
Control box ..			Number plate illumination	1960	53630A	Coupling ..	—	764466
Petrol ..	1960	37290D/E	Side and flasher ..	1960	52403B	Warning light (main beam)		
Standard Diesel ..	1960	37299A/B	Stop tail, flasher and reflex	1960	53640A/D	(U.S.A.) ..	1960	38190A
Heavy duty Diesel ..	1960	37304A/B	ditto (U.S.A.) ..	1960	53754B	Bulb ..	1960	281
Distributor ..	1960	40682A	Relay, horn (when twins			Windshield wipers		
" .. Later	1960	40682B	fitted) ..	1960	*33116B	Motor ..	1960	75390A
Fuse box ..	1960	033287	Starting motor (Petrol) ..	1960	25022N/Q	(R.H.D., switch cover		
Generator ..			(Diesel) ..	1960	26170A/B	position 90°)		
Petrol and standard			Steering column control ..	1960	33554A	(L.H.D., switch cover		
Diesel ..	1960	22700D	Suppressor ..	1960	78106A	position 270°)		
ditto (temporary						Link set ..	—	54711523
alternative)	1960	*22704A				Arm, left hand drive		
Heavy duty Diesel ..	1960	22489B	SWITCHES			Bright finish ..	1960	54711532
Horn ..			Dipper ..	1960	31800A	Silver grey finish Later	1960	54712028
Low note ..	1960	69092D	Cap ..	—	54331425	Arm, right hand drive		
High note (optional) ..	1960	69091D	Flasher ..	1960	*31903B	Bright finish ..	1960	54711533
LAMPS			Housing ..	—	54332184	Silver grey finish Later	1960	54712029
Head, Home			Ignition and lighting			Blade ..		
R.H.D., dip left ..	1960	51736B/D	(Petrol) ..	1960	*31288A/D	Bright finish ..	1960	54711285
			Knob ..	—	316285	Silver grey finish Later	1960	54711284

§ FUEL INJECTION EQUIPMENT (Perkins 4/99 Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump ..	1960	DPA3246175	Filter ..	1960	F4B2
Nozzle holder ..	1960	BKB40S5003N	Thermostart ..	1960	285-2A
Nozzle ..	1960	BDN12SD6236			

COMMER 25 cwt. Forward Control 1946–56

Ammeter ..	1946-50	*369263	LAMPS—continued			SWITCHES—continued		
" ..	1951-54	36047D	Head, Export			Panel ..	1946-50	*31285A
Battery ..	1946-50	SG11A	L.H.D., dip right ..	1952-53	*51250A	" ..	1951-56	31248A
" ..	1951-56	GT11A	" ..	1954	*51337A	Knob ..	1951-52	*316365
Coil, ignition ..	1946-50	*45020A/B	" ..	1955	*51337B	" .. Later	1952-56	316493
" ..	1951-56	*45012A/D	" ..	1956	*51337D/E	Starting motor ..	1946-49	76428A
Control box ..	1946	*37002A				" ..	1950	76404B
" ..	1947	*37032A	Head, Export Europe			" ..	1951-54	76427B
" ..	1948-52	*37065E	(not France) ..	1952-53	*51251A	" ..	1955-56	76423A
" .. Later	1952-54	*37138B	ditto ..	1954-55	51339A	Coupling ..	1955-56	764428
" ..	1955-56	37182A/H	ditto ..	1956	51339B/H	Trafficator (when fitted)	1955-56	31379A
Distributor ..	1946-50	*40962A	Head, Export France ..	1952-53	*50962	Trafficators (special		
" ..	1951-53	40218A/D	Head, Export U.S.A. ..	1952-53	*51253A	orders) ..	1955	*053830
" .. Later	1953	40070A/E	Number plate illumination	1955-56	53343A	ditto .. Later	1955-56	54050A
" ..	1954-56	*40376A/B	Side ..	1946	52036A	Warning light ..	1946	318159E
(from Engine No.			" ..	1947-48	*52003A	" ..	1947-50	*38015B
55P7950) ..	1956	40511A/B	" ..	1949-51	52154A	" ..	1951-55	38059A
Fuse box ..	1946-52	*385175	" ..	1952-54	*52110A	Windshield wipers		
" ..	1952-56	03324D	" ..	1955-56	52139B/F	Motor ..	1946-50	*733068
" .. Later	1946-48	22445D	Stop tail and number plate	1949-54	*53063B	" ..	1951-53	*75027A
Generator ..	1949-50	*22446A	Stop tail ..	1955-56	53178E/F	" ..	1954-56	75144A
" ..	1951-52	*22250E/F	Tail and number plate ..	1946-48	*53007B	Wheelbox ..	1954-56	72655A
" .. Later	1952-56	22258D	Reflex reflector ..	1955-56	57073B	Crosshead and rack assy.		
Horn ..	1946-56	*069213	Starting motor ..	1946-50	*255378	Cut to 43 1/2" ..	1954-56	736307
Inspection lamp sockets ..	1951-54	39507A	Suppressor ..	1951-56	25521B/D	Outer casing ..		
LAMPS				1955-56	78106A	Motor to wheelbox ..	1954-56	739844
Head, Home			SWITCHES			Wheelbox to wheelbox	1954-56	739972
Non-dip ..	1946	50129A	Horn and dipper ..	1946-50	*380168/S	End tube ..	1954-56	740031
Vertical dip ..	1947-51	*50285A	" ..	1951-56	*31325A	Arm ..	1946-52	*735061
Dip left ..	1952-53	*51249A	" ..	1946	334920	" left hand ..	1952-53	*735055
R.H.D., dip left ..	1954-55	51336A	Ignition and lighting ..	1947-50	*34014B	" right hand ..	1954-56	737496
" ..	1956	51336B/J	" ..	1951-56	*31288A	Blade ..	1946-52	727802
Head, Export ..			Knob ..	—	316285	" .. Later	1952-53	727801
R.H.D., dip left ..	1952-53	*51249A				" ..	1954-56	727803
" ..	1954-55	51336A						
" ..	1956	51336B/J						

COMMER 1 1/4/1 1/2 ton Forward Control Mk. V 1956–60: 1 ton Forward Control 1959–60

Battery (Petrol) ..	1956-59	GT11A	Horn ..	1956-57	*069213	LAMPS—continued		
" (Diesel) ..	1960	BT11A	Low note ..	1957-60	69046E/F	Head, Export Europe		
Coil, ignition ..	1956-60	STXT19E	High note (optional) ..	1959-60	69047F	(not France) ..	1956-59	51339B/H
Control box ..	1956-59	*45054D/L	Horn relay (when twins			ditto .. Later	1959-60	58230A/E
" .. Later	1959-60	37182J	fitted) ..	1959-60	*33116B	Head, Export France ..	1960	58231A/E
" ..	1960	37182K	LAMPS			Number plate illumination	1956-60	53343A
Distributor ..	1956	*40430A	Head, Home			Side ..	1956-60	52139F
" .. Later	1956-59	40491A/B	R.H.D., dip left ..	1956-60	51336B/J	Stop tail ..	1956-60	53178F/H
" ..	1960	40667A/B	Head, Export			Reflex reflector ..	1956-60	57073B
Fuse box ..	1957-60	033239	R.H.D., dip left ..	1956-60	51336B/J	Starting motor (Petrol) ..	1956-60	25521D
" .. (Diesel starting			L.H.D., dip right ..	1956-59	*51337D/E	" (Diesel) ..	1957	26133A/B
aid, serviced by C.A.V.)	1957-60	1800020	" ..	1959	*51337F/K	" ..	1958-60	26133D/E
Generator ..	1956	22258D				Steering column control ..	1956-60	32937A/B
" ..	1957-60	22258E/F				Suppressor ..	1956-60	78106A

* See Supersession Chart

§ Serviced by C.A.V. Ltd.

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

COMMER

COMMER 1¼/1½ ton Forward Control Mk. V 1956-60: 1 ton Forward Control 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers		
Dipper	1956-60	31284A/D	Starting motor (Petrol)	1956-60	76423A	Motor	1956-60	75144A
Ignition and lighting ..	1956-60	*31288A	Coupling	1956-58	764428	Wheelbox	1956-60	72655A
Knob	—	316285	Trafficator	1959-60	764466	Crosshead and rack assy.	1956-60	736307
Panel	1956-58	31248B		1956	31564A	Cut to 43 ½"	1956-60	739844
.. .. .	1959-60	*31515A		1957-60	31379A	Outer casing	1956-60	739972
.. .. . Later	1960	31869A		1956-60	31248B	Motor to wheelbox ..	1956-60	740031
Knob	1956-60	*316365	Windshield wiper ..	1960	34266A	Wheelbox to wheelbox	1956-60	738410
.. .. . Later	1960	316493		1956-60	312954	End tube	1956-60	737496
Solenoid operating			Knob	1959-60	37101B	Ferrule, casing retaining	1956-60	737495
(Diesel, serviced by			Terminal block	1956	54050A	Arm, left hand	1956-60	737495
C.A.V.)	1957-60	1823410	Trafficators	1957-60	54045E	.. right hand	1956-60	727803
Starter/heater (Diesel,			Warning light (ignition) ..	1956-60	*38065A	Blade	1956-60	
serviced by C.A.V.) ..	1957-60	1823420						
§ FUEL INJECTION EQUIPMENT								
(Standard 23CV Engine)								
Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1956-57	DPA3246020	Nozzle	1956-60	BDN4SP6188			
" " Later	1957-58	DPA3246070-1-2-3	Filter	1956-59	F4-1			
Control box	1959-60	DPA3246103		1960	F4B-3			
Nozzle holder	1956-60	BKB40S697	Thermostart	1956-60	285-2A			

COMMER 25 cwt. 'Superpoise' Van 1949-56: Medium Pick-up Truck Mk. IV 1951-54

Battery	1949-50	SG11A	LAMPS—continued			Reflex reflector	1955-56	32886A/D
" "	1951-56	GT11A	Head, Export			Starting motor	1949-50	*255378
Coil, ignition	1949-56	*45012A/D	R.H.D., dip left ..	1950-51	*50445K		1951-56	25521B/D
Control box	1949-52	37065E	R.H.D., dip left			Steering column control		
" " Later	1952-54	*37138B	(L.H. and R.H.) ..	1951	*50954A	(Pick-up Truck) ..	1951-54	32886A/D
Distributor	1955-56	37182A/H	" " " "	1952-53	50941A	Suppressor	1955-56	78106A
" "	1949-50	*409624	" " " "	1954-55	51336A	SWITCHES		
" " Later	1951-53	40218A/D	" " " "	1956	51336B/J	Horn and dipper ..	1949-50	*380148
" "	1953	40070A/E	L.H.D., dip right ..	1950-51	*A50445K	" " " "	1951-56	*31325A
" "	1954-56	*40376A/B	" " " "	1951-53	*50804D	Ignition and lighting	1949-50	*34014B
(from Engine No.			" " " "	1954-56	*51337A	" " " "	1951-56	*31288A
SSP7950)	1956	40511A/B	" " " "	1955	*51337B	Knob	1951-56	*316285
Fuse box	1949-52	*385175	" " " "	1956	*51337D/E	Panel	1949-50	*31285A
" " Later	1952-56	033240	Head, Export Europe			Knob	1951-56	*31248A
Generator	1949-50	*22446A	(not France)	1950	*B50445K	Starting motor	1949	*316365
" "	1950	*22435A/B	ditto	1951-53	*50963A	" " " "	1950	76428A
" "	1951-52	*22250E/F	ditto	1954-55	51339A	" " " "	1950	76404B
" " Later	1952-56	22258D	ditto	1956	51339B/H	" " " "	1951-56	76423A
Horn	1949-56	*069213	Head, Export France ..	1951-53	*50962A	Coupling	1951-56	764428
LAMPS			" " " "	1954	*51341A	Stop lamp	1949-50	31281B
Head, Home			Head, Export U.S.A.			Trafficator (when fitted)	1955-56	31379A
R.H.D., dip left (L.H.)	1949	*50583A	(Pick-up Truck) ..	1951-52	*50804D	Trafficators (special		
" non-dip (R.H.)	1949	*50584A	" " " "	1953-54	51343A	orders)	1955	*053830
" dip left (L.H.)	1950	*50878A	Number plate illumination	1955-56	53343A	ditto Later	1955-56	54050A
" non-dip (R.H.)	1950	*50880A	ditto (Pick-up Truck)	1951-54	53101E	Warning light (ignition) ..	1949-50	*38015B
" dip left (L.H.)	1951	*50445K	Side	1949	52108A	ditto (except Pick-up		
" non-dip (R.H.)	1951	*50446K	" " " "	1950	52154A	Truck)	1951-56	38059A
R.H.D., dip left			" " " "	1951-56	52139B/F	Windshield wipers		
(L.H. and R.H.) ..	1951	*50954A	Stop tail and number plate			Motor	1949-56	75129A
" " " "	1952-53	50941A	(except Pick-up Truck)	1950-54	*53063B	Arm	1949-56	735065
" " " "	1954-55	51336A	Stop tail	1955-56	53178E/F	Blade	1949-56	727802
" " " "	1956	51336B/J	" " (Pick-up Truck)	1951-54	*53151B/D			

COMMER ¾/1½ ton 'Superpoise' Van and Medium Pick-up Truck Mk. V 1956-60

Battery (Petrol)	1956-57	GT11A	LAMPS—continued			SWITCHES—continued		
" " Later	1957-59	GT9A	Head, Export			Flasher (when fitted) ..	1956-60	31564A/D
" " (Diesel)	1960	BT9A	R.H.D., dip left ..	1956-60	51336B/J	Ignition and lighting ..	1956-60	*31288A
Coil, ignition	1956-57	STXT19E	L.H.D., dip right ..	1956-59	*51337D/E	Knob	—	316285
" "	1958	*45054D/H	 Later	1959-60	*51337F/K	Solenoid operating		
" "	1959-60	*45053J	Head, Export Europe			(Diesel, serviced by		
Control box	1956-59	*45054K/L	(not France)	1956-59	51339B/H	C.A.V.)	1957-60	1823410
" "	1956-59	37182A/H	ditto	1959-60	58230A/E	Starter/Heater (Diesel,		
" " Later	1959-60	37182J	Head, Export France ..	1960	58231A/E	serviced by C.A.V.) ..	1957-60	1823420
Distributor	1956	*40430A	Number plate illumination	1956-60	53343A	Starting motor (Petrol)	1956-60	76423A
" "	1956 59	40491A/B	Side	1956-60	52250B	Coupling	1956-58	764428
" "	1959-60	40667A/B	Side and flasher (optional)			Stop lamp	1956-60	31802B
Flasher unit (when fitted)	1956-57	*35003A	alternative)	1956-59	*52162E/F	Windshield wiper ..	1956-60	31248B
" "	1958-60	35010A	ditto	1960	52240B	" " " "	1960	34266A
Fuse box	1956	033240	Rear flasher (optional) ..	1956-60	*52282A/B	Knob	1956-60	312954
" "	1957-60	033239	Stop tail	1956-60	53178E/J	Windshield wipers		
" " (Diesel starting			Reflex reflector	1956-60	57073B	Motor	1956-60	75289A
aid, serviced by C.A.V.)	1957-60	1800020	 (Dutch Van)	1958-60	65424A	" " " "	1960	75398A
Generator	1956	22258D	Relay, horn (when twins			Wheelbox	1956-60	72660A
" "	1957-60	22258E/F	fitted)	1957-60	*33116B	Crosshead and rack assy.	1956-60	743722
Horn	1956	*069213	Starting motor (Petrol) ..	1956-60	25521D	Outer casing		
Low note	1956-60	69046A/E	" " (Diesel)	1957	26133A/B	Motor to wheelbox		
High note (optional) ..	1957-60	69047E/F	" " " "	1958-60	26133D/E	Left hand	1956-60	743708
LAMPS			Steering column control ..	1956-60	32937A/B	Right hand	1956-60	743709
Head, Home			Suppressor (when fitted)	1956-60	78106A	End tube	1956-60	740746
R.H.D., dip left ..	1956-60	51336B/J	SWITCHES			Arm, left hand	1956-60	745081
			Dipper	1956-60	31284A/D	" right hand	1956-60	745080
						Blade	1956-60	741680



Equipment Specification

COMMER

COMMER 3/4 1/2 ton 'Superpoise' Van and Medium Pick-up Truck Mk. V 1956-60—continued

§ FUEL INJECTION EQUIPMENT (Standard 23CV Engine)					
Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1956-57	DPA3246020	Nozzle	1956-60	BDN4SP6188
" " Later	1957-58	DPA3246070-1-2-3	Filter	1956-59	F4-1
" "	1959-60	DPA3246103	" "	1960	F4B-3
Nozzle holder	1956-60	BKB40S697	Thermostart	1956-60	285-2A

COMMER 2 and 3 ton 1946-47

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1946-47	SG11A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1946-47	*45039A	Head, Export			Panel	1946-47	*314129
Control box	1946-47	*37032A/B	L.H. and R.H.	1947	*50585A	Starting motor	1946-47	76428A
Distributor	1946-47	*410700	Side	1946-47	*520940	Stop lamp	1946-47	31281B
Fuse box	1946-47	*385175	Stop tail and number plate	1946-47	*523595	Spring	—	315543
Generator	1946-47	*22446A/B	Starting motor	1946-47	*270490	Warning light	1946-47	*318505
Horn	1946-47	069344						
LAMPS						Windshield wipers		
Head, Home			SWITCHES			Motor	1946-47	75129A
R.H.D., dip left (L.H.)	1946	*50204A	Horn and dipper	1946	*380148	Arm	1946-47	*735096
" non-dip (R.H.)	1946	*50205A	Ignition and lighting	1947	*380234	Blade	1946-47	727802
" dip left (L.H.)	1947	*50583A						
" non-dip (R.H.)	1947	*50584A						

COMMER 2/3 and 3/4 ton 1949-54: 4/5 ton 1949-51: 5 ton 'Superpoise' 1952-54: 'Commando' (Petrol) 1950-53

Battery	1949-50	SG11A	LAMPS			LAMPS—continued		
" "	1951-54	GT11A	Head, Home			Head, Export U.S.A.	1949-52	*50804D
Coil, ignition	1949-54	*45012A/D	R.H.D., dip left (L.H.)	1949	*50445K	" "	1953-54	51343A
Control box	1949-50	37065E	" non-dip (R.H.)	1949	*50446K	Side	1949-50	52108A
" " Later	1950-52	*37076E	" dip left (L.H.)	1950	*50878A	" "	1951-54	52139B
" " ('Commando'), serviced by C.A.V.)	1952-54	*37139D	" non-dip (R.H.)	1950	*50880A	Stop tail and number plate	1949-54	*53063B
" "	1950-53	1685010	" dip left (L.H.)	1951	*50445K	Starting motor	1949	26026A/B
Distributor	1949-50	*410700B	" non-dip (R.H.)	1951	*50446K	" " Later	1949	*26035A
" "	1951	40135E/H	R.H.D., dip left (L.H. and R.H.)	1952-53	*50954A	" "	1950-53	26041A/B
" "	1952	40210A/B	" " Later	1953-54	51336A	" "	1953-54	26094A
" " Later	1952-53	*40311D	Head, Export			SWITCHES		
" "	1953	40360A/B	R.H.D., dip left	1949	*50445K	Horn and dipper	1949-50	*380168
" "	1953-54	40360D	" dip left (L.H.)	1950	*50878A	" "	1951-54	*31325A
Fuse box	1948-52	*385175	" "	1951	*50445K	Ignition and lighting	1949-51	*34014B
" (Tractor)	1948-52	*37130A	R.H.D., dip left (L.H. and R.H.)	1952-53	*50954A	" "	1952-54	*31288A
" ('Commando')	1950-52	*37137A	" " Later	1953-54	51336A	Knob	—	316285
" " Later	1952-54	033239	L.H.D., dip right	1949	*A50445K	Panel	1952-53	31248A
Generator	1949-50	*22446A/B	" "	1950	*A50878A	Knob	—	*316365
" " Later	1950-52	*22435A/B	" "	1951	*A50445K	Starting motor	1949	76428A
" " ('Commando'), serviced by C.A.V.)	1952-54	*22456A/D	" "	1952-53	*50804D	" "	1950	76404B
" "	1950-53	D5LFA10	" " Later	1953-54	*51337A	" "	1951-54	76423A
Horn	1949-53	*069213	Head, Export Europe (not France)	1949	*B50445K	Coupling	—	764428
Junction box	1952-54	78265A	ditto	1950	*B50878A	Warning light	1949-51	*38015B
			ditto	1951	*B50445K	" "	1952-54	38059A
			ditto Later	1951-53	*50963A	Windshield wipers		
			ditto	1953-54	51339A	Motor	1949-54	75129A
			Head, Export France	1951-53	*50962A	Arm	1949-54	735065
			" " Later	1953-54	*51341A	Blade	1949-54	727802

§ FUEL INJECTION EQUIPMENT (Perkins P6 Engine 1949-54)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1949-52	BPE6A60Q310S6237	Feed pump—continued	1953-54	BFPK22P68
" "	1953-54	BPE6A60S310S6321	Primer	1949-54	BFPUE2-54Z
Governor	1949-54	BEPMZ80A99	Pre-filter	1949-54	BFJSJ1-501
Coupling	1949-54	BZKC31-538	Nozzle holder	1949-54	BKB35S87
Venturi	1949-54	BEPK50-50-77	Nozzle	1949-54	BDL110S6133
Feed pump	1949-52	BFPK22N1	Filter	1949-54	BFA5P1
" " Later	1952	BFPK22N68			

COMMER 2/5 ton 'Superpoise' (Petrol) 1955-60: 3/5 ton 'Superpoise' (Diesel) 1955-60: 6 ton 'Superpoise' (Petrol and Diesel) 1959-60

Battery (Petrol)	1955-59	GT11A	Control box (Diesel)	1959-60	37183H	Generator	1955-56	*22483A
" (Diesel)	1960	BT11A	" " Later	1960	37183K	" "	1957-58	*22483D
Coil, ignition	1955-60	STXT19E	Distributor	1955-60	37183L	" (Petrol)	1959-60	22258E/H
" "	1955-56	*45012B	Flasher unit (when fitted)	1957	40360D/E	" (Diesel)	1959	*22483D
Control box	1957-60	*45054H/L	" "	1958-60	*35003A	" "	1960	22489B/D
" "	1955	*37139E	Fuse box	1955-60	35010A	Horn	1955-56	*069213
" " Later	1955-58	37183A/H	" (Diesel heater, serviced by C.A.V.)	1957-60	1800020	Low note	1957-60	69046E/F
" " (Petrol)	1959-60	37182H				High note (optional)	1957-60	69047E/F
" " Later	1960	37182J				LAMPS		
		37182K				Flasher, front and rear (optional)	1957-60	52314A

* See Supersession Chart
R.H.D. .. Right hand drive

§ Serviced by C.A.V. Ltd.

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

COMMER

COMMER 2/5 ton 'Superpoise (Petrol) 1955-60: 3/5 ton 'Superpoise' (Diesel) 1955-60: 6 ton 'Superpoise' (Petrol and Diesel) 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			Relay, horn (when twins fitted)	1957-60	*33116B	SWITCHES—continued		
Head, Home			Starting motor (Petrol) ..	1955-60	26094A	Starting motor (Petrol)	1955-60	76423A
R.H.D., dip left ..	1955	51336A	(Diesel, serviced by C.A.V.) ..	1955-57	1330930-1	Coupling	1955-58	764428
Head, Export			ditto	1958	1330670	Windshield wiper ..	1959-60	764466
R.H.D., dip left ..	1955	51336A	ditto	1959-60	1320171	Knob	1956-60	31248A
L.H.D., dip right ..	1955	*51337B	Steering column control ..	1956-60	32937A/B	Windshield wiper Later	1960	312954
" " " " Later	1956-59	*51337D/E				Knob	—	34266A
Head, Export Europe	1959-60	*51337F/K				Warning light (ignition) ..	1955	312954
(not France)	1955	51339A	SWITCHES			Windshield wipers		
ditto	1956-59	51339B/H	Dipper	1956-60	31284A/D	Motor	1955	75129A
ditto Later	1959-60	58230A/E	Flasher (when fitted) ..	1956-60	31564A/D	"	1956-60	75289A
Head, Export France ..	1956-58	*51341B/E	Heater (Diesel, serviced by C.A.V.) ..	1957-60	1823420	" Later	1960	75398A
" " " " " ..	1959	51342B/D	Horn push and dipper ..	1955	*31325A	Wheelbox	1956-60	72660A
" " " " " ..	1960	58231D/E	Lighting and ignition or main	1955-60	*31288A	Crosshead and rack assy.	1956-60	743722
Head, Export U.S.A. ..	1955-60	51343B/E	Knob	—	316285	Outer casing		
ditto (indirect) ..	1960	51509A/H	Panel (when fitted) ..	1955	31248A	Motor to wheelbox		
Number plate illumination	1955-60	53343A	Knob	—	*316365	Left hand	1956-60	743708
Side	1955	52139B	Solenoid operating (Diesel, serviced by C.A.V.) ..	1955-60	1823410	Right hand	1956-60	743709
Stop tail	1955-60	53178E/J				End tube	1956-60	740746
Reflex reflector ..	1955-60	57073B				Arm	1955	735065
						" left hand	1956-60	745081
						" right hand	1956-60	745080
						Blade	1955	727802
						"	1956-60	741680

§ FUEL INJECTION EQUIPMENT

(Perkins P6 Engine 1955-60)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1955-57	BPE6A60S310S6321	Primer	1955-57	BFPUE2-54Z
" " " " Later	1957-58	BPE6A60S310S6381	" " " " Later	1957-60	HP1-1
Governor	1958-60	BPE6A60U310S6381	Pre-filter	1955-60	BFJSJ1-501
" " " " " ..	1955-56	BEPAMZ80A99	Nozzle holder ..	1955-60	BKB32S630
" " " " " ..	1956-57	BEPAMZ80A99	Nozzle	1955-60	BDL110S6133
" " " " " ..	1957-58	BEPAMZ80A133	Venturi	1955	BEPK50-50-101
" " " " " ..	1959-60	BEPBMZ80A133	"	1956-60	BEPK50-50-107
Coupling	1955-60	BZKG31-538	"	1955-59	F2-8
Feed pump	1955-56	BFPK22P68	Filter	1960	F2B-22
" " " " " ..	1956-60	BFPK22P70	"		

(Perkins C305 Engine 1959-60)

 
Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1959	DPA3264003	Filter	1959	F4-3
" " " " " ..	1960	DPA3264035	"	1960	F4B-5
Nozzle holder	1959-60	BKB32S630	Thermostart ..	1959	285-2A
Nozzle	1959-60	BDL110S6267	"	1960	357-2

COMMER 3 ton Four Wheel Drive Cross-country Vehicle 1956

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1956	GT11A	LAMPS			SWITCHES—continued		
Coil, ignition	1956	*45012B	Head, vertical dip	1956	056991	Ignition and lighting ..	1956	31270A
Control box	1956	*37166D	Number plate illumination	1956	53189A	Knob, ignition	—	316434
Distributor	1956	*40364D	Side	1956	52186A	" lighting	—	316285
Fuse box	1956	033239	Tail	1956	*53250E	Panel	1956	31248B
Generator	1956	*22470H/L	Starting motor	1956	26094A	Knob	—	*316365
Horn	1956	069344	Suppressor	1956	78106A	Starting motor	1956	76423A
Inspection lamp sockets ..	1956	39507A				Coupling	—	764428
Junction box	1956	78265B	SWITCHES			Windshield wipers		
			Convoy light	1956	*31276A	Motor	1956	75107A
			Horn push and dipper ..	1956	*31325A	Arm	1956	735065
						Blade	1956	727802

COMMER 3 and 4 ton Trucks, Pantechinon, Tipper and 'Commando' (Petrol) 1947-49

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1947-49	SG11A	LAMPS			Starting motor	1947-49	*270490
Coil, ignition	1947-49	*45039A	Head, Home			SWITCHES		
Control box	1947-49	*37032A/B	R.H.D., dip left (L.H.)	1947-49	*50583A	Horn push and dipper ..	1947-49	*380234
" " " " " ..	1947-48	1685030	" non-dip (R.H.)	1947-49	*50584A	Ignition and lighting ..	1947-49	*34014B
Distributor	1947-49	*410700A	" dip left (L.H., 'Commando')	1947-49	*50481A	Panel	1947-49	*314129
Fuse box	1947-49	*385175	R.H.D., non-dip (R.H., 'Commando')	1947-49	*50482A	Starting motor	1947-49	76428A
" " " " " ..	1947-49	*385221	Head, Export			Stop lamp	1947-49	31281B
Generator	1947-49	*22446A/B	L.H. and R.H. ('Commando') ..	1947-49	*50483A	Spring	—	315543
" " " " " ..	1947-49	DSLFA10	(Pantechinon)	1947-49	*50585A	Warning light	1947-49	*38015B
Horn	1947-49	069344	Side	1947-49	*52060A	Windshield wipers		
Junction box (Pantechinon and 'Commando')	1947-49	78265A	Stop tail and number plate	1947-49	*53028B	Motor	1947-49	75129A
			ditto (Tipper)	1947-49	*53063B	Arm	1947-49	*735096
			Tail and number plate (Tractor) ..	1947-49	*53007B	Blade	1947-49	727802



A

continued

A59



Equipment Specification

COMMER

COMMER 4, 5 and 6 ton Forward Control (Petrol and Perkins C305 Diesel) 1959-60—continued

§ FUEL INJECTION EQUIPMENT					
Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1959	DPA3264003	Filter	1959	F4-3
"	1960	DPA3264035	"	1960	F4B-5
Nozzle holder	1959-60	BKB32S630	Thermostart	1959	285-2A
Nozzle	1959-60	BDL110S6267	"	1960	357-2

COMMER 5 ton 1947

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1947	SG11A	LAMPS, Head, Home— <i>continued</i>			LAMPS— <i>continued</i>		
Coil, ignition	1947	*45039A	Chassis 16A5051-16A5075			Side	1947	52053A
Control box	1947	*37032A/B	Left hand	1947	*50344A	Stop tail and number plate	1947	*53063B
Distributor	1947	*410700	Right hand	1947	*50345A	Starting motor	1947	*270490
Fuse box	1947	*385175	Chassis 16A5076onwards			SWITCHES		
Generator	1947	*22446A	Left hand	1947	*50478A	Horn push and dipper ..	1947	*38023A
Horn	1947	069344	Right hand	1947	*50584A	Ignition and lighting ..	1947	*34014B
LAMPS			Head, Export			Panel	1947	*31285A
Head, Home			L.H. and R.H.			Starting motor	1947	76428A
Chassis 16A5000—			Chassis 16A5000—			Stop lamp	1947	31281B
16A5050			16A5050	1947	*50245A	Warning light	1947	*38015B
Left hand	1947	*50204A	Chassis 16A5051—			Windshield wipers		
Right hand	1947	*50205A	16A5075	1947	*50284A	Motor	1947	75129A
			Chassis 16A5076onwards	1947	*50245A	Arm	1947	*73509E
						Blade	1947	727802

COMMER 5 ton 'Superpoise' 1954-60: 6 ton 'Superpoise' 1959-60 (Diesel, 24 volt)

Battery	1954-60	MT15E-6	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Control box (serviced by C.A.V.)	1954-60	1688010	Head, Export Europe (not France)	1954	51492A	Panel light	1955	31248A
Flasher unit (when fitted)	1954-60	35018A	ditto	1955	51492B	Knob	—	*316365
Fuse box	1957-60	033239	ditto	1956-60	51492D/H	Solenoid operating (serviced by C.A.V.) ..	1955-60	1823410
" (Diesel heater, serviced by C.A.V.) ..	1957-60	1800020	Number plate illumination	1955-60	53346A	Stop lamp	1954-59	31082E/H
Generator (serviced by C.A.V.)	1954-60	1131090	Side	1954-55	†53210A/D	"	1960	31802B
Horn	1954-58	069405	"	1956-60	52251B	Windshield wiper	1957-60	31248B
Low note (alternative) ..	1955-56	*69041B	Stop tail and number plate	1954	*53063B	"	1960	34266A
"	1957-60	69055A	Stop tail	1955-60	†53178E/J	Knob	1957-60	31295A
High note (optional) ..	1955-56	*69042B	Reflex reflector	1955-60	57073B	Windshield wipers		
"	1957-60	69056A	Starting motor (serviced by C.A.V.)	1954-58	1332600	Motor	1954-55	75193A
LAMPS			ditto	1959-60	1332601	"	1956-60	75290A
Flasher, front and rear (optional)	1957-60	52315A	Steering column control ..	1956-60	32937A/B	"	1960	75399A
Head, Home and Export			SWITCHES			Wheelbox	1956-60	72660A
Dip left	1954	51477A	Dipper	1955-60	31284A/D	Crosshead and rack assy.	1956-60	743722
"	1955	51477B	Flasher (when fitted) ..	1957-60	31565A	Outer casing		
"	1956-60	51477D/H	Heater, starting (serviced by C.A.V.)	1957-60	1823420	Motor to wheelbox	1956-60	743708
Head, Export			Horn push and dipper ..	1955	*31325A	Left hand	1956-60	743709
L.H.D., dip right	1954	51490A	Lighting and main	1955-60	*31288A	Right hand	1956-60	740746
"	1954	51490B	Knob	—	316285	End tube	1956-60	740746
"	1955	51490D				Arm	1954-55	735065
"	1955-60	51490E/J				" left hand	1956-60	*735081
						" right hand	1956-60	*735080
						Blade	1954-55	727802
						"	1956-60	741680

§ FUEL INJECTION EQUIPMENT (Perkins R6 Engine)					
Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1954-55	BPE6A70R320S6302	Feed pump	1954-56	BFPK22P68
"	1955-57	BPE6A70R320S6360	"	1956-60	BFPK22P70
"	1957-58	BPE6A70R320S6387	Primer	1954-57	BFPUE2-54Z
"	1958-60	BPE6A70T320S6387	"	1957-60	HP1-1
Governor	1954-55	BEPAMN80A122	Pre-filter	1954-60	BFJSJ1-501
"	1955	BEPMZ80A130	Nozzle holder	1954-60	BKB32S630
"	1956	BEPAMZ80A146	Nozzle	1954-60	BDL105S6125
"	1956-58	BEPAMZ80A136	Filter	1954-59	F2-8
"	1958-60	BEPBMZ80A136	"	1959-60	F2B-22
Coupling	1954-57	BZKG31-538			

COMMER 5 and 7 ton 1949: 5 and 7 ton Forward Control 1950-54

Battery	1949-51	SG11A	Horn	1949-53	*069213	LAMPS— <i>continued</i>		
Coil, ignition	1952-54	GT11A	Inspection lamp sockets ..	1949-54	301187	Head, Export Europe (not France) ..	1949-50	*B50445K
"	1949	*45039A	LAMPS			ditto	1951-52	*50963A
Control box	1950-54	*45012A/D	Head, Home			ditto	1953-54	51339A
"	1949-50	37065E	R.H.D., dip left (L.H.)	1949-51	*50445K	Head, Export France	1951-52	*50962A
"	1950-52	*37076E	" non-dip (R.H.)	1949-51	*50446K	"	1953-54	*51341A
"	1952-54	*37139D	R.H.D., dip left (L.H. and R.H.)	1951-52	*50954A	Head, Export U.S.A.	1951-52	*50804D
Distributor	1949	*40116D/E	"	1952	50941A	"	1953-54	51343A
"	1950	*40116F	"	1953-54	51336A	Side	1949-53	52108A
"	1951-52	*40116H	Head, Export			"	1954	52139B
"	1952	*40310A	R.H.D., dip left	1949-51	*50445K	Stop tail and number plate	1949	*53063B
"	1953-54	40359A/B	"	1951-52	50954A	Relay, field exciter	1949-51	33099A
"	1954	40359D/E	"	1952	50941A	Starting motor	1949-51	*26028A
Fuse box	1949-52	*385175	"	1953-54	51336A	" (temporary)	1951	26077A
"	1952-54	033240	L.H.D., dip right	1949-51	*A50445K	"	1952-53	26086A
Generator	1949-50	*22446A	"	1951-52	*50804D	"	1954	26094A
"	1950-52	*22435A/B	"	1953-54	*51337A			
"	1952-54	*22456A/B						



COMMER 5 and 7 ton 1949: 5 and 7 ton Forward Control 1950-54—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers—cont'd		
Horn push and dipper ..	1949-50	*380168	Windshield wiper ..	1952-54	31248A	Outer casing ..		
" " " " ..	1951-54	*31325A	Knob ..	—	*316366	Wheelbox to control box		
Ignition and lighting ..	1949-51	*34037A				Nearside ..	1949-51	739937
" " " " ..	1952	31194A				Offside ..	1949-51	739937
Knob ..	—	*316284	Windshield wipers			Wheelbox to wheelbox	1952	*739965
Oil ..	1949-54	31146A	Motor ..	1949-50	*75053J			
Knob ..	—	*315258	" " " " ..	1951	*75053K			
Panel ..	1949-54	31113A	" " " " ..	1952	*75074J			
Knob ..	—	315112	" " " " ..	1953-54	75144A			
Solenoid, starting motor			Control box ..	1949-51	72591A	4", nearside wheelbox	1949-51	740032
(temporary) ..	1951	76022A	Wheelbox ..	1949-51	72590A/K	3", offside wheelbox ..	1949-51	740031
Solenoid, starting motor	1952-54	*76411D	Crosshead and rack assy.	1949-51	736364	Guide tube ..	1949-51	735895
Solenoid operating ..	1949-54	31115A	Cut to 41 1/2" ..	1952-54	736307	Grommet, wheelbox ..	1949-51	734458
Knob ..	—	*317315	Inner cable rack ..	1949-51	736024	" " " " ..	1952	729423
			Outer casing ..			" " " " ..	1953-54	734458
			Motor to wheelbox ..	1949-51	*739832	Arm ..	1949-51	*735080
			" " " " ..	1952-64	739833	" left hand ..	1952-54	*737629
						" right hand ..	1952-54	*737628
						Blade ..	1949-54	727759

COMMER 5 ton Forward Control 1955-58: 7 ton Forward Control (Petrol and Rootes TS3 Diesel) 1955-60: 10/12 ton Tractor (Rootes TS3 Diesel) 1957-60

Battery (Petrol) ..	1955-59	GT11A	LAMPS—continued			SWITCHES—continued		
" (Diesel) ..	1960	BT11A	Head, Export			Solenoid operating		
Coil, ignition ..	1955-60	STXT19E	L.H.D., dip right ..	1955	*51337B	(Diesel, serviced by		
" " " " ..	1955	*45012B	" " " " ..	1956-59	*51337D/E	C.A.V.) ..	1958	1823410
Control box ..	1956-60	*45054D/L	" " " " Later	1959-60	*51337F/K	(Diesel) ..	1959-60	31810A
" " " " ..	1955	*37139E	Head, Export Europe			Knob ..		*317315
" " " " ..	1955-60	37183A/H	(not France) ..	1955	51339A	Trafficator (when fitted)	1955-60	31379A
" " " " ..	1960	37183K & L	ditto ..	1956-59	51339B/H	Windshield wiper ..	1955-60	31248A/B
" " " " ..			ditto ..	1959-60	58230A/E	Knob ..	1955	*316366
" " " " ..			ditto ..	1960	58231A/E	" " " " ..	1956-60	312954
" " " " ..			ditto ..	1958-60	51343B/E	Trafficator (when fitted)	1955	*053830
" " " " ..			ditto ..	1955-60	53343A	ditto ..	1959-60	54050A
" " " " ..			ditto ..	1955-60	52139B/F			
" " " " ..			ditto ..	1955-60	53178E/J			
" " " " ..			ditto ..	1955-60	57073B			
" " " " ..			ditto ..	1956-60	*33116B	Windshield wipers		
" " " " ..			ditto ..	1955-60	26094A	Motor ..	1955-58	75144A
" " " " ..			ditto ..	1955-60	1340010	" " " " ..	1959-60	75289B/D
" " " " ..			ditto ..	1955-60	1320131	" " " " ..	1960	75398A
" " " " ..			ditto ..	1955-60	32937A/B	" " " " ..	1955-58	72560K
" " " " ..			ditto ..	1956-60	78106A	" " " " ..	1959-60	72660A
" " " " ..			ditto ..			Crosshead and rack assy.		
" " " " ..			ditto ..			Cut to 40 1/2" ..	1955-58	736307
" " " " ..			ditto ..			Crosshead and rack assy.	1959-60	743722
" " " " ..			ditto ..			Outer casing		
" " " " ..			ditto ..			Motor to wheelbox ..	1955-58	739833
" " " " ..			ditto ..			ditto Left hand ..	1959-60	743708
" " " " ..			ditto ..			ditto Right hand ..	1959-60	743709
" " " " ..			ditto ..			Wheelbox to wheelbox	1955	*739979
" " " " ..			ditto ..			" " " " ..	1956-58	739932
" " " " ..			ditto ..			End tube ..	1955-58	740031
" " " " ..			ditto ..			" " " " ..	1959-60	740746
" " " " ..			ditto ..			Arm, left hand ..	1955-56	*737629
" " " " ..			ditto ..			" " " " ..	1957-58	742275
" " " " ..			ditto ..			" " " " ..	1959-60	54711558
" " " " ..			ditto ..			" " " " ..	1955-56	*737628
" " " " ..			ditto ..			" " " " ..	1957-58	*742274
" " " " ..			ditto ..			" " " " ..	1959-60	54711557
" " " " ..			ditto ..			Blade ..	1955-58	727759
" " " " ..			ditto ..			" " " " ..	1959-60	737897
" " " " ..			ditto ..			8-pin plug (Tractor) ..	1957-60	809797
" " " " ..			ditto ..			" " " " ..	1957-60	809798

§ FUEL INJECTION EQUIPMENT (Rootes TS3 Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump ..	1955-59	NL3F80-96	Venturi ..	1955-56	BEPKE85-99V
Governor ..	1960	NL3F80-181	" " " " ..	1957-59	BEPKE85-117
" " " " ..	1955	LP9	" " " " ..	1960	BEPKE85-131
" " " " ..	1956-59	LPB25	Nozzle holder ..	1955-60	BKBL52S656
" " " " ..	1960	LPB34	Nozzle ..	1955-56	BDLL10S6134
Coupling ..	1955-57	FCB3	" " " " ..	1957-60	BDLL10S6213
" " " " ..	1958-60	FCB5	Filter ..	1955-59	F2-13
Feed pump ..	1955-57	DFP3-13	" " " " ..	1960	F2B-13
" " " " ..	1958-60	DFP3-26			

COMMER 6 1/2 and 7 ton 1949-50

Battery ..	1949-50	SG11A	Generator ..	1949-50	*22446A	LAMPS—continued		
Coil, ignition ..	1949-50	*45012A/D	" " " " ..	1950	*22435A/B	Head, Export		
Control box ..	1949-50	37065E	Horn ..	1949-50	069344	R.H.D., dip left ..	1949-50	*50445K
" " " " ..	1950	*37076E	Inspection lamp sockets ..	1949-50	301187	L.H.D., dip right ..	1949-50	*A50445K
Distributor ..	1949	*40116D/E	LAMPS			Side ..	1949-50	52108A
" " " " ..	1949	*40116F	Head, Home			Stop tail and number plate	1949-50	*53063B
" " " " ..	1950	*40116H	R.H.D., dip left (L.H.)	1949-50	*50878A	Relay, field exciter ..	1950	33099A
			" non-dip (R.H.)	1949-50	*50880A	Starting motor ..	1949-50	*26028A



Equipment Specification

COMMER

COMMER 6½ and 7 ton 1949-50—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			Windshield wipers			Windshield wipers—cont'd		
Horn push and dipper ..	1949-50	*380148	Motor	1949-50	*75053J	Outer casing ..		
Ignition and lighting ..	1949-50	*34037A	Control box	1949-50	72591A	Wheelbox to control box		
Oil	1949-50	31146A	Wheelbox	1949-50	72590A/K	Nearside	1949-50	739937
Knob	—	*315258	Crosshead and rack assy.	1949-50	736364	Offside	1949-50	739937
Panel	1949-50	31113A	Inner cable rack ..	1949-50	736024	4", nearside wheelbox	1949-50	740032
Knob	—	315112				3", offside wheelbox	1949-50	740031
Solenoid, starting motor	1949-50	31115A	Outer casing ..			Arm	1949-50	*735098
Knob	—	*317315	Motor to wheelbox ..	1949-50	*739832	Blade	1949-50	727759

COMMER 8 ton Tractor Trailer 1950

Battery (Petrol)	1950	SG11A	LAMPS			SWITCHES		
(Diesel)	1950	STXW19E	Head, Home			Horn push and dipper ..	1950	*380148
Coil, ignition (Petrol) ..	1950	*45012A/D	R.H.D., dip left (L.H.)	1950	*50445K	Ignition and lighting ..	1950	*34014B
Control box (Petrol) ..	1950	*37076E	non-dip (R.H.)	1950	*50446K	Solenoid operating ..		
(Diesel, serviced by C.A.V.) ..	1950	1688010	Head, Export			(Diesel)	1950	*317075
Distributor (Petrol) ..	1950	40135E/H	R.H.D., dip left ..	1950	*50445K	Starting motor (Petrol)	1950	76404B
Fuse box	1950	*385175	L.H.D., dip right ..	1950	*A50445K	Warning light (ignition)		
Generator (Petrol) ..	1950	*22435A/B	Side	1950	52108A	(Petrol)	1950	*38015B
Pulley	—	228080	Stop tail and number plate	1950	*53063B	Windshield wipers		
Generator (Diesel, serviced by C.A.V.) ..	1950	1131090	Starting motor	1950	*26035A	Motor	1950	75129A
Horn	1950	069344	(Diesel, serviced by C.A.V.) ..	1950	1332600	Arm	1950	*735096
						Blade	1950	727802

§ FUEL INJECTION EQUIPMENT (Perkins R6 Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1950	BPE6A70R320S6302	Pre-filter	1950	BFJSJ1-501
Governor	1950	BEPAMN80A122	Nozzle holder	1950	BKB35S87
Coupling	1950	BZKG31-538	Nozzle	1950	BDL110S6133
Feed pump	1950	BFPK22P68	Filter	1950	F2-8
Primer	1950	BFPUE2-54Z			

COMMER 'Avenger' Coach (Petrol, 12 volt) 1949-60

Battery	1949-50	LMXBE	LAMPS,—continued			Steering column control ..	1955-60	32937A/B
"	1951-54	WT17E	Head, Export			Suppressor	1955-60	78106A
"	1955-50	MX17T	R.H.D., dip left ..	1949-51	*50445K	SWITCHES		
Coil, ignition	1949	MT19E	" Later	1951-52	*50954A	Horn push and dipper ..	1949-50	*380168
"	1950-55	*45039A	"	1952	50941A	"	1951-54	*31325A
"	1956-60	*45012A/D	"	1953-55	51336A	Ignition and lighting ..	1949-51	*34037A
Control box (serviced by C.A.V.)	1949-54	*45054D/L	"	1956-60	51336B/J	Knob	1952-60	31194A/B
ditto	1949-54	1686020	L.H.D., dip right ..	1949-51	*A50445K	"	1952-54	*316284
ditto	1955-58	1687010	" Later	1951-52	*50804D	Oil	1955-60	316285
ditto	1959-60	1687011	"	1953-54	*51337A	"	1949-60	31146A/B
Distributor	1949	*40116D/E	"	1955	*51337B	Knob	—	*315258
"	1950-52	*40116H	" Later	1956-59	*51337D/E	Panel	1949-60	31113A/D
"	1952	*40301B/D	Head, Export Europe (not France) ..	1959-60	*51337F/K	Knob	1949-56	315112
"	1953-54	40359A/B	ditto	1949-50	*B50445K	Solenoid, starting motor (temporary) ..	1957-60	*315143
"	1954-60	40359D/F	ditto	1951-52	*50963A	Solenoid, starting motor	1951	76022A
Fuse box	1949-60	*37137A	ditto	1953-55	51339A	Solenoid, starting motor	1952-60	*76411D/E
Generator (serviced by C.A.V.)	1949-58	1150150	ditto	1956-59	51339B/H	Solenoid operating ..	1949-60	*31115A
ditto	1959-60	1150152	ditto Later	1959-60	58230A/E	Knob	—	*317315
Horn	1949-54	*069213	Head, Export France ..	1951-52	*50962A	Windshield wiper ..	1952-54	*31248A
Low note	1954-55	*69011F/J	"	1953-55	51341A	Knob	—	*316366
"	1956-60	69046A/F	"	1956-59	51341B/E	Windshield wipers		
High note (optional) ..	1954-55	*69012F/J	"	1960	58231A/E	Motor	1952-54	75144A
"	1956-60	69047A/F	Side	1949-53	52108A	Wheelbox	1952-54	72560A/K
Inspection lamp sockets ..	1949-60	301187	"	1954-60	52139B/F	Crosshead and rack assy.		
Junction box	1955-60	78265A	"	1949	*53063B	Cut to 41 ½" ..	1952-54	736307
LAMPS			Stop tail and number plate	1949	*3099A	Outer casing ..		
Head, Home			Relay, field exciter ..	1949-51	33116B	Motor to wheelbox ..	1952-54	739833
R.H.D., dip left (L.H.)	1949-51	*50445K	Relay, horn (when twins fitted)	1956-60	*33116B	Wheelbox to wheelbox	1952-54	*739979
"	1949-51	*50446K	Starting motor	1949-51	*26028A	End tube	1952-54	740031
"	1951-52	*50954A	" (temporary)	1951	26077A	Grommet, wheelbox ..	1952-54	734458
"	1952	50941A	"	1952-53	26086A	Arm, left hand ..	1952-54	*737629
"	1953-55	51336A	"	1954-60	26094A	" right hand ..	1952-54	*737628
"	1956-60	51336B/J				Blade	1952-54	727759

COMMER 'Avenger' (Rootes TS3 Diesel, 24 volt) 1954-60

Battery	1954-60	MT19E	LAMPS			Relay, horn (when twins fitted) ..	1956-60	33164A
Control box (serviced by C.A.V.)	1954-58	1687050	Head, Home and Export			Starting motor (serviced by C.A.V.)	1954-58	1332970
ditto	1959-60	1687051	Dip left	1954	51477A	ditto	1959-60	1332971
Fuse box	1954-60	*37137A	"	1955	51477B	Steering column control ..	1955-60	32937A/B
Generator (serviced by C.A.V.)	1954-58	1151160	"	1956-60	51477D/H	SWITCHES		
ditto	1959-60	1151161	Head, Export			Dipper	1955-60	31284A/D
Horn	1954	*069430	L.H.D., dip right ..	1954	51490A	Horn push and dipper ..	1954	*31325A
Low note	1955	*69041B	" Later	1954	51490B	Lighting and master ..	1955-60	31194B
"	1956-60	69055A	"	1955	51490D	Knob	—	*316285
High note (optional) ..	1955	*69042B	" Later	1955-60	51490E/J	Panel	1955-60	31113A/D
"	1956-60	69056A	Head, Export Europe (not France) ..	1954	51492A	Knob	1955-56	315112
Inspection lamp sockets ..	1957-60	301187	ditto	1955	51492B	"	1957-60	315143
Junction box	1954-60	78265A	ditto	1956-60	51492D/H	Solenoid operating ..	1955-58	31115A/E
			Side	1954-56	52251A/B	"	1959-60	31810A
			Stop tail and number plate	1954	*53063B	Knob	1955-60	*317315
			Stop tail Later	1954	53178B/D	Stop lamp	1955-59	31082E/J
						"	1960	31802D

* See Supersession Chart
L.H.D. .. Left hand drive

† Quote voltage when ordering
R.H.D. .. Right hand drive

§ Serviced by C.A.V. Ltd.

L.H. .. Left hand

R.H. .. Right hand

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

COMMER-DAIMLER

COMMER 'Avenger' (Rootes TS3 Diesel, 24 volt) 1954-60—continued

§ FUEL INJECTION EQUIPMENT					
Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1954-59	NL3F80-96	Venturi	1954-56	BEPKE85-99V
"	1960	NL3F80-181	"	1957-59	BEPKE85-117
Governor	1954-55	LP9	"	1960	BEPKE85-131
"	1956-59	LPB25	Nozzle holder	1954-60	BKBL52S656
"	1960	LPB34	Nozzle	1954-56	BDDL10S6134
Coupling	1954-57	FCB3	"	1957-60	BDDL10S6213
"	1958-60	FCB5	Filter	1954-59	F2-13
Feed pump	1954-57	DFP3-13	"	1960	F2B-13
"	1958-60	DFP3-26			

COMMER Fire Tender or Pump Chassis 1952-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1952-53	GT11A	LAMPS—continued			SWITCHES—continued		
"	1954	6CFBE	L.H.D., dip right	1952-53	*50804D	Petrol pump	1952-53	31201B
"	1955-59	W11E	" Later	1953-54	*51337A	Knob	—	314026
"	1960	GT11A	"	1955	*51337B	Solenoid, starting motor	1952-60	*76411D/E
Coil, ignition	1952-55	*45012A/D	" Later	1956-59	*51337D/E	Solenoid operating	1952-60	31115A/E
"	1956-60	*45054D/L	Head, Export Europe (not France)	1959-60	*51337F/K	Knob	—	*317315
Control box (serviced by C.A.V.)	1952-53	*37139D	ditto Later	1952-53	*50963A	Windshield wiper	1952-54	31248A
"	1954-58	1687010	ditto	1953-55	*51339A	Knob	1952-56	*316366
"	1959-60	1687011	ditto Later	1956-59	51339B/H	"	1957-60	312954
Distributor	1952-53	40210A/B	Head, Export France	1959-60	58230A/E	Windshield wipers		
" Later	1953	*40301B/D	" Later	1952-53	*50962A	Motor	1952-58	75144A
"	1954	40359A/B	"	1953-55	*50341A	"	1959-60	75289B
" Later	1954-60	40359D/F	"	1956-59	*50341B/E	" Later	1960	75398A
Flasher unit (when fitted)	1957	*35003A	"	1960	58231A/E	Wheelbox	1952-58	72560A/K
"	1958-60	35010A	Head, Export U.S.A.	1952-55	51343A	"	1959-60	72660A
Fuse box	1952-53	033240	"	1956-60	51343B/E	Crosshead and rack assy.		
"	1952-53	*37130A	Number plate illumination	1955-60	53343A	Cut to 4 1/2"	1952-58	736307
"	1954-60	*37137A	Side	1952-53	52108A	Outer casing		
Generator	1952-53	22456A/B	"	1954-60	52139B/F	Motor to wheelbox	1952-58	739833
" (serviced by C.A.V.)	1954-58	1150150	Stop tail and number plate	1952-54	*53063B	" (L.H.)	1959-60	743708
"	1959-60	1150152	Stop tail	1955-60	53178E/J	" (R.H.)	1959-60	743709
Horn	1952-56	*069213	Reflex reflector	1955	57073B	Wheelbox to wheelbox	1952-53	*739979
Low note (alternative, 1956)	1956-60	69046A/F	Starting motor	1952-53	26086A	"	1956-58	739932
High note (optional)	1956-60	69047A/F	"	1954-60	26094A	End tube	1952-58	740031
Inspection lamp sockets	1952-60	301187	Steering column control	1955-60	32937A/B	"	1959-60	740746
Junction box	1955-57	78265A	Suppressor (when fitted)	1955-60	78106A	Ferrule, casing retaining	1956-58	738410
LAMPS			SWITCHES			Grommet, wheelbox	1952-58	734458
Flasher, front and rear (optional)	1957-60	52314A	Dipper	1955-60	31284A/D	Arm, left hand	1952-53	*737629
Head, Home	1952-53	*50954A	Horn push and dipper	1952-54	*31325A	"	1956	*737629
R.H.D., dip left	1953-55	51336A	Ignition and lighting	1952	34055A	"	1957-58	742275
" Later	1956-60	51336B/J	"	1953-60	31194A/D	"	1959-60	54711558
Head, Export	1952-53	*50954A	Knob	1953-54	*31628A	" right hand	1952-53	*737628
R.H.D., dip left	1953-55	51336A	"	1955-60	316285	"	1956	*737628
" Later	1956-60	51336B/J	Oil level indicator	1952-54	31146A	"	1957-58	742274
"	1952-53	*50954A	Knob	—	*315258	Blade	1959-60	54711557
"	1953-55	51336A	Panel	1952-60	31113A/D	"	1952-58	727759
"	1956-60	51336B/J	Knob	1952-56	315112	"	1959-60	737897
			"	1957-60	*315143	8-pin plug	1956-60	809797
						" socket	1956-60	809798

COOPER 'Monaco' Sports (Coventry Climax Engine) 1959-60

Ammeter	1959-60	36001D	Horn	1959-60	*70063F	SWITCHES		
Battery	1959-60	RCPR11A	LAMPS			Horn push and dipper	1959-60	31438B
Coil, ignition	1959-60	45075D	Head	1959-60	51534B/E	Lighting	1959-60	31126F
Control box	1959-60	37204J	R.H.D., dip left	1959-60	53518A	Knob	—	316129
Distributor	1959-60	40566B	Number plate illumination	1959-60	52325B	Petrol pump	1959-60	31201D
Fuse box	1959-60	*37137A	Side	1959-60	25063F	Knob	—	314026
Generator	1959-60	22290A/E	Starting motor	1959-60		Starting motor	1959-60	76427D

DAIMLER 27 h.p. Limousine 1946-53

Ammeter	1949-51	*36048B	LAMPS—continued			SWITCHES—continued		
"	1952-53	36002D	Side	1947-53	52098A	Solenoid operating	1946-53	*317063
Battery	1946-53	HRLT23D	" (Hooper bodies)	1951-53	52165A	Stop lamp	1946-53	31281B
Coil, ignition	1946-53	*45012A/D	Stop tail	1953	53194B	Spring	—	315543
Control box	1946-48	*37032A/B	Mirror	1946-53	062590	Terminal block	1946-53	37101A
"	1949-53	*37067A/F	Left hand	1946-53	062587	Trafficators	1946-53	54022D
Distributor	1946	*40045A	Right hand	1946-53	062587	Warning lights		
"	1947-53	*40137A/F	Interior	1946-53	062560	Ignition	1946-53	318604
Fuse box	1947-53	*385221	Starting motor	1946-53	*270299	Oil	1953	318604
Generator	1946-53	*22447A	Steering column control	1946-53	32712A	Vacuum	1946-53	*318534
Horn			SWITCHES			Windshield wipers		
Low note	1946-50	*69021A	Battery master	1946-53	76605B	Motor	1946-50	*75074H
"	1951-53	*69011F	Dipper	1946-53	31284A	"	1951-53	*75074J
High note	1946-50	*69022A	Fog lamp	1946-53	31201B	Wheelbox, with switch	1946-53	72567A/H
"	1951-53	*69012F	Knob	—	*316205	" less switch	1946-53	72568A/E
Inspection lamp sockets	1946-53	38604A	Heater/Fan	1946-53	*78222A	Crosshead and rack assy.		
LAMPS			Knob	—	*768502	Cut to 5 7/8"	1946-53	738223
Fog	1946-53	*55029E	Ignition and lighting	1946-50	*34021A	Outer casing		
Head, Home	1946-53	50533A	"	1951-53	34055A	Motor to wheelbox	1946-53	*739832
Head, Export	1946-53	50628A	Panel	1946-53	*314722	Wheelbox to wheelbox	1946-53	739937
Inspection	1950-53	*060090	" (alternative)	1946-53	*78236A	3", offside wheelbox	1946-53	740031
Number plate illumination	1946-53	*53034A	Knob	—	*768439	Grommet, wheelbox	1946-53	735349
Pass	1946-53	*55010A	Reverse lamp	1946-53	31281B	Arm	1946-53	*735078
Side	1946	*52084A	Solenoid, starting motor	1946-53	76022A	Blade	1946-53	727707



Equipment Specification

DAIMLER

DAIMLER 36 h.p. Limousine 1946-53

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1949-51	*36048B	Mirror			Warning lights		
Battery	1952-53	36002D	Left hand	1946-53	062590	Ignition	1946-53	318604
Coil, ignition	1946-52	HRLT23D	Right hand	1946-53	062587	Oil	1953	318604
Control box	1953	HRT17D	Interior	1946-53	062560	Vacuum	1946-53	*318534
Distributor	1946-53	*45012A/D	Starting motor	1946-53	*270299	Windshield wipers		
Fuse box	1946-48	*37032A/B	Steering column control ..	1946-53	32717A	Motor	1946-50	75053J
Generator	1949-53	*37067E				" Later	1950	*75074H
Horn	1946-53	40077D				"	1951-52	*75074J
Low note	1946-53	*385221	SWITCHES			"	1953	75183A
High note	1946-53	*22447A	Battery master	1946-53	76605B	Wheelbox, with switch	1946-52	72567A/H
Inspection lamp sockets ..	1946-53	38604A	Dipper	1946-53	31284A	" less switch ..	1946-52	72568A/E
LAMPS			Foglamp	1946-53	31201B	"	1953	72628
Fog	1946-53	*55029E	Knob	—	*316205	Crosshead and rack assy.		
Head, Home	1946-53	50533A	Heater	1946-53	*78222A	Cut to 52½"	1946-52	738499
Head, Export	1946-53	50628A	Knob	—	768378	Crosshead and rack assy.	1953	741268
Number plate illumination	1946-53	*53034A	Ignition and lighting ..	1946-50	*34021A	Outer casing		
Pass	1946-53	*55010A	Panel	1951-53	34055A	Motor to wheelbox ..	1946-52	*739832
Side	1946	*52084A	"	1946-53	*314722	"	1953	740770
" (Hooper bodies) ..	1947-53	52098A	Knob	1946-53	*78236A	Wheelbox to wheelbox	1946-52	*738009
Stop tail	1951-53	52165A	Reverse lamp	1946-53	31281B	"	1953	740889
	1953	53194A	Solenoid, starting motor	1946-53	76022A	End tube "	1946-52	740031
			Solenoid operating ..	1946-53	*317063	"	1953	740746
			Stop lamp	1946-53	31281B	Grommet, wheelbox ..	1946-52	729423
			Spring	—	315543	Arm	1946-52	*735067
			Terminal block	1946-53	37101A	"	1953	*741454
			Trafficators	1946-53	54022D	Blade	1946-52	727759
						"	1953	*737682

DAIMLER 2½ litre Models (except 'Consort') 1946-53

Battery	1946-53	SLT13A	LAMPS—continued			Terminal block	1951-53	37101A
Coil, ignition	1946-53	*45012A/D	Head, Export France ..	1953	*51218A	Trafficators	1946-49	54022D
Control box	1946-48	*37030A	Head, Export U.S.A. ..	1951-53	*50937A	"	1950-53	*54039A
"	1949	37046A	ditto (Hooper bodies)	1951-53	*50980A			
Distributor	1950-53	*37076E	Number plate illumination	1946-47	*53034A	Warning lights		
"	1946-47	*40047A/D	Pass	1950-53	53097E	Flasher	1952-53	38052B
"	1948-49	*40137A/F	Side	1948-53	55084B	Heater	1951-53	38052B
Flasher unit	1950-53	40175E/F	"	1946-47	*52060A	Ignition	1946-48	*318534
Fuse box	1952-53	*35003A	"	1948	52098A	Main beam	1952-53	38052B
"	1949	*385221	"	1949	*52060A			
" (cigar lighter) ..	1950-53	37110A	"	1950	52120E			
Generator	1946-53	*385184	"	1951-53	52150B			
" Later	1946-49	*22447A	" (U.S.A.)	1951-53	52177A			
Horn	1949-53	*22436A	Stop tail	1950-51	*53156D	Windshield wipers		
Low note	1946-53	*69021A	"	1952-53	53226A	Motor	1946-49	†75066A
High note	1946-53	*69022A	"	1952-53	53153E	"	1950	*75075J
Inspection lamp sockets ..	1946-53	38604A	Mirror	1946-51	*580593	"	1951-52	*75075K
Junction box	1946-53	78264A	" Later	1951	062548	" Later	1952-53	75153A
LAMPS			" (right hand) ..	1952-53	*580733	Bracket, with shaft and		
Fog	1946-50	*55010A	" (left hand) ..	1952-53	*580736	coupling	1946-48	734453
Head, Home			Starting motor	1946-50	*255721	ditto	1949	737089
R.H.D., dip left (L.H.)	1946-47	*506096	Steering column control ..	1951-53	25521B/D	Shaft, short	1946-49	737243
" non-dip (R.H.) ..	1946-47	*506097	ditto Later	1946-49	322323	Coupling	1946-49	729036/S
" (L.H.) ..	1948-49	50530B		1949-53	32803A/F	Link, primary	1946-48	735448
" (R.H.) ..	1948-49	*50531B	SWITCHES			"	1949	737095
R.H.D., dip left			Dipper	1946-53	31284A	" secondary ..	1946-48	733817
(L.H. and R.H.) ..			Foglamp	1948-50	31228B	"	1949	737097
"	1950-52	*50852B	Knob	1951-53	31201B	Clutch housing	1946-48	735691
" (Hooper	1953	*51216A	Heater or fan	—	*316204	"	1949	737357
bodies)			Knob	1950-53	78250A	Wheelbox, with switch	1950-53	72612A
Head, Export			Ignition and lighting ..	—	*768663	" less switch ..	1950-53	72613A
Double dip (L.H.) ..			"	1946-49	34056A	Crosshead and rack assy.		
" (R.H.) ..			"	1950	*34006B	Cut to 50½"	1950-53	738499
R.H.D., dip left ..	1948-49	50655A	Panel	1951-53	34063A	Outer casing		
"	1948-49	50656A	Knob	1946-49	*314722	Motor to wheelbox ..	1950-53	*739907
" (Hooper	1950-52	*50852B	Reverse lamp	1950-53	*78259A	Wheelbox to wheelbox	1950-52	*739944
bodies)	1953	*51216A	Solenoid, starting motor	—	768662	"	1953	*739979
L.H.D., dip right ..	1952-53	50913A/D	Solenoid operating ..	1951-53	31281B	End tube "	1950-53	740031
"	1950-51	*A50852B	Stop lamp	1946-49	76022A	Grommet, wheelbox ..	1950-53	729423
Head, Export Europe	1952-53	*A51216A	Spring	1950-53	*76411D	Arm	1946-49	735098
(not France)				1946-49	*317063	"	1950-53	*736418
ditto	1950-51	*B50852B		1950-53	*31239A	Blade	1946-49	727707
	1952-53	*B51216A		1946-53	31281B	"	1950-53	*737482
					315543	" Later	1953	*737682

DAIMLER 2½ litre 'Consort' 1950-53

Battery	1950-53	SLT13A	LAMPS			LAMPS—continued		
Coil, ignition	1950-53	*45012A/D	Fog	1953	*55055B	Head, Export Europe		
Control box	1950-53	*37076E	" (special orders) ..	1953	55084B	(not France)	1950-52	*B50852B
Distributor	1950-53	40175E/F	Head, Home			ditto	1953	*B51216A
Fuse box	1950-53	37110A	R.H.D., dip left	1950-52	*50852B	Head, Export France ..	1953	*51218A
Generator	1950-52	*22435A/B	"	1953	*5913A/D	Head, Export U.S.A. ..	1950-53	*50937A
" Later	1952-53	*22456A/B	" Later	1953	*51216A	Reverse, tail and number		
Horn			Head, Export			plate	1950-53	53116A
Low note	1950-53	*69021A	R.H.D., dip left	1950-52	*50852B	Side	1950-53	52120E
High note	1950-53	*69022A	"	1953	*50913A/D	Stop tail and number plate	1950-53	53117A
Inspection lamp sockets ..	1950-53	39513A	" Later	1953	*51216A	Stop tail and reverse		
Junction box	1950-53	78264A	L.H.D., dip right	1950-53	*A50852B	" Later	1953	53221A
			"	1953	*A51216A	Starting motor	1950-53	25521B/D
			" Later	1953		Steering column control ..	1950-53	32803A/F

* See Supersession Chart
L.H.D. .. Left hand drive

† No longer available—refer to Wiper Conversion Set Section
R.H.D. .. Right hand drive

L.H. .. Left hand R.H. .. Right hand

continued



Equipment Specification

DAIMLER

DAIMLER 2½ litre 'Consort' 1950-53—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			Terminal block	1950-53	37101A	Windshield wipers—cont'd		
Dipper	1950-53	31284A	Trafficators	1950-53	*54039A	Crosshead and rack assy.	1950-53	736177
Ignition and lighting ..	1950-53	34063A				Outer casing		
Panel	1950-53	*31209A	Windshield wipers			Motor to wheelbox ..	1950-53	739870
Knob	1950-53	*316205	Motor	1950	*75075J	Wheelbox to wheelbox ..	1950-53	*31390A
Reverse lamp	1950-53	31281B	"	1951-52	*75075K	End tube	1950-53	740031
Solenoid, starting motor	1950-53	*76411D	" Later	1952-53	75153A	Grommet, wheelbox ..	1950-53	734652
Solenoid operating	1950-53	*31239A	Wheelbox, with switch	1950-53	72567A/H	Arm	1950-53	*736418
Stop lamp	1950-53	31281B	" less switch ..	1950-53	72568A/E	Blade	1950-53	*737482
Spring	—	315543						

DAIMLER 3 litre 'Regency' Saloon and Coupé 1953

Battery	1953	GT11A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1953	*45012A/D	Number plate and reverse	1953	53161D	Panel	1953	*78259A
Control box	1953	*37139D	Side	1953	53210A	Knob	—	768662
Distributor	1953	*40280A/B	" (U.S.A.)	1953	*52162A	Petrol gauge (Coupé) ..	1953	*31390A
Flasher unit	1953	*35003A	" (Coupé)	1953	52175A	Solenoid, starting motor	1953	*76411D
Fuse box	1953	*31239	" (coupé, U.S.A.) ..	1953	52176A	Solenoid operating ..	1953	31115A
Generator	1953	*22456A/B	Stop tail	1953	53199B	Knob	—	*317335
Horn			" (Coupé) ..	1953	53178D	Stop lamp	1953	31281B
Low note	1953	*69011F	Stop tail and flasher			Spring	—	315543
High note	1953	*69012F	(U.S.A.)	1953	53153E	Windshield wiper ..	1953	31113A
Horn relay	1953	*33116B	Mirror	1953	62800R	Knob	—	*316491
Inspection lamp sockets	1953	38604A	Starting motor	1953	25521B/D	Terminal block	1953	37101A
Junction box	1953	78266A	Steering column control	1953	32871A/B	Trafficators	1953	54044A
LAMPS			SWITCHES			Windshield wipers		
Fog	1953	55043E	Blower (Coupé)	1953	31113A	Motor	1953	75152A
Head, Home			Knob	—	*316498	Wheelbox	1953	*72548A/K
R.H.D., dip left	1953	*51216A	Dipper	1953	31284A	Crosshead and rack assy.		
Head, Export			Foglamp	1953	31113A	Cut to 50	1953	738499
R.H.D., dip left	1953	*51216A	Knob	1953	*316499	Outer casing		
L.H.D., dip right	1953	*A51216A	Heater/Fan	1953	78250A	Motor to wheelbox ..	1953	*739907
Head, Export Europe			Knob	—	*768663	Wheelbox to wheelbox	1953	*739979
(not France)	1953	*B51216A	Ignition	1953	31287A	End tube	1953	740031
Head, Export France	1953	*51218A	Interior light (Coupé)	1953	31113A	Grommet, wheelbox ..	1953	734652
Head, Export U.S.A.			Knob	—	*316497	Arm, left hand drive ..	1953	*737571
(Hooper bodies) ..	1953	*51217A	Lighting	1953	31303A	" right hand drive	1953	*737570
			Knob	—	316637	Blade	1953	738724

DAIMLER 'Conquest' ('Century') Saloon 1954-58

Battery	1954-58	GT9A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1954-55	*45012A/B	Number plate and reverse	1954-58	53161D	('Century')	1958	78314A
Control box	1955-58	*45054A/J	Side	1954-57	53210A/F	Knob	—	768975
" Later	1954-55	*37138A/D	"	1958	52250B	Reverse lamp	1955-58	31281B
Distributor	1954-58	37182F/H	Side and flasher (U.S.A.)	1954-58	*52162B/E	ditto (Borg Warner		
"	1954	40394A	Stop tail	1954-55	53199B	models)	1957-58	*31077E
" Later	1954	40394B/D	Stop tail, flasher and reflex	1956-58	53410B	Solenoid, starting motor	1954-56	*76411D/E
"	1955-57	40424A/E	Stop tail and flasher			"	1957-58	*76443A
Flasher unit (U.S.A.) ..	1958	40531A	(U.S.A.)	1954-55	53153E	Switch, circuit breaker		
"	1958	35010A	Reflex reflector	1955	57072A	(Borg Warner models)	1957-58	*31077E
Flasher relay	1956-58	33117D	Starting motor	1954-58	25521B/D	Solenoid operating ..	1954-55	31115A
Fuse box	1954-58	033239	Steering column control	1954	32909A/B	Knob	—	315047
Generator	1954-55	22258D	ditto	1955-58	32926A/H	Solenoid operating		
"	1956-58	22258E/F	ditto ('Conquest')	1956	32909A/B	('Conquest')	1956	31115E
LAMPS			SWITCHES			Knob	—	*317335
Driving	1956-58	55132D	Blower	1956	31113D	Stop lamp	1954-58	31281B
" (France)	1958	55161A	Knob	—	*316498	Spring	—	315543
Fog	1954-55	55043E	Dipper	1954-58	31284A	Windshield wiper ..	1954-58	31113A/D
"	1956-58	55128D	Foglamp	1956-57	31113D	Knob	1954-55	*315135
" (France)	1956-58	55160B	Knob ('Conquest') ..	1956	*316499	" (brown)	1956	*316491
Head, Home	1954-55	51336A	" ('Century')	1956-58	316370	" (black)	1956-58	316371
R.H.D., dip left	1956-58	51336B/J	Heater/Fan	1954-55	78250A/D	Terminal block	1954-58	37101A/B
"	1956-58	51336B/J	Knob	1954	*768663	Trafficators	1954-58	54044A/E
Head, Export	1954-55	51336A	Ignition ('Conquest')	1955	768378	Windshield wipers		
R.H.D., dip left	1956-58	51336B/J	Ignition and starting	1954-56	31287A/B	Motor	1954-55	*75174F
"	1956-58	51336B/J	('Century')	1956-58	31593A	"	1956-57	*75200B
L.H.D., dip right	1954	*51337A	Lighting	1954	31303A	Spring	1958	75296B
"	1955	*51337B	Knob	—	316637	Wheelbox	1954-55	72636D
"	1956-58	*51337D/E	Lighting	1955-58	31428B/E	"	1956-58	72660A
Head, Export Europe			Knob (brown)	1955-56	312622	Crosshead and rack assy.	1954-55	*743234
(not France)	1954-55	51339A	" (black)	1956-58	312550	Cut to 42	1956-58	*743231
ditto	1956-58	51339B/H	" (Borg Warner			Outer casing		
Head, Export France	1954-55	*51341A	models)	1957-58	313653	Motor to wheelbox ..	1954-55	740901
"	1956-58	*51341B/E	Panel rheostat	1954-55	*78259A	Wheelbox to wheelbox	1954-55	744149
			Knob	—	768378	"	1956-58	740982
			Panel rheostat			End tube	1954-58	740746
			('Conquest')	1956	78314A	Arm, left hand drive ..	1954-55	*741293
			Knob	—	768662	"	1956-58	745072
			" ('Century')	1956-57	78299B	" right hand drive	1954-55	*741292
			Knob	—	313600	"	1956-58	745071

DAIMLER 'Conquest' Roadster and Drophead Coupé 1954-57

Battery	1954-57	GT9A	Flasher unit	1955-57	*35003A	Horn		
Coil, ignition	1954-55	*45012B	Flasher relay	1955-57	33117A	Low note	1954	*69011J
" Later	1955-57	*45054A/H	Fuse box	1954-57	033239	High note	1955-57	69046A/E
Control box	1954-55	*37138D	Generator	1954-55	22258D	"	1954	*69012J
"	1956-57	37182F/H	"	1956-57	22258E	Inspection lamp sockets	1954-57	69047A/E
Distributor	1954-57	40424A/E				Junction box	1954-57	38604A

* See Supersession Chart

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)

continued



Equipment Specification

DAIMLER

DAIMLER 'Conquest' Roadster and Drophead Coupé 1954-57—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			Reflex reflector	1955-57	57072A	SWITCHES—continued		
Driving	1954-57	55132B	Starting motor	1954-57	25521D	Windshield wiper ..	1954-57	31113A/D
Flasher, front (Coupé) ..	1956-57	*52246B	Steering column control ..	1954-57	32926A/H	Knob	1954-55	*315135
Fog (Roadster)	1954-55	55128B				Terminal block	1956-57	*316491
" (Coupé)	1954-55	55043E	SWITCHES			Trafficators	1954-57	37101B
" (France)	1956-57	55128B	Dipper	1954-57	31284A	Windshield wipers	1954-57	54044D/E
Head, Home and Export			Foglamp	1956-57	31113D	Motor	1954-55	*75174E
Vertical dip	1954-57	51535A	Knob	—	*316499	"	1956-57	*75200B
" Later	1957	51535D/F	Heater/Fan	1954-55	78250D	Wheelbox	1954-55	72636D
Head, Export France ..	1954	51591A	Knob	—	768378	"	1956-57	72660A
"	1955	51591B	Ignition	1954-57	31287A/B	Crosshead and rack assy.	1954-55	*743234
"	1956	51591D	Lighting	1954	31303A	Cut to 42 $\frac{1}{2}$ "	1956-57	*743231
Number plate illumination			Knob	—	316637	Outer casing		
(Roadster)	1954-55	53093E	Lighting	1955-57	31428B/D	Motor to wheelbox ..	1954-55	740901
(Coupé)	1956-57	53093H	Knob	—	312622	"	1956-57	744149
Number plate illumination			Panel	1954	78250D	Wheelbox to wheelbox	1954-55	740982
and reverse (Coupé) ..	1954-55	53161D	"	1955	*78259A	"	1956-57	744150
Reverse (Roadster) ..	1955	53378A	Knob	1954-55	768378	End tube "	1954-57	740746
(Coupé)	1956-57	53378A	Reverse lamp	1954-57	31281B	Arm, left hand drive		
Side (Roadster)	1954-55	52175B	Solenoid, starting motor	1954-57	*76411E	Coupé	1954-55	*741293
(Coupé)	1956-57	52175B	Solenoid operating ..	1954-57	31115A/B	Roadster	1954	*741293
Side and flasher (Coupé)	1954-55	*52162E	Knob	1954-55	315042	"	1955	*741837
Stop tail (Roadster) ..	1954-55	*53372A	"	1956-57	*317335	Arm, left hand drive	1956-57	*745072
(Coupé)	1956-57	*53372A	Stop lamp	1954-57	31281B	" right hand drive ..	1954-55	*741292
Stop tail and flasher			Spring	—	315543	"	1956-57	*745071
(Coupé)	1954-55	53153E				Blade "	1954-57	738724

DAIMLER DC27 Ambulance 1949-54

Ammeter	1949	*369274	LAMPS—continued			SWITCHES—continued		
Battery	1950-54	*36104A	Stop tail and reverse ..	1949-50	*53143B	Stop lamp	1949-54	31281B
Coil, ignition	1949-54	HRLT23D	ditto	1951-54	53203B	Spring		315543
Control box	1949	*45012A/D	ditto (U.S.A.)	1951-54	53183B	Windshield wiper ..	1949-54	31201B
Distributor	1950-54	*37048E	Starting motor	1949	*270244	Knob		*316206
Fuse box	1949-54	40179A/D	Steering column control ..	1950-54	26043A	Terminal block	1949-54	37101A
Generator	1949-52	*22435A/B		1949-54	32808B/F	Trafficators	1949-54	*54039A
Horn	1949-54	*069399	SWITCHES			Warning lights		
LAMPS			Battery master	1949-54	76605B	Ignition	1949-54	*38013B
Fog	1949-54	*55055B	Bell push	1949-54	76201A	Main beam	1949-54	38052B
Head, Home			Dipper	1949-54	31226B	Oil	1949-54	*38042A
R.H.D., dip left (L.H.)	1949-54	*50445K	Foglamp	1949-54	31201B	Windshield wipers		
non-dip (R.H.)	1949-54	*50446K	Knob	—	*316204	Motor	1949-51	*75055K
Head, Export			Heater or fan	1949-54	*78249A	"	1952	*75055L
R.H.D., dip left	1949-54	*50445K	Knob	—	768378	"	1953-54	75152A
L.H.D., dip right	1949-54	*A50445K	Ignition	1949-54	31201B	"	1949-54	72614
Head, Export Europe			Knob	—	*316216	Wheelbox		
(not France)	1949-54	*B50445K	Interior	1949-54	*31051A	Crosshead and rack assy.	1949-54	738987
Head, Export France ..	1949-54	*50790E	Lighting	1949-54	*34058A	Cut to 15 $\frac{1}{2}$ "	1949-54	760234
Head, Export U.S.A. ..	1949-54	*50804D	Panel	1949-54	31201B	Cap, rubber	1953-54	
Side	1949-54	52139B	Knob	1949-54	*316205	Motor to wheelbox		
" (U.S.A.)	1951-54	*52162A	Reverse lamp	1949-54	31281B	Left hand drive ..	1949-54	*739855
			Solenoid, starting motor	1949	76022A	Right hand drive ..	1949-52	*739855
			Solenoid operating ..	1950-54	*76411D	"	1953-54	*739884
				1949-54	*317067	End tube "	1949-54	740031

DAIMLER 'Empress' Saloon: 'Regency' (and 'Sportsman'): 'Regina' Limousine 1955

Battery	1955	GT11A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1955	*45012B	Head, Export Europe			Reverse lamp	1955	31281B
" Later	1955	*45054A	(not France)			Solenoid, starting motor	1955	*76411E
Control box	1955	*37139E	('Empress' & 'Regency')	1955	51700A	Solenoid operating ..	1955	31115A
Distributor			('Regina')	1955	*B50979A	Knob	—	315042
('Empress' and 3 $\frac{1}{2}$ litre			Head, Export France ..			Stop lamp	1955	31281B
'Regency')	1955	40429D	('Empress' & 'Regency')	1955	51701A	Spring	—	315543
(4 $\frac{1}{2}$ litre 'Regency' and			('Regina')	1955	50981B	Windshield wiper ..	1955	31430A
'Regina')	1955	40476A	Head, Export U.S.A. ..			Knob	—	312626
Flasher unit	1955	*35003A	('Empress' & 'Regency')	1955	51646A	Terminal block	1955	37101B
Flasher relay	1955	33117A	Number plate illumination	1955	53278B	Windshield wipers		
Fuse box	1955	37110A	Reverse	1955	53378A	Motor		
Generator	1955	*22456B	Side			('Empress')	1955	*75183D
" Later (except			('Empress' & 'Regency')	1955	52175B	(Other models, L.H.D.)	1955	*75235A
'Regina')	1955	*22483A	Side and flasher			(" R.H.D.)	1955	*75236A
Horn			('Regina')	1955	*52162B	Wheelbox		
Low note	1955	69046A	Stop tail	1955	*53372A	('Empress')	1955	72636D
High note	1955	69047A	Reflex reflector	1955	57072A	(Other models) ..	1955	*72671A
Inspection lamp sockets ..	1955	38604A	Starting motor			Crosshead and rack assy.		
Junction box	1955	78266A	('Empress' and 3 $\frac{1}{2}$ litre			'Empress' Cut to 54 $\frac{1}{2}$ "	1955	741262
LAMPS			'Regency')	1955	25521D	Other models		
Driving	1955	55132B	(4 $\frac{1}{2}$ litre 'Regency' and			Cut to 44 $\frac{1}{2}$ "	1955	741264
Flasher, front	1955	*52246A	'Regina')	1955	26043A	Outer casing		
Fog	1955	55128B	Steering column control ..	1955	32925B	Motor to wheelbox		
Head, Home			('Regency') Later	1955	32947A	('Empress')	1955	740969
R.H.D., dip left			SWITCHES			(Other models) ..	1955	745227
('Empress' & 'Regency')	1955	51698B	Dipper	1955	31284A	Wheelbox to wheelbox		
('Regina')	1955	*50979A	Door light ('Regina') ..	1955	31472A	('Empress')	1955	740776
Head, Export			Knob	—	31113A	(Other models) ..	1955	745226
R.H.D., dip left			Heater motor	1955	315042	End tube	1955	740746
('Empress' & 'Regency')	1955	51698B	Knob	—	315042	Arm		
('Regina')	1955	*50979A	Ignition	1955	31287A	('Empress')	1955	*741454
L.H.D., dip right			Lighting	1955	31428B	(Other models, L.H.D.)	1955	745081
('Empress' & 'Regency')	1955	51699B/D	Knob	—	312622	(" R.H.D.)	1955	745080
('Regina')	1955	*A50979A	Panel	1955	78314A	Blade	1955	738724
			Knob	—	768662	(Other models)	1955	738734

* See Supersession Chart L.H.D. .. Left hand drive R.H.D. .. Right hand drive



Equipment Specification

DAIMLER

DAIMLER 3½ litre 'One-O-Four' Saloon 1956-59: 'One-O-Four' Lady's Model 1956: 4½ litre Limousine 1956-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter (Lady's Model)	1956	36222B	LAMPS—continued			SWITCHES—continued		
Battery	1956-60	GT11A	Side (3½ litre)	1956-59	52175D	Stop lamp	1956-60	31082B/H
Coil, ignition	1956-60	*†45054H/K	" (4½ litre)	1957-60	52175D	Windshield wiper	1956-57	31430B
Control box	1956-59	*37189H/J	Side and flasher (4½ litre)	1956	52162E	"	1958-60	31302D
Distributor (3½ litre) ..	1959-60	37303A/B	Stop tail (3½ litre) ..	1956-59	*53372A	Knob (black)	1956-57	312626
" Later	1956-57	40524A	" (4½ litre)	1956	*53372A	" (brown)	1956	312644
Flasher unit	1958-59	40429A/D	Stop tail and reflex (4½ litre)	1957-59	53377B	"	1958-60	*317621
" (4½ litre)	1959	40524A	Reflex reflector (3½ litre)	1956-59	57072B	Terminal block	1956-60	37101B
Flasher relay (3½ litre) ..	1956-60	40476A	" (4½ litre)	1956	57072B	Trafficators (3½ litre) ..	1956-59	54044E
"	1956-57	*‡35003A	Starting motor			Warning lights (Lady's Model)		
Flasher relay (4½ litre) ..	1958-60	‡35010A	(3½ litre)	1956-58	25521D	Ignition	1956	38100A
"	1956-59	‡33117D	(4½ litre) Later	1958-59	25533D	Main beam	1956	38143A
Fuse box	1956-57	33117D	" (4½ litre)	1956-60	26043A	Oil pressure	1956	38144A
Generator	1956-59	37110A	" .. alternative) ..	1958-60	26038A	Trafficator	1956	38143A
"	1956	*22483A	Steering column control			Windshield wipers		
"	1957-58	*22483B/D	(3½ litre Saloon) ..	1956-57	32925D	Motor, left hand drive	1956-58	*75235A
"	1959	*22456F	(" .. Lady's Model)	1956	32926A/H	" .. right hand drive	1959-60	75310A
" .. alternative) ..	1959	*22483B/D	All Models	1958-60	32926A/H	"	1956-58	*75236A
" .. Later	1959-60	22489B/D				"	1959-60	75311A
Horn			SWITCHES			Wheelbox	1956	*72671A
Low note	1956-60	69046B/F	Blower (Lady's Model)	1956	*31498A	"	1957	72660A
High note	1956-60	69047B/F	Knob	—	313600	" (3½ litre)	1958-59	72636D
Inspection lamp sockets ..	1956-60	38604A	Knob	—	316498	" (4½ litre)	1958-60	72660A
Junction box	1956-60	78266A	Blower (other models) ..	1956-60	31113D	Crosshead and rack assy.		
LAMPS			Knob	—	316498	(3½ litre)	1956-59	*743231
Boot (3½ litre)	1956-59	53235B	Dipper	1956-60	31284A/D	(4½ litre)	1956-57	*743231
Driving			Door light (3½ litre) ..	1956-59	31175F	(" ..)	1958 60	*741278
(3½ litre)	1956-59	55132B	Foglamp (Lady's Model)	1956	*31498A	Outer casing		
" (France)	1958-59	55161A	Knob	—	313600	Motor to wheelbox		
(4½ litre)	1956-57	55132B	Foglamp (other models)	1956-60	31113D	(3½ litre)	1956 59	745227
"	1958-60	*55159A	Knob	—	316499	(4½ litre)	1956-57	745227
" .. France)	1958-60	55208A	Heater (4½ litre) ..	1957-60	31685A	"	1958-60	744892
Flasher, front			Ignition (except Lady's Model) ..	1956-60	31287B/F	Wheelbox to wheelbox		
(3½ litre, U.S.A.) ..	1956-59	*52246B	Ignition and starting	1956	31593A	(3½ litre)	1956-59	745226
(4½ litre)	1957-60	53359A/E	(Lady's Model) ..	1957-60	31113D	(4½ litre)	1956-57	745226
Flasher, rear (4½ litre) ..	1957-59	*52278B	Interior, dash (4½ litre)	—	316497	"	1958-60	744891
Flasher, repeater (4½ litre)	1957-60	52326B	Knob	1957-60	*31686A	End stop	1956-60	740746
Fog			Interior, rear (4½ litre) ..	1956-60	31428D/H	Ferrule, casing retaining		
(3½ litre)	1956-59	55128D	Lighting	1956-60	312622	Grommet, wheelbox		
" (France)	1956-57	55160B	Knob (brown)	1956-60	312550	(4½ litre)	1958-60	740811
(4½ litre)	1956-57	55128D	" (black)	1956	313653	Arm, left hand drive		
"	1958-60	55196A	" (Borg Warner Models)	1957-58	78299B	(3½ litre)	1956-59	745081
" .. France)	1956-57	55160B	Panel (Lady's Model) ..	1956	78314A	"	1956-57	745081
" ..)	1958-60	55209A	Knob	1956-60	78314A	"	1958-59	741810
Head, Home			Reverse lamp	1956-60	768662	Arm, left hand drive ..	1960	54712081
R.H.D., dip left ..	1956-59	51698B	ditto (Borg Warner Models) ..	1957-58	31077E	Arm, right hand drive		
" .. " .. Later	1959-60	51698D	Solenoid, starting motor	1956	*76411E	(3½ litre)	1956-59	745080
Head, Export			Knob	1957-60	*76443A	(4½ litre)	1956-57	745080
R.H.D., dip left ..	1956-59	51698B	Solenoid operating	1956-60	31115E	"	1958-59	741810
" .. " .. Later	1959-60	51698D	(except Lady's Model)	1956-60	*317335	Arm, right hand drive ..	1960	54712081
L.H.D., dip right ..	1956-60	51699B/D	Knob	—	—	Blade (3½ litre)	1956-59	738734
Head, Export Europe			Switch, circuit breaker	1957-58	*31077E	" (4½ litre)	1956-57	738734
(not France)	1956-60	51700A	(Borg Warner Models)			" .. " ..	1958-60	737897
Head, Export France ..	1956-60	51701A						
Head, Export U.S.A. ..	1956-60	51646A						
Number plate illumination	1956-60	53278B						
Reverse	1956-60	53378A						

DAIMLER 'Majestic' 1959-60

Battery	1959-60	GT11A-3	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1959-60	*45054K	Head, Home			Lighting	1959-60	31428H
Control box	1959-60	37303A	R.H.D., dip left	1959	51698B	Panel	1959-60	78331A
Distributor	1959-60	*40614A/B	" .. " .. Later	1959-60	51698D	Reverse lamp	1959	31281B
Flasher unit	1959-60	35010A	Head, Export			"	1960	*31077E
"	1959-60	35010A	R.H.D., dip left	1959	51698B	Solenoid, starting motor	1959-60	*76443A
Fuse box	1959-60	033239	" .. " .. Later	1959-60	51698D	Windshield wiper	1959-60	*31427E
Generator	1959	*22456F	L.H.D., dip right	1959-60	51699B/D	Warning lights		
" .. alternative) ..	1959	*22483D	Head, Export Europe			Flasher	1959-60	§38124D
" .. Later	1959-60	22489B/D	(not France)	1959-60	51700A	Ignition	1959-60	38100A
Horn			Head, Export France ..	1959-60	51701A	Oil	1959-60	38144A
Low note	1959-60	69046F	Head, Export U.S.A. ..	1959-60	51646A	Windshield wipers		
High note	1959-60	69047F	Number plate illumination	1959-60	53278B	Motor, left hand drive	1959-60	75310A
Inspection plug and socket	1959-60	38604A	Reverse	1959-60	53378A	Motor, right hand drive	1959-60	75311A
LAMPS			Roof	1959-60	56061B	Wheelbox	1959-60	72673B
Boot	1959-60	53235B	Side	1959-60	52426B	Crosshead and rack assy.		
Driving	1959-60	55132B	Stop tail	1959-60	53377B	Cut to 35 3/32"	1959-60	744254
" (France)	1959-60	55161A	Starting motor	1959-60	25533D	Outer casing		
Flasher, front	1959-60	52337A	Steering column control ..	1959-60	32926H	Motor to wheelbox ..	1959-60	54710655
" .. (U.S.A.)	1959-60	52345A	SWITCHES			Wheelbox to wheelbox	1959-60	745226
Flasher, rear	1959	*52272D	Blower	1959-60	*31557A	End tube	1959-60	740746
"	1960	*52278B	Dipper	1959-60	31248D	"	1959	741845
" .. (U.S.A.)	1959-60	53686D	Foglamp	1959-60	*31557A	Arm, left hand drive ..	1960	54711558
Fog	1959-60	55128B	Ignition and starter ..	1959-60	*31678D	" .. right hand drive ..	1960	54711557
" (France)	1959-60	55160A	Interior	1959	*31411A	Blade	1959-60	737897
			"	1960	*31378A			

* See Supersession Chart
L.H.D. .. Left hand drive

† Suitable replacement after 1957
R.H.D. .. Right hand drive

‡ U.S.A. only on 3½ litre

§ Australia only

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

DAIMLER—DODGE

DAIMLER SP250 Sports 1960

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1960	36263A	LAMPS—continued			SWITCHES—continued		
Battery	1960	BT9A	Fog	1960	55213A/B	Panel	1960	*31851A
Coil, ignition	1960	45102D	Head, Home			Reverse lamp	1960	31696A
Control box	1960	37299A	R.H.D., dip left ..	1960	58260A/D	Solenoid, starting motor	1960	*76465A
Distributor	1960	40676A/D	Head, Export			Stop lamp	1960	31882A
Flasher unit	1960	35020A	R.H.D., dip left ..	1960	58260A/D	Windshield wiper ..	1960	31836B
Fuse box	1960	033283	L.H.D., dip right ..	1960	58560A			
Generator	1960	22700D	Head, Export France ..	1960	58561A			
Generator (temporary alternative)	1960	*22704A	Number plate illumination	1960	53093H/J	Windshield wiper		
Horn			Side	1960	52426B	Motor	1960	75371A
Low note	1960	69046F	Stop tail	1960	53818A/B	Wheelbox	1960	72693B
High note	1960	69047F	Reflex reflector	1960	575883	Crosshead and rack assy.	1960	*743223
LAMPS			Starting motor	1960	25533D	Outer casing		
Driving	1960	55212A/B	Steering column control ..	1960	33549A	Motor to wheelbox ..	1960	54711646
Flasher, front	1960	52337A	ditto (alternative)	1960	33556A/B	Wheelbox to wheelbox	1960	54711647
" " (U.S.A.)	1960	52345A	SWITCHES			End tube		740746
Flasher, rear	1960	52459A	Dipper	1960	31800A	Arm, left hand drive ..	1960	54711565
" " (U.S.A.)	1960	52460A	Ignition and starting ..	1960	31799B	" right hand drive ..	1960	54711566
			Lighting	1960	31788B	Blade	1960	737910

DELLOW MOTORS Sports Mk. III 1952–54: Mk. IIC 1955–57: Mk. V Lightweight 1955–57

Ammeter	1952	*36151A	LAMPS—continued			SWITCHES—continued		
" " " Later	1952-57	*36117B	Head, Export			Stop lamp	1952-54	31281B
Battery	1952-54	SLG13E	R.H.D., dip left ..	1952-54	*50985A	Spring	—	315543
" " " " "	1955-57	SLT13	" " " " "	1955-57	50988A			
Coil, ignition	1952-54	*45016A	Number plate illumination	1952-54	A53093E	Warning lights		
" " " " "	1955-57	*45012A	" " " " "	1955-57	53093E	Flasher	1955-57	38067A
Control box	1955-57	*37172A	Side	1952	*A52040A	Ignition	1952-54	*38012B
Distributor	1952-54	40286A	" " " " "	1953-54	A52182A	" " " " "	1955-57	*38065A
" " " " "	1955-57	40402A/N	" " " " "	1955-57	*52182A	Main beam	1955-57	*38069A
Fuse box	1952-57	*37137A	Stop tail	1952-54	*A53178D			
Generator	1952-54	22009E/F	" " " " "	1955-57	53178D	Windshield wipers		
" " " " "	1955-57	22258D	Reflex reflector	1955-57	57031A	Motor	1952-54	*75121A
Horn	1952-54	069343	Relay	1952-54	33154A	" " " " "	1955-57	*75120A
" " " " "	1955-57	069344	Starting motor	1952-54	26009A/D	Coupling bar	1953-57	732227
LAMPS			" " " " "	1955-57	25022A/L	Bearing, passenger side	1953-57	731721
Dash	1952-54	*A56010A	SWITCHES			Arm, left hand	1952-54	*732927
" " " " "	1955-57	56010A	Dipper	1952-53	31001A	" " " " "	1955-57	735111
Flasher, rear (Mk. IIC) ..	1955-57	53362A	" " " " "	1955-57	*31263A	" right hand	1952-54	*732926
Flasher, side (Mk. V) ..	1955-57	52240A	Horn and dipper Later	1953-54	*31263A	" " " " "	1955-57	735110
Head, Home			Ignition and lighting ..	1952-57	31270A	Blade	1952-57	727784
R.H.D., dip left ..	1952-54	*50985A	Knob	—	316285			
" " " " "	1955-57	50988A						

DIAMOND MOTORS Pedestrian Controlled Battery Vehicle 1951–56

Horn	1951-56	*069213	LAMPS			SWITCH		
Horn push	1951-56	76205A	Side	1951-56	52034A	Lighting	1951-56	31291A
Junction box	1951-56	78264A	Tail and number plate ..	1951-56	*53041B			

DODGE 61C, 100C and 101C 1947–48: 120C 1947: 122C 1947–48

Ammeter	1947-48	36047D	Control box .. Later	1948	37065E	SWITCHES		
Coil, ignition			Distributor	1947-48	40090A/E	Dipper	1947-48	31284A
6 volt	1947	*45016A	Fuse box (6 volt) ..	1947	*385221	Ignition and Lighting ..	1947-48	*344540
12 volt	1947-48	*45020A	Horn (6 volt)	1947	069343	Warning lights		
Control box (6 volt) ..	1947	*37063A	" (12 volt) .. Later	1947-48	069344	6 volt	1947	*38012B
" " (12 volt) Later	1947-48	*37032A				12 volt	1947-48	*38013B

* See Supersession Chart

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive



Equipment Specification

DODGE

DODGE Petrol Models 1949-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery (suitable replacement) ..	1955-57	GT9A	LAMPS—continued			SWITCHES—continued		
" " " " ..	1958	MT13A	Head, Export			Lighting and horn push (F.C.) ..	1958-60	31769B/M
Coil, ignition ..	1959-60	FRT9A-8	R.H.D., dip left ..	1950-51	*50799D	Lighting, horn push and flasher (when fitted, F.C.) ..	1958-60	*31794A/J
" " " " ..	1949-50	*45020A/B	" " " " Later ..	1951	*50959A	Panel ..	1949-54	*31276A
" " " " ..	1951-56	*45012A/B	" " " " ..	1952	*50992A	" (F.C. and S.F.C.) ..	1957	*31276A
Control box ..	1957-60	*45054A/J	" " " " ..	1953-55	51344A	" (N.C.) ..	1957	*31498A
" " " " ..	1949-50	37065E	" " " " Later ..	1956-59	51344B	Knob ..	—	312871
" " " " ..	1951-52	*37076E	L.H.D., dip right ..	1959-60	51344D/F	Panel (F.C. and N.C.) ..	1958-60	*31498A
" " " " ..	1953-57	*37139D/E	ditto (Tractor and Bus only) ..	1950-51	*A50799D	Knob ..	—	312871
" " " " Later ..	1958-60	37183H	ditto ..	1951	*50960A	Solenoid, starting motor ..	1949-60	*76411D/E
" " " " (Light Bus) ..	1959-60	*37207F	ditto ..	1951-52	*50528M	Solenoid operating ..	1949-57	*31071A
Distributor ..	1949-54	40166A	ditto ..	1953-54	*51345A	ditto (S.F.C. & N.C.) ..	1958-60	*31071A
" " " " ..	1955-56	40444A/D	ditto ..	1955	*51345B	Stop lamp ..	1953-60	31082B/E
" " " " ..	1957	40467D	ditto ..	1956-60	*51345D/F	Windshield wiper ..	1957-60	*31498A
" " " " (Australia) ..	1958-60	40444D/E	Head, Export Europe (not France) ..	1950-51	*B50799D	Knob ..	—	312872
Fuse box ..	1960	40467D	ditto ..	1951-52	*50961A	Warning lights		
" " " " ..	1949-52	*37137A	ditto ..	1951-52	*50961A	Ignition ..	1949-56	*38013B
Generator ..	1953-60	033239	ditto ..	1953-55	51346A	" (N.C.) ..	1957	38158A
" " " " ..	1949-50	*22446A	Side ..	1956-60	51346B/E	" (S.F.C.) ..	1957	38100A
" " " " ..	1951-52	*22435A/B	" " " " Later ..	1949-51	52154A	" (F.C. and N.C.) ..	1958-60	38158A
" " " " ..	1953-55	*22456A/B	" (Bus, special orders) ..	1952-53	*52079A	Windshield wipers		
" " " " ..	1956	*22483A	" (alternative) ..	1953-56	*52040A	Motor ..	1949-56	75091A
" " " " Later ..	1957-59	*22483B/D	" (S.F.C.) ..	1957-58	*52040A	Special orders (S.F.C.) ..	1957-58	75091A
Horn ..	1959-60	22489D	" (N.C. and Bus, special orders) ..	1957-58	*52079B	Knob ..	1957-60	75289A
Low note (alternative) ..	1949-60	*069399	" (F.C.) ..	1957-60	52250B	Wheelbox ..	1957-60	72660A
" " " " ..	1955	*69011J	Stop tail ..	1958-60	52321A	Crosshead and rack assy. ..	1957-60	743722
High note (optional) ..	1956-60	69046A/F	Reflex reflector ..	1949-57	Serviced by Butlers Ltd.	Outer casing ..	1957-60	743708
" " " " ..	1955	*69012J	" (N.C. S.W.B. Tipper) ..	1956-57	57032B	Motor to wheelbox ..	1957-60	743709
Horn relay (when twins fitted) ..	1956-60	*33116B	Starting motor ..	1949	26025A/H	Left hand ..	1957-60	743708
LAMPS			" " " " ..	1950-55	26050A	Right hand ..	1957-60	740746
Flasher (when fitted) ..	1958-60	53367D	Steering column control ..	1956-60	26100B	End tube ..	1949-56	735156
Head, Home			ditto (N.C.) ..	1955-58	32942A/B	" (S.F.C.) ..	1957-58	735156
R.H.D. (L.H.) ..	1949	50606B	SWITCHES	1959-60	32937B	" left hand (N.C.) ..	1957-60	745081
" (R.H.) ..	1949	50707A	Dipper ..	1949-60	31284A/B	" right hand (N.C.) ..	1957-60	745080
R.H.D., dip left ..	1950-51	*50799D	" (Australia) ..	1955	31277A	Blade ..	1949-57	727803
" " " " Later ..	1951	*50959A	Ignition and lighting ..	1949-56	*34018A/B	" (N.C.) ..	1957	*737683
" " " " ..	1952	*50992A	ditto (F.C. & S.F.C.) ..	1957-58	*34018B	" " " " ..	1958-60	741680
" " " " ..	1953-55	51344A	ditto (N.C.) ..	1957-60	31270B			
" " " " ..	1956-59	51344B	Knob ..	—	316285			
" " " " Later ..	1959-60	51344D/F						

DODGE (Perkins Diesel) P6 1951-60: P4 1958-60 (12 volt)

Battery (suitable replacement) ..	1955-57	MM17	LAMPS—continued			SWITCHES—continued		
ditto (P4) ..	1958	MT13A	L.H.D., dip right ..	1951	*A50799D	Lighting and horn push (F.C.) ..	1958-60	31769B
ditto ..	1959-60	STXT19E	" " " " Later ..	1951	*50960A	Lighting, horn push and flasher (when fitted) (F.C.) ..	1958-60	*31794A
ditto (P6) ..	1958	MM17	" " " " ..	1952	*50528M	Panel ..	1951-56	*31276A
ditto ..	1959-60	HRT21E	" " " " ..	1953-54	*51345A	" (N.C.) ..	1957-58	*31276A
Control box ..	1951-57	*37139D/E	" " " " ..	1955	*51345B	Knob ..	1957-58	*31498A
" " " " ..	1957-60	37183H	Head, Export Europe (not France) ..	1956-60	*51345D/F	Panel ..	1959-60	*31498A
" " " " (Bus, serviced by C.A.V.) ..	1960	37183K & L	ditto ..	1951	*B50799D	Knob ..	—	312871
ditto ..	1951-53	1685030	ditto ..	1951-52	*50961A	Solenoid operating (serviced by C.A.V.) ..	1951-60	1823410
Fuse box ..	1954-60	1688030	ditto ..	1953-55	51346A	Stop lamp ..	1954-60	31082B/H
Bus ..	1951-60	033239	Side ..	1956-60	51346B/E	Windshield wiper ..	1957-60	*31498A
Diesel heater (serviced by C.A.V.) ..	1951-58	*37137A	" " " " Later ..	1951	52154A	Knob ..	—	312872
" " " " ..	1959-60	1800700	" (Bus) ..	1952-53	*52079A	Warning light ..	1951-57	*38013B
Generator ..	1951-60	1800020	" (all other models) ..	1953-54	*52040A	" " " " ..	1958-60	38158A
Bus (serviced by C.A.V.) ..	1951	*22456A/B	" (Bus, special orders) ..	1954-55	53210A	Windshield wipers		
" " " " ..	1951-53	D5LFA10	" (alternative) ..	1955	*52079A	Motor ..	1951-56	75091A
Horn ..	1954-60	1130090	" (S.F.C.) ..	1956	*52040A	S.F.C. (special orders) ..	1957-58	75091A
Low note (alternative) ..	1951-60	*069399	" (N.C. and Bus, special orders) ..	1957-58	*52079B	All other models (special orders) ..	1957-60	75289A/B
High note (optional) ..	1956-60	69046A/F	" (F.C.) ..	1957-60	52250B	Wheelbox ..	1957-60	72660A
Horn relay (when twins fitted) ..	1956-60	69047A/F	Stop tail ..	1958-60	52321A	Crosshead and rack assy. ..	1957-60	743722
" " " " ..	1956-60	*33116B	Starting motor (serviced by C.A.V.) ..	1951-55	BS512L66	Outer casing ..	1957-60	743708
LAMPS			ditto ..	1956-59	1330660	Motor to wheelbox ..	1957-60	743709
Flasher (optional) ..	1958-60	53367D	ditto (P6) ..	1960	1320061	Left hand ..	1957-60	740746
Head, Home			ditto (6 ton 4-speed) ..	1960	1320080	Right hand ..	1957-60	740746
R.H.D., dip left ..	1951	*50799D	Steering column control ..	1959-60	1330661	End tube ..	1951-56	735156
" " " " Later ..	1951	*50959A	" " " " ..	1955-58	32942A/B	" (S.F.C.) ..	1957-58	735156
" " " " ..	1952	*50992A	SWITCHES	1959-60	32937B	" left hand (N.C.) ..	1957-60	745081
" " " " ..	1953-55	51344A	Dipper ..	1951-60	31284A/D	" right hand (N.C.) ..	1957-60	745080
" " " " ..	1956-59	51344B	Heater plug (serviced by C.A.V.) ..	1951-60	1823420	Blade ..	1951-56	727803
" " " " Later ..	1959-60	51344D/F	Isolating (P6) ..	1959-60	31403H	" (S.F.C.) ..	1957-58	*737683
Head, Export			Lighting and main ..	1951-56	*34018A/B	" (N.C.) ..	1958-60	741680
R.H.D., dip left ..	1951	*50799D	ditto (F.C. and S.F.C.) ..	1957-58	*34018B			
" " " " Later ..	1951	*50959A	ditto (N.C.) ..	1957-60	31270B/E			
" " " " ..	1952	*50992A	Knob ..	—	316285			
" " " " ..	1953-55	51344A						
" " " " ..	1956-59	51344B						
" " " " Later ..	1959-60	51344D/F						



Equipment Specification

DODGE

DODGE (Perkins Diesel) P6 1951-60: P4 1958-60 (12 volt)—continued

§ FUEL INJECTION EQUIPMENT (Perkins P4 Engine)					
Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1958	BPE4A60S310S6383	Primer	1958-60	HP1-1
"	1959-60	BPE4A60U310S6383	Pre-filter	1958-60	BFJSJ1-501
Governor	1958	BEPAMZ80A134	Nozzle holder	1958-60	BKB32S630
"	1959-60	BEPBMZ80A134	Nozzle	1958-60	BDL110S6133
Coupling	1958-60	BZKG31-538	Filter	1958	F2-8
Feed pump	1958-60	BFPK22P70	"	1959-60	F2B-22
Venturi	1958-60	BEPK50-50-107			
(Perkins P6 Engine)					
Fuel pump	1951	BPE6A60Q310S554	Primer	1951-57	BFPUE2-54Z
"	1952	BPE6A60Q310S6237	HP1-1	1958-60	HP1-1
"	1953-57	BPE6A60S310S6321	Pre-filter	1951-60	BFJSJ1-501
"	1957-58	BPE6A60S310S6381	Venturi	1951	BEPK50-50-65
"	1959-60	BPE6A60U310S6381	"	1952-53	BEPK50-50-77
Governor	1951	BEPMZ80A67	"	1954-58	BEPK50-50-101
"	1952-56	BEPMZ80A99	"	1959-60	BEPK50-50-107
"	1956-58	BEPAMZ80A99	Nozzle holder	1951-54	BKB35S87
"	1959-60	BEPBMZ80A133	"	1955-60	BKB32S630
Coupling	1951-60	BZKG31-538	Nozzle	1951-60	BDL110S6133
Feed pump	1951-52	BFPK22N1	Filter	1951-54	BFA5P1
"	1953	BFPK22N68	"	1955-58	F2-8
"	1954-56	BFPK22P68	"	1959-60	F2B-8
"	1957-60	BFPK22P70			

DODGE (Perkins R6 Diesel) 24 volt 1954-58: 12 volt 1959-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Control box (serviced by C.A.V.)	1954-58	1688010	LAMPS—continued			SWITCHES—continued		
Control box	1959-60	37183H	Head, Export Europe (not France)	1954	*51649A	Lighting, horn push and flasher (when fitted, F.C.)	1958	31821A
Fuse box	1960	37183K & L	ditto	1955-58	51641A	ditto	1959-60	*31794F
"	1954-55	033239	ditto	1959-60	51346B/E	Panel	1954-56	*31276A
"	1956-58	033263	Side	1954	*52154A	" (F.C. and S.F.C.)	1957	*31276A
"	1959-60	033239	"	1955	*52079A	" (S.F.C.)	1958	*31276A
" (Diesel heater, serviced by C.A.V.)	1954-60	1800020	" (alternative)	1956	*52040A	" (N.C.)	1957	*31498A
Generator (serviced by C.A.V.)	1954-58	1131090	" (S.F.C.)	1956	*52079A	Knob	1958-60	*312871
"	1959	*22456F	" (Bus)	1957-58	*52079A	Panel (F.C. and N.C.)	1958-60	*31498A
"	1959-60	22489B/D	" (alternative, S.F.C.)	1957	*52040A	Knob	—	312871
" (power steering, serviced by C.A.V.) (F.C.)	1958	1108020	" (N.C. and Bus, special orders)	1958	*52040A	Solenoid operating (serviced by C.A.V.)	1954-60	1823410
" (power steering, F.C.)	1959	*22524A/F	" (N.C.)	1957-58	52251B	Stop lamp	1954-57	31082D/E
ditto	1960	22528A/D	" (F.C.)	1959-60	52250B	"	1958	31486A
Horn	1954-58	069405	"	1958	52284A	"	1959-60	31082E
"	1959-60	*069399	Reflex reflector	1956-57	57032A	Windshield wiper	1957-60	*31498A
Low note (alternative)	1955	*69041B	Tipper)	1958-60	57044A/B	Knob	1958	312872
"	1956-58	69055A	Starting motor (serviced by C.A.V.)	1954-55	1332880	Warning light	1959-60	38158A
"	1959-60	69046F	ditto	1956-58	1332990			
High note (optional)	1955	*69042B	ditto	1959-60	1320061	Windshield wipers (special orders)	1954-56	75202A
"	1956-58	69056A	Steering column control	1955-58	32756A	Motor	1957-58	75202A
"	1959-60	69047A	ditto	1958	32756B/D	" (S.F.C.)	1957-58	75290A/B
Horn relay (when twins fitted)	1956-58	*33164A	ditto	1959-60	32937B	" (N.C.)	1959-60	75289B
ditto	1959-60	*33116B				Wheelbox (N.C.)	1957-60	72660A
LAMPS			SWITCHES			Crosshead and rack assy. (N.C.)	1957-60	743722
Flasher (optional)	1958	53368D	Dipper	1954-60	31284A/D	Outer casing		
"	1959-60	53367D	Heater plug (serviced by C.A.V.)	1954-60	1823420	Motor to wheelbox	1957-60	743708
Head, Home	1954	*51650A	Isolating (F.C.)	1958-60	31403F/H	Left hand (N.C.)	1957-60	743709
R.H.D., dip left	1955-58	51639A/D	Lighting and main	1954-56	*34018B	Right hand (N.C.)	1957-60	740746
"	1959-60	51344D/F	ditto (F.C. & S.F.C.)	1957	*34018B	End tube (N.C.)	1954-56	735156
Head, Export	1954	*51650A	ditto (S.F.C.)	1958	*34018B	Arm	1954-56	735156
R.H.D., dip left	1955-58	51639A/D	ditto (N.C.)	1957-60	31270B	" (S.F.C.)	1957-58	735156
"	1959-60	51344D/F	Knob	—	316285	" left hand (N.C.)	1957-60	745081
L.H.D., dip right	1954	*51648A	Lighting and horn push (F.C.)	1958	31809A	" right hand (N.C.)	1957-60	745080
"	1955-58	51640A/B	ditto	1959-60	31769K	Blade	1954-56	727803
"	1959-60	*51345D/F				" (S.F.C.)	1957-58	727803
						" (N.C.)	1957	*737683
						"	1958-60	741680

§ FUEL INJECTION EQUIPMENT (Perkins R6 Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1954	BPE6A70R320S6302	Feed pump	1954-55	BFPK22P68
"	1955-57	BPE6A70R320S6360	"	1956-60	BFPK22P70
"	1957-58	BPE6A70R320S6387	Primer	1954-57	BFPUE2-54Z
"	1959-60	BPE6A70T320S6387	"	1958-60	HP1-1
Governor	1954	BEPAMN80A122	Pre-filter	1954-60	BFJSJ1-501
"	1955	BEPMZ80A130	Nozzle holder	1954-60	BKB32S630
"	1956	BEPMZ80A146	Nozzle	1954-60	BDL10S6125
"	1956-58	BEPAMZ80A136	Filter	1954-58	F2-8
"	1959-60	BEPBMZ80A136	"	1959-60	F2B-22
Coupling	1954-60	BZKG31-538			

* See Supersession Chart
S.F.C. .. Semi-Forward Control

† When ordering, quote voltage
S.W.B. .. Short Wheelbase

§ Serviced by C.A.V. Ltd.
L.H.D. .. Left hand drive

F.C. .. Forward Control
R.H.D. .. Right hand drive

N.C. .. Normal Control

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

DODGE—ELVA

DODGE (Leyland 0.350 Diesel) 24 volt 1958–60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery (suitable replacement)	1958	MT11A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
ditto	1959-60	MT13A	Head, Export			Lighting, horn push and flasher (when fitted, F.C.)	1958-60	31821A/E
ditto (Heavy Bus)	1959-60	HRT21E	R.H.D., dip left	1958-60	51639B/E	Panel	1958-60	*31498A
ditto (Finland)	1959-60	MT21E	L.H.D., dip right	1958-60	51640B/E	Knob	—	312871
Control box (serviced by C.A.V.)	1958-60	1688010	Head, Export Europe (not France)	1958-60	51641B/E	Solenoid operating (serviced by C.A.V.)	1958-60	1823410
Fuse box	1958-60	033263	Side (F.C.)	1958-60	52284A	Stop lamp	1958-60	31486A
Generator (serviced by C.A.V.)	1958-60	1131060	" (N.C.)	1958-60	52251A	Windshield wiper	1958-60	*31498A
ditto (power steering)	1959-60	1108020	Reflex reflector	1958-60	57044A	Knob	—	312872
Horn			Starting motor (serviced by C.A.V.)	1958	1333310	Warning light	1958-60	38186A
Low note	1958-60	69055F	ditto	1959-60	1333311			
High note (optional)	1958-60	69056F	Steering column control (N.C.)	1958	32756A/D	Windshield wiper (N.C.)	1958-60	75290A/B
Horn relay (when twins fitted)	1958-60	*33164A	ditto	1959-60	32937B	Wheelbox	1958-60	72660A
LAMPS						Crosshead and rack assy.	1958-60	743722
Flasher (when fitted, F.C.)	1958	53368D	SWITCHES			Outer casing	—	
" " " "	1959-60	53494B	Dipper	1958-60	31284A	Motor to wheelbox	—	
Head, Home			Lighting and main (N.C.)	1958	31270B	Left hand	1958-60	743708
R.H.D., dip left	1958-60	51639B/E	" " " Later	1958-60	31790A	Right hand	1958-60	743709
			Knob	—	316285	End tube	1958-60	740746
			Lighting and horn push (F.C.)	1958-60	31809A/F	Arm, left hand	1958-60	745081
						" right hand	1958-60	745080
						Blade	1958-60	741680
§ FUEL INJECTION EQUIPMENT (Leyland 0.350 Engine)								
Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1958-60	AAL6B75-66EL	Feed pump	1958-60	DFP6-3			
Governor	1958-60	RPB20A						

DOUGLAS 15/20/25 cwt. Electric Vehicles 1949

Horn	1949	*069213	SWITCHES			Windshield wiper		
LAMPS			Dipper	1949	31001A	Motor	1949	*75120A
Side	1949	52102A	Stop lamp	1949	31281B	Arm	1949	*735049
Tail and number plate	1949	*53041B	Spring	—	315543	Blade	1949	727802

DOUGLAS Battery Vehicle 1950–54

Fuse box	1950-54	*37137A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Horn	1950-54	*069213	Side	1950-54	52102A	Stop lamp	1950-54	31281B
Horn push	1950-54	76205A	Stop tail and number plate	1950	*53076E	Spring	—	315543
LAMPS			Tail and number plate	1951-54	*53041B			
Head, Home			Mirror	1950-54	62515A	Windshield wiper		
R.H.D., dip left	1950-51	50874A	SWITCHES			Motor	1950-54	*75120A
" " "	1952-54	*50959A	Dipper	1950-53	31001A	Arm	1950-54	*735049
						Blade	1950-54	727802

DOUGLAS 'Handyvan' 1949–50

Horn	1949-50	70048D	SWITCHES			Windshield wiper		
LAMPS			Lighting and main	1949-50	34055A	Motor	1949-50	*75095A
Dash	1949-50	*A56044A	Stop lamp	1949-50	31281B	Arm	1949-50	*735096
Side	1949-50	A52036A	Spring	—	315543	Blade	1949-50	727802
Tail and number plate	1949-50	*A53007B						

ELVA 'Courier' (B.M.C. 1,500 c.c. Engine) 1959–60

Ammeter	1959	*36092A	Horn			LAMPS— <i>continued</i>		
"	1960	36266A/B	Low note	1959-60	69046F	Head, Home		
Battery	1959-60	BT7A	High note	1959-60	69047F	R.H.D., dip left	1959-60	*58232A/B
Coil, ignition	1959-60	*45053K	Horn relay	1959-60	*33116B	Head, Export		
Control box	1959-60	37182J & K				R.H.D., dip left	1959-60	*58232A/B
Distributor	1959	40600A	LAMPS			Head, Export U.S.A.	1959-60	51343B/E
" " " Later	1959-60	40600B/D & F	Flasher, front and rear	1959-60	52337A	Number plate illumination	1959-60	53093H/J
" " " "	1960	40600E & H	Flasher, front (U.S.A.)	1959-60	52345A	Side	1959-60	52325B
Fuse box	1959-60	033239	Flasher, rear (U.S.A.)	1959-60	53600A/E	Stop tail	1959-60	53330D
Generator	1959-60	22265D/E				Starting motor	1959-60	25022M

* See Supersession Chart
L.H.D. . . Left hand drive

§ Serviced by C.A.V. Ltd. F.C. . . Forward Control N.C. . . Normal Control
R.H.D. . . Right hand drive
Note. Before ordering Steering Column Controls refer to the detailed parts section (P)

continued



Equipment Specification

ELVA—FAIRTHORPE

ELVA 'Courier' (B.M.C. 1,500 c.c. Engine) 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wiper		
Direction indicator ..	1959-60	*31367B	Solenoid, starting motor	1959-60	*76411E	Motor	1959-60	75297E
Horn push and dipper ..	1959-60	31438B	Solenoid operating ..	1959-60	31363B	Wheelbox	1959-60	72693D
Ignition and lighting ..	1959-60	31270A	Stop lamp	1959-60	31440D	Crosshead and rack assy.	1959-60	743221
Knob	—	316285	Windshield wiper ..	1959-60	*31554A	Outer casing		
Panel	1959-60	*31554A	Knob	—	313690	Motor to wheelbox ..	1959-60	54711632
Knob	—	316135	Trafficators (when fitted)	1959-60	54044E	Wheelbox to wheelbox	1959-60	744219
						End tube	1959-60	740746
						Arm	1959-60	*741834
						Blade	1959-60	737897

ENCON MOTORS 'Clipper' 1954

Control box	1954	*37127H	SWITCHES			SWITCHES—continued		
Generator	1954	22008B	Starting motor	1954	76423A	Stop lamp	1954	31082D
Starting motor	1954	25037A	Coupling	—	764428			

FAIRTHORPE 'Electron' and 'Electron Minor' 1958-60

Ammeter	1958-59	*36117A	LAMPS			SWITCHES—continued		
" Later	1959-60	36264A	Head, Home			Lighting Later	1959-60	31788A
Coil, ignition	1958-59	*45054K	R.H.D., dip left ..	1958-60	58247A/D	Knob	—	316154
" Later	1959-60	45102E	Head, Export			Starting motor	1958-60	76427D
Control box	1958	37183H	R.H.D., dip left ..	1958-60	58247A/D	Stop lamp	1958-60	31082E/H
"	1959	37283B	L.H.D., dip right ..	1958-59	58190A	Windshield wiper ..	1959-60	*31851A
" Later	1959-60	37290D/E	" Later	1959-60	58190B/E			
Distributor ('Electron') ..	1958	40465A	Head, Export U.S.A. ..	1958-60	51343B/E	Warning light (oil) ..	1959-60	38192A
"	1959	40566B	Number plate illumination	1959-60	53093J			
" Later	1959-60	40677A	Stop tail and reflex ..	1958-60	53330D	Windshield wipers		
" ('Minor') ..	1958-59	40598B/D	Starting motor ..	1958	25022M	Motor		
" Later	1959-60	40638A/B & D	" .. ('Electron') ..	1959-60	25063F	'Electron' (optional) ..	1958-59	75296D
" (high compression) ..	1959-60	40611B	" .. ('Minor') ..	1959-60	25022N/Q	'Minor' (optional) ..	1958-59	*75244A
Flasher unit	1958-60	35020A	Steering column control ..	1958-59	*32750B	Both models .. Later	1959-60	75371A
Generator	1958	22258F	SWITCHES			Wheelbox	1958-60	*72674A
" ('Electron') ..	1959-60	22296A	Dipper	1958-59	31284D	Crosshead and rack assy.	1958-59	*743225
" ('Minor') ..	1959-60	*22297A	" Later	1959-60	31800A	'Electron'	1959-60	743235
Horn			Flasher	1958-59	*31635A	Both models .. Later		
Low note (optional) ..	1959-60	69046F	" Later	1959-60	31743B	Outer casing		
High note (optional) ..	1959-60	69047F	Ignition	1958-59	*31449E	Motor to wheelbox ..	1958-60	54710362
Horn relay (when fitted)	1959-60	33188A	" Later	1959-60	*31934A	Wheelbox to wheelbox	1958-60	54710363
			Ignition and lighting ..	1958	31270B	End tube	1958-60	740746
			Lighting	1958-59	*31251D	Arm		
			Knob	—	316154	'Electron'	1958-59	742298
						'Minor'	1958-59	745075
						Both models .. Later	1959-60	745071
						Blade	1958-60	738734

FAIRTHORPE 'Atomota' 1959-60: 'Zeta' 1960

Ammeter	1959	*36117A	LAMPS—continued			SWITCHES—continued		
" Later	1959-60	36264A	Head, Export			Starting motor	1959-60	76427D
Coil, ignition	1959	*45054K	R.H.D., dip left ..	1959-60	58247A/D	Stop lamp	1959-60	31082H
"	1960	45102E	L.H.D., dip right ..	1959-60	58190B/E	Windshield wiper ..	1959-60	*31851A
Control box	1959-60	37283B	Head, Export U.S.A. ..	1959-60	51343B/E			
" Later	1960	37290D/E	Number plate illumination	1959-60	53093H/J	Windshield wipers		
Distributor			Stop tail and reflex ..	1959-60	53330D	(optional)		
'Atomota'	1959-60	40352E	Starting motor	1959-60	25065A	Motor	1959	75296D
'Zeta' (high compression)	1960	40633A/E	Steering column control ..	1959-60	*32750B	"	1960	75371A
" (low compression)	1960	40634A/D	SWITCHES			Wheelbox	1959-60	*72674A
Flasher unit	1959-60	35020A	Dipper	1959	31284D	Crosshead and rack assy.	1959	*743225
Generator ('Atomota') ..	1959-60	22258F/H	"	1960	31800A	"	1960	743235
" ('Zeta') ..	1960	*22297A	Flasher	1959	*31635A	Outer casing		
Horn			"	1960	31743B	Motor to wheelbox ..	1959-60	54710362
Low note (optional) ..	1959-60	69046F	Ignition	1959	*31449E	Wheelbox to wheelbox	1959-60	54710363
High note	1959-60	69047F	"	1960	*31934A	End tube	1959-60	740746
Horn relay (when fitted)	1959-60	33188A	Lighting	1959	*31251D	Arm	1959	742298
			"	1960	31788A	"	1960	745071
			Knob	1959-60	316154	Blade	1959-60	738734

* See Supersession Chart

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive



GEORGE FITT Invalid Carriage (Villiers Mk. VI Engine) 1951–55

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Horn	1951-55	*70001D	LAMPS— <i>continued</i>			SWITCHES		
Horn push	1951-55	76210A	Side	1951-52	*A52154A	Lighting	1951-55	*31159A
			" Later	1952-55	*A52105A	Knob	—	*315044
LAMPS			Tail and number plate ..	1951-55	53140B	Solenoid, starting motor (De Luxe)	1951-55	76421B
Head, Home			Starting motor (De Luxe)	1951-55	25037A/B	Solenoid operating (De Luxe)	1951-55	*31071A
R.H.D., dip left ..	1951-55	*50292D						

FRAZER NASH 'Mille Miglia', 'Targa Florio', 'Sebring' and Hard Top 1955

Battery	1955	GT7A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Bulb holder, panel light ..	1955	39007A	Head, Export			Ignition and lighting ..	1955	*34014B
Bulb	—	987	R.H.D., dip left ..	1955	50825A	Panel	1955	31201D
Coil, ignition	1955	*45039A	L.H.D., dip right ..	1955	A50825A	Knob	—	314026
Control box	1955	*37138D	Head, Export Europe (not France)	1955	B50825A	Solenoid, starting motor	1955	*76411E
Distributor	1955	40346A	ditto (alternative) ..	1955	51535A	Solenoid operating ..	1955	*31112E
Fuse box	1955	*37137A	Head, Export U.S.A. ..	1955	50942A	Warning lights		
Generator	1955	22258D	Number plate illumination	1955	53093E	Ignition	1955	*38015B
Horn			Side and flasher	1955	*52162B	Main beam	1955	38018B
Low note	1955	*69011J	Stop tail, flasher and reflex	1955	53377A	Windshield wiper		
High note	1955	*69012J	Petrol reserve valve ..	1955	78025A	Motor	1955	75158A
Horn relay	1955	*33116B	Starting motor	1955	25026B	Wheelbox	1955	72629A
LAMPS			Steering column control ..	1955	*32829B	Crosshead and rack assy. Cut to 33½"	1955	736177
Dash	1955	*56021A	SWITCHES			Outer casing		
Head, Home			Dipper	1955	31284A	Motor to wheelbox ..	1955	*739832
R.H.D., dip left (L.H.)	1955	50825A	Flasher	1955	31311A	Wheelbox to wheelbox 3", offside wheelbox ..	1955	739973
" non-dip (R.H.)	1955	*50826A				Wheelbox to wheelbox 3", offside wheelbox ..	1955	740031
						Arm	1955	*736418
						Blade	1955	*737653

FRISKY Saloon 1958: Coupé 1959: 'Family Three' 1960

Flasher unit	1958	35012A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
"	1959-60	35024A	Stop tail and reflex ..	1958-60	53520D	Windshield wiper ..	1958-60	*31515A
Horn	1958-60	70141B	Steering wheel centre ..	1958-60	33504A	Knob	—	*318167
Horn push	1958-60	76205D	SWITCHES			Warning lights		
Junction box	1958-59	78266A	Flasher	1958-60	31743D	Flasher (green)	1958-60	38191A
LAMPS			Ignition	1958-59	31974B	Ignition (red)	1958-60	38189A
Flasher (side)	1958-60	52424A	"	1960	31973B	Main beam (dark red) ..	1958-60	38190A
Head, Home			Lighting	1958-60	*31822D	Neutral gear (green) ..	1958-60	38191A
R.H.D., dip left ..	1958-60	58267B/E	Knob	—	316133	Oil (amber)	1958-59	38192A
Head, Export U.S.A. ..	1958-59	*51337D/E	Stop lamp	1958-60	31082J	Reverse gear (amber) ..	1958-59	38192A

LEONARD GUNDLE 'Handy Motor' 3-wheel Delivery Van 1951–55

Battery	1951-55	PUW7E-4	LAMPS			LAMPS— <i>continued</i>		
Horn	1951-54	*70001D	Head, Home	1951-54	55043E	Tail and number plate ..	1951-52	*53041B
"	1955	70048F	"	1955	*55098A	" Later	1952-55	*53007B
Horn push	1951-55	76210A	Side	1951-55	52036A	SWITCH		
						Lighting	1951-55	31224B

HARBOROUGH CONSTRUCTION Battery Vehicle (12 volt) 1951–54

Horn	1951-54	*069213	LAMPS			SWITCH		
Horn push	1951-54	*31071A	Side	1951-54	52034A	Lighting	1951-54	31291A
Junction box	1951-54	78264A	(alternative)	1951-54	52102A			
			Tail and number plate ..	1951-54	*53041B			



HEALEY 16 h.p. Roadster 1948-49

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1948-49	*369047	LAMPS—continued			SWITCHES—continued		
Battery	1948-49	SLG11E	Reverse, tail and number plate	1948-49	53116A	Solenoid operating ..	1948-49	*31151A
Coil, ignition	1948-49	*45012A/D	Roof	1948-49	*56017B	Stop lamp	1948	31281B
Control box	1948-49	37065E	Side and pass	1948-49	50417F	Spring	—	315543
Distributor	1948-49	40081A/F	Stop tail and number plate	1948-49	53117A	Windshield wiper ..	1948	*31131A
Fuse box	1948-49	*385221	Mirror	1948-49	*580651	Knob	—	31201B
Generator	1948-49	*22447A	Starting motor	1948-49	*270299	Terminal block	1948-49	*315998
Horn			Steering column control ..	1948-49	*32772A			37082A
Low note	1948-49	*69021A				Warning lights		
High note	1948-49	*69022A				Alpine	1948	*38019B
LAMPS			SWITCHES			Flasher (U.S.A.) ..	1949	*38042A
Head, Home			Alpine	1948	*31135A	Ignition	1948-49	*38013B
R.H.D., dip left (L.H.)	1948	*50445K	Dipper	1948-49	31284A	Main beam	1949	*38013B
non-dip (R.H.)	1948	*50446K	Foglamp	1948	*31130A			
dip left (Sports lens)	1948	*50694F	Knob	1949	31201B	Windshield wiper		
non-dip (Sports lens)	1948	*50695F	Ignition	1949	31287A	Motor	1948-49	75062J
dip left (L.H.)	1949	*50793B	Ignition and lighting	1948	*34018A	Wheelbox	1948-49	*72548A
non-dip (R.H.)	1949	*50362F	Lighting	1949	31091B	Crosshead and rack assy.	1948-49	736307
Head, Export			Panel	—	316113	Outer casing		
R.H.D., dip left	1948	*50445K	Knob	1948	*78218A	Motor to wheelbox ..	1948-49	*739855
L.H.D., dip right	1948	*A50445K	Panel	—	*768500	Wheelbox to wheelbox	1948-49	*739971
Head, Export Europe (not France)	1948	*B50445K	Knob	1949	31201B	3", offside wheelbox	1948-49	740031
			Knob	—	*315997	Grommet, wheelbox	1948-49	733695
			Petrol reserve valve	1948-49	*31133A	Arm	1948-49	*736416
			Solenoid, starting motor	1948-49	76022A	Blade	1948-49	736414

HEALEY 16 h.p. Saloon 1948-49

Ammeter	1948-49	*369270	LAMPS—continued			SWITCHES—continued		
Battery	1948-49	SLG11E	Head, Export			Solenoid operating ..	1948-49	*31112A
Coil, ignition	1948-49	*45012A/D	R.H.D., dip left ..	1948	*50445K	Stop lamp	1948	31281B
Control box	1948-49	7065E	L.H.D., dip right ..	1948	*A50445K	Spring	—	315543
Distributor	1948-49	40081A/F	Head, Export Europe (not France)	1948	*B50445K	Trafficator	1948-49	031046
Fuse box	1948-49	*385221	Reverse, tail and number plate	1948-49	53116A	Windshield wiper ..	1948	314091
Generator	1948-49	*22447A	Roof	1948-49	*56017B	Knob	—	31201B
Horn			Side and pass	1948-49	50417F	Terminal block	1948-49	*315998
Low note	1948-49	*69021A	Stop tail and number plate	1948-49	53117A	Trafficators	1948	37082A
High note	1948-49	*69022A	Starting motor	1948-49	*270299		1948	54022D
			Steering column control ..	1948-49	*32772A	Warning light	1948-49	*54018D
LAMPS			SWITCHES					318534
Head, Home			Dipper	1948-49	31284A	Windshield wiper		
R.H.D., dip left (L.H.)	1948	*50445K	Foglamp	1948	*31130A	Motor	1948-49	*75062J
non-dip (R.H.)	1948	*50446K	Knob	1949	31201B	Wheelbox	1948-49	*72548A
dip left (Sports lens)	1948	*50694F	Ignition	—	*315996	Crosshead and rack assy.	1948-49	736177
non-dip (Sports lens)	1948	*50695F	Ignition and lighting	1949	31287A	Cut to 34 1/8" ..	1948-49	736177
dip left (L.H.)	1949	*50793B	Lighting	1948	*34036A	Outer casing		
non-dip (R.H.)	1949	*50362F	Panel	1949	31091B	Motor to wheelbox ..	1948-49	739870
			Knob	—	*316113	Wheelbox to wheelbox	1948-49	739937
			Petrol reserve valve	1948-49	*31134	3", offside wheelbox	1948-49	740031
			Solenoid, starting motor	1948-49	76022A	Grommet, wheelbox	1948-49	729423
						Arm	1948-49	*737481
						Blade	1948-49	736414

HEALEY 'Sportsmobile' 1949

Ammeter	1949	*369270	Starting motor	1949	*270299	Terminal block	1949	37082A
Battery	1949	SLG11E	Steering column control ..	1949	32749A/H	Trafficators	1949	*54018D
Coil, ignition	1949	*45012A/D	SWITCHES			Warning lights		
Control box	1949	37065E	Dipper	1949	31284A	Ignition	1949	*38015B
Distributor	1949	40081A/F	Foglamp	1949	31201B	Petrol reserve	1949	*38015B
Fuse box	1949	*385221	Knob	—	*315996	Trafficator	1949	38018A
Generator	1949	*22447A	Ignition and lighting	1949	*34051A	Windshield wiper		
Horn			Interior light	1949	31201B	Motor	1949	*75064J
Low note	1949	*69021A	Knob	—	*314683	Wheelbox	1949	*72548A
High note	1949	*69022A	Map light	1949	31201B	Crosshead and rack assy.	1949	736177
LAMPS			Knob	—	*314683	Cut to 34 1/8" ..	1949	736177
Head, Home			Panel	1949	31201B	Outer casing		
R.H.D., dip left	1949	*50445K	Knob	—	*315997	Motor to wheelbox ..	1949	739870
Side	1949	*52118A	Petrol reserve valve	1949	*31133A	Wheelbox to wheelbox	1949	*739960
(U.S.A.)	1949	*52130A	Reverse lamp	1949	*31077D	3", offside wheelbox	1949	740031
Stop tail and reverse	1949	*53143B	Solenoid operating	1949	*317063	Grommet, wheelbox	1949	729423
ditto (U.S.A.) ..	1949	*53145B	Trafficator	1949	031046	Arm	1949	737575
			Windshield wiper	1949	31201B	Blade	1949	*738719
			Knob	—	*315998			

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

HEALEY—HILLMAN

HEALEY 'Silverstone' 1950

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1950	*36018B	LAMPS—continued			SWITCHES—continued		
Battery	1950	SLG11E	Number plate illumination	1950	53093D	Windshield wiper ..	1950	31201B
Coil, ignition	1950	*45012A/D	Side	1950	52139E	Knob	—	*315998
Control box	1950	37076E	Stop tail	1950	*53151B/D	Warning lights		
Distributor	1950	40081A/F	Mirror	1950	*580733	Ignition	1950	*38013B
Generator	1950	*22435A/B	Starting motor	1950	*270299	Main beam	1950	38052B
Horn	1950	*069213	Steering column control ..	1950	*32829A	Petrol reserve	1950	*38042A
			ditto Later	1950	*32772A	Windshield wiper		
LAMPS			SWITCHES			Motor	1950	*75084K
Head, Home			Dipper	1950	*31267A	Wheelbox	1950	72590A
R.H.D., dip left (L.H.)	1950	*50895B	Ignition and lighting ..	1950	31194A	Crosshead and rack assy.	1950	736364
" non-dip (R.H.)	1950	*50896B	Knob	—	316285	Outer casing		
Head, Export			Panel	1950	31201B	Motor to wheelbox ..	1950	*739832
R.H.D., dip left ..	1950	*50895B	Knob	—	*315997	3", offside wheelbox ..	1950	740031
L.H.D., dip right ..	1950	*A50895B	Petrol reserve valve ..	1950	*31133A	Arm	1950	*737571
Head, Export Europe			Starting motor	1950	76423A	Blade	1950	*737482
(not France)	1950	*B50895B	Coupling	—	764428			
Head, Export U.S.A. ..	1950	50873B						

HEALEY 'Tickford' Saloon 1951-54

Ammeter	1951-54	*36110A	LAMPS—continued			SWITCHES—continued		
Battery	1951-54	SLG11E	Stop tail	1951-52	*53204A/B	Solenoid operating ..	1951-54	*31112A
Coil, ignition	1951-54	*45012A/D	" Later	1952-54	53174E	Trafficator	1951-54	031046
Control box	1951-54	37065E	Mirror	1951	062556	Windshield wiper ..	1951-54	31201B
Distributor	1951-54	40081A/F	Panel light bulb holder ..	1951-54	39007A	Knob	—	*315998
Fuse box	1951-54	*37137A	Petrol reserve valve ..	1951-54	78022A	Terminal block	1951-54	37082A
Generator	1951-52	*22435A/B	Starting motor	1951-54	26043A	Trafficators	1951-54	*54039A
" Later	1952-54	*22456A/B	Steering column control ..	1951	*32772A	Warning lights		
Horn			"	1952-54	32875A/D	Alpine	1951-54	38018B
Low note	1951-53	*69021A	SWITCH S			Ignition	1951	*318534
"	1954	*69011F	Dipper	1951-54	31284A	"	1952-54	38046A
High note	1951-53	*69022A	Foglamp	1951-54	31201B	Windshield wiper		
"	1954	*69012F	Knob	—	*315996	Motor	1951-54	*75067L
LAMPS			Ignition	1951-54	31287A	Wheelbox	1951-54	*72548A/K
Fog	1951	55043E	Interior light	1951-54	31201B	Crosshead and rack assy.		
Head, Home			Knob	—	*314683	Cut to 48"	1951-54	738499
R.H.D., dip left ..	1951	50973A	Lighting	1951-54	31091B	Outer casing		
" Later	1951	50982A	Knob	—	*316113	Motor to wheelbox ..	1951-54	*739907
"	1952-54	51065A	Panel	1951-54	31201B	Wheelbox to wheelbox ..	1951-54	*739961
Interior	1952-54	56047A	Knob	—	*315997	3", offside wheelbox ..	1951-54	740031
Number plate illumination	1951-54	53097D/E	Petrol reserve	1951-54	*31134A	Arm	1951-54	*737481
Roof	1951	*56017A	Solenoid, starting motor	1951-54	*76411D	Blade	1951-54	736414
Side	1953-54	52139A/F						

HEALEY 'Abbot' Drophead Coupé 1952-54

Ammeter	1952-54	*36110A	LAMPS—continued			SWITCHES—continued		
Battery	1952-54	SLG11E	Panel light bulb holder ..	1952-54	39007A	Windshield wiper ..	1952-54	31201B
Coil, ignition	1952-54	*45012A/D	Petrol reserve valve ..	1952-54	78022A	Knob	—	*315998
Control box	1952-54	37065E	Starting motor	1952-54	26043A	Terminal block	1952-54	37082A
Distributor	1952-54	40081A/F	Steering column control ..	1952-54	32875A/D	Trafficators	1952-54	*54039A
Fuse box	1952-54	*37137A	SWITCHES			Warning lights		
Generator	1952	*22435A/B	Dipper	1952-54	31284A	Alpine	1952-54	38018B
" Later	1952-54	*22456A/B	Foglamp	1952-54	31201B	Ignition	1952-54	38046A
Horn			Knob	—	*315996	Windshield wiper		
Low note	1952-53	*69021A	Ignition	1952-54	31287A	Motor	1952-54	*75067L
"	1954	*69011F	Interior light	1952-54	31201B	Wheelbox	1952-54	*72548A/K
High note	1952-53	*69022A	Knob	—	*314683	Crosshead and rack assy.		
"	1954	*69012F	Lighting	1952-54	31091B	Cut to 48"	1952-54	738499
LAMPS			Knob	—	*316113	Outer casing		
Head, Home			Panel	1952-54	31201B	Motor to wheelbox ..	1952-54	*739907
R.H.D., dip left ..	1952-54	51065A	Knob	—	*315997	Wheelbox to wheelbox ..	1952-54	*739961
Interior	1952-54	56047A	Petrol reserve	1952-54	*31134A	3", offside wheelbox ..	1952-54	740031
Number plate illumination	1952-54	53097D/E	Solenoid, starting motor	1952-54	*76411D	Grommet, wheelbox ..	1952-54	729423
Side	1952-54	52139A/F	Solenoid operating ..	1952-54	*31112A	Arm	1952-54	*736418
Stop tail	1952	*53204A/B	Trafficator	1952-54	031046	Blade	1952-54	736414
" Later	1952-54	53174E						

HILLMAN 'Minx' All Models 1946-57: De Luxe Series III 1958-59

Ammeter	1953-54	36170A	Control box	Later	1948-51	37065E	Generator	1946-47	22449A
"	1955-56	36197A	"	"	1951-55	*37138B/D	"	1948	*22411A
"	1957-58	*36210A	"	"	1955-59	37182A/H	" Later	1948-49	*22250A
(special order,			Distributor				"	1949-51	*22250E/F
G.P.O. Estate Car)	1959	36248A	S.V. Engine	1946-54	*40050A/J		"	1951-56	22258D
Battery	1946-47	SG9A	" (Special and				"	1957-59	22258E/F
"	1948-49	GT9A	Estate Car)						
"	1950-58	GT7A	O.H.V. Engine	1955-56	*40050J				
"	1959	BT7A	" (low	1955-56	*40428A/B				
" (cold climates)	1959	BT9A	compression)	1956-59	40492A				
Bulb holder	1954-57	39007A	O.H.V. Engine (high				Horn		
Speedometer	1959	*54940878	compression)	1957-59	40530A		Low note	1946-48	069344
Warning lights ..	1959	281	Flasher unit	1953-55	*35003A		" Later	1948-54	*69011F
Bulb	1946-48	*45012A/D	"	1956	*35004A		"	1955-59	69046A/F
Coil, ignition	1949-56	*45020A	"	1957-59	35011A		High note (optional)	1948-54	*69012F
"	1957-59	*45053H/K	Flasher relay	1953-57	33117A/D		"	1955-59	69047A/F
Control box	1946-47	*37031A	Fuse box	1951-57	033239		Horn relay (when twins		
"	1948	37057E	"	1958-59	033277		fitted)	1955-59	*33116B
			" (manumatic gear)	1959	033239		Inspection lamp sockets		
							(G.P.O. Estate Car) ..	1954-56	38604A
							"	1957	39507A

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

HILLMAN

HILLMAN 'Minx' All Models 1946-57: De Luxe Series III 1958-59—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			LAMPS—continued			SWITCHES—continued		
Head, Home			Stop tail	1948	53049A	Windshield wiper	1948	*31108A
R.H.D., dip left (L.H.)	1946	*50153A	" " ('Magnificent')	1948	*53134A	Knob	—	*315076
" non-dip (R.H.)	1946	*50154A	" " " " Later	1949-53	53172A	Windshield wiper	Later	1948-53
" dip left (L.H.)	1947	50511A	" " (Estate Car)	1954	53178B/D	Knob	—	*315077
" non-dip (R.H.)	1947	50512A	" " " " Later	1956	53178F	Windshield wiper	Later	1953-58
" dip left (L.H., Estate Car)	1947	*50515A	" " " " Later	1949-57	53178B/F	Knob	—	*31261A/D
" non-dip (R.H., Estate Car)	1947	*50516A	Stop tail and flasher (U.S.A. and Canada)	1953-56	53178B/F	" " " "	1959	*31515A
" dip left (L.H.)	1948	*50360B	Stop tail, flasher and reflex Red	1957	53444A/D	" (ivory)	1953-56	317456
" non-dip (R.H.)	1948	*50361A	Amber (later, except N. America)	1957-58	53540A	" (grey)	1957	316521
" dip left (L.H., 'Magnificent')	1948-49	*50792B	N. America	1958	53444D	" " " "	1957-58	313662
" non-dip (R.H., 'Magnificent')	1948-49	*50578E	Stop tail, flasher and reflex N. America	1959	*53715B	" " " "	1959	54330939
" dip left (L.H.)	1949	50572F	Stop tail, flasher and reflex	1959	*53752B	Trafficators	1946-48	*54009B
" non-dip (R.H.)	1949	*50573F	ditto (Special)	1954-55	53305B/E	" " " "	1948-49	*54018D
" dip left (L.H., Later)	1949-50	*50445K	ditto (Estate Car)	1956	53305B/E	" " " "	1950-51	*54040A
" non-dip (R.H., Later)	1949-50	*50446K	Stop tail and number plate	1946-47	*524753	" " " "	1951-53	*54048A
" dip left (L.H. and R.H.)	1951	*50954A	ditto (Estate Car)	1948	*53060A	" " " "	1953-54	*54049A
R.H.D., dip left (L.H. and R.H.)	1952-53	50941A	Mirror	1946-51	062556	" " " "	1955-56	54050A
" " " " Later	1953-55	51336A	Rear reflectors (U.S.A. and Canada)	1949-54	65424B	" (Estate Car)	1946-47	*053830
" " " " " "	1956	51736B/D	Reflex reflector (Estate Car)	1954-56	*57035A	Warning lights		
" " " " " "	1957-58	51777B/F	ditto	1957	57095A	Flasher	1951-54	*38092A
" " " " " "	1959	51777H/K	Starting motor	1946-47	*250603	" " " "	1955-56	38119A
Head, Export			" " " " Later	1948	25016A	" " " "	1959	38191A
Double dip (L.H. and R.H.)	1947	50519A	" " " " " "	1948-49	*25024A	Ignition	1959	38189A
R.H.D., dip left (L.H. and R.H.)	1948	*50360B	" " " " " "	1949-57	25022A/L	Main beam	1951-53	*38069A
" " " " " "	1948-49	*50792B	Steering column control	1957-59	25022M	" " " "	1954	38053B
" " " " " "	1950-51	*50445K	Home	1946	*323801	" " " "	1955-56	38118A
" " " " " "	1951	*50954A	Export	1946	*323821	" " " "	1959	38190A
" " " " " "	1952-53	50941A	Steering column control	1946-47	32724A/E	Oil	1959	38192A
" " " " " "	1953-55	51336A	ditto	1948	32799A/F	Windshield wipers		
" " " " " "	1956	51736B/D	ditto	1948-50	32786A/J	Motor	1946-47	+75066A
" " " " " "	1957-58	51777B/F	ditto	1951	32862B/F	" " " "	1948-50	*75053J
" " " " " "	1959	51777H/K	ditto	1951	32862B/F	" " " "	1951	*75053K
L.H.D., dip right	1948	*A50360B	ditto	1951-52	32856A/H	" " " "	1952-54	75150A
" " " " " "	1949	*A50792B	ditto	1952-53	32868A/M	" " " "	1955-56	*75200B
" " " " " "	1950-51	*A50445K	ditto	1953-54	32888A/B	" " " "	1957-58	75296A
" " " " " "	1951-52	*50804D	Steering column control (De Luxe, Convertible and 'Californian')	1955-56	32939A/F	" " " "	1959	75296E
" " " " " "	1953	50973A	(Estate Car and Special)	1955-56	32888B	Clutch housing	1946-47	737357
" " " " " "	1953-55	*51337A & B	(De Luxe)	1957-59	32957A	Bracket with shaft and coupling	1946-47	735395
" " " " " "	1956	51737B	(Special)	1957	32958A	Shaft, short	1946-47	737243
Head, Export Europe (not France)	1948-49	*B50792B	(G.P.O. Estate Car)	1957	32939E	Coupling	1946-47	729036/S
ditto	1950-51	*B50445K	Suppressor	1954-57	78105A	Link, primary	1946-47	733813
ditto	1951-52	*50963A	SWITCHES			" secondary (except Estate Car)	1946-47	733817
ditto	1953	50967A	Battery master	1954-57	76605B	Wheelbox	1948-54	*72548A/K
ditto	1953-55	51339A	" " " " (G.P.O.)	1959	76602B	" " " " Later	1954	72662A
ditto	1956	51738B	Estate Car	1951-59	31284A/D	" " " "	1955-56	72663D
ditto	1957-59	51941A/E	Dipper	1957	31550A	" " " "	1957-59	72673A
ditto	1959	58359A	Flasher	1957	31622A	Crosshead and rack assy.	1948	736177
Head, Export France	1948-49	50664E	" " " " Later	1958	31641B	Cut to 42 1/2"	1948-54	736307
" " " " " "	1950-51	*50790E	" " " " " "	1958	31550B	" " 41 1/2"	1955	*743231
" " " " " "	1951-53	*50962A	" " (N. America)	1958	31550B	" " 42 1/2"	1956-59	743235
" " " " " "	1953-55	*51341A	Heater or fan	1948-54	*78245A	Outer casing		
" " " " " "	1956	51739B	Knob	—	*768548	Motor to wheelbox	1948	739868
" " " " " "	1957-59	51785A/H	Ignition	1953-56	31187D	ditto	1948-54	*739832
" " " " " "	1959	58360A	" " " " (G.P.O. Estate Car)	1957	*31484A	ditto	1955-56	745138
Head, Export U.S.A.	1948-50	50806A	" " " " " "	1957	*34492A	ditto	1957-59	743517
ditto	1951-53	50811A	Ignition and lighting	1946-47	344023B	Wheelbox to wheelbox	1948	739937
ditto	1953-55	51343A	" " " " " "	1948	*34053A	ditto	1948-51	*739957
ditto (MK. VII)	1954	51509A	" " " " " "	1948-53	34050B	ditto	1952-54	*739982
ditto	1956	51741B	" " " " " "	1948-58	31501B	ditto	1955-56	745139
ditto	1957-59	51779A/H	" " " " " "	1957-58	31637A	ditto	1957-59	743706
Number plate	1948-53	53093E	Isolator (manumatic gear)	1958-59	31504B/D	3", offside wheelbox	1948-51	740031
" " (special orders)	1952	*53159B	Lighting	1953-54	*31200B	End tube	1955-59	740746
" " " " " "	1953-59	53278B	" " " " " "	1955-56	31126B	Ferrule, casing retaining	1955-59	740715
" " " " " "	1955-57	53093H	" " " " " "	1957-58	*31200E	Grommet, clutch housing	1946-47	733874
" " " " " "	1958-59	53630A	Knob	1959	*31251D	" " " " " "	1946-47	729378
Roof	1946-47	*540092	" " " " " "	1953-56	316128	Arm	1946-47	*735098
" " " " " "	1948	*56017A	" " (ivory)	1957	316155	" " " " " "	1948	*737425
" " ("Magnificent")	1948-49	*56038A	" (grey)	1957-58	*313661	" " " " " "	1948-54	*737576
" " " " " "	1949-50	*56043A	Panel	1959	54330749	" " " " " "	1954	742141
" " " " " "	1951-54	*56051A	Knob	1948-51	31192A	" " " " " "	1955-56	745074
Side	1946-47	*52110A	Solenoid, starting motor	—	*315076	" " " " " "	1957	745072
" " " " " "	1948-54	52139B	Solenoid operating	1954-59	76411D/E	" " " " " "	1957-59	741845
" " " " " "	1955-56	*52162B/E	Starting motor	1954-56	31447A	" " " " " "	1948-54	*737524
" " (G.P.O. Estate Car)	1955-57	52139E	" " " " " "	1946-48	76404B	" " " " " "	1954	742140
Side and flasher	1957	52240B	Coupling	1948-54	76423A	" " " " " "	1955-56	745073
" " " " " "	1957	*52372A	Stop lamp	—	764428	" " " " " "	1957	745071
" " " " " "	1958-59	52403A/B	Spring	1946-54	31281B	" " " " " "	1957-59	741844
" " " " " "	1953-56	*52162B/D	" " " " " "	1946-48	315543	Blade	1946-47	727707
			Stop lamp	1948-54	*315714	" " " " " "	1948	737424
			Cap	1957-59	31082E	" " " " " "	1948-49	*737433
				—	316072	" " " " " "	1949-56	738724
						" " " " " "	1957	*738735
						" " " " " "	1957-59	737897

* See Supersession Chart
L.H.D. ... Left hand drive

† No longer available—refer to Wiper Conversion Set Section
R.H.D. ... Right hand drive

L.H. ... Left hand

R.H. ... Right hand

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



HILLMAN 'Minx' De Luxe Series IIIA 1959-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1959-60	†36267A	LAMPS			SWITCHES—continued		
Battery	1959-60	BT7A	Head, Home			Solenoid, starting motor	1959-60	76465A
" (cold climates) ..	1959-60	BT9A	R.H.D., dip left ..	1959-60	58548A	" throttle blipper ('Easidrive')	1959-60	76521B
Bulb holder, warning lights	1959-60	54945043	Head, Export Europe (except France & Sweden)	1959-60	58406A	Stop lamp	1959-60	31802B
Bulb	—	281	Head, Export France ..	1959-60	58405A	Windshield wiper ..	1959-60	31869A
Coil, ignition	1959-60	45102E	Head, Export Sweden ..	1960	58655A	Knob	—	54330939
Control box	1959-60	37290D/E	Head, Export U.S.A. ..	1959-60	58549A	Warning lights		
" " ('Easidrive') ..	1959-60	37305A/B	Number plate illumination	1959-60	53278B	Flasher	1959-60	38191A
" " Later	1959-60	37323A	Side and flasher	1959-60	52467B/D	Ignition	1959-60	38189A
Distributor			Stop tail, flasher and reflex ditto (U.S.A.) ..	1959-60	53823B	Main beam	1959	38190A
High compression ..	1959-60	40681A	ditto (Estate Car)	1959-60	*53715A/B	Oil	1960	54360500
" Later	1960	40681B	Relay, horn	1959-60	33188A	"	1959-60	38192A
Low compression ..	1959-60	40682A	Sleeve, Lucas connector	1959-60	54190042	Windshield wipers		
" Later	1960	40682B	14 amp.	1959-60	54190043	Motor, left hand drive	1959-60	75389A
Flasher unit	1959-60	35011A	35 amp.	1959-60	25022N/Q	" right hand drive	1959-60	75388A
Fuse box	1959-60	033287	Starting motor	1959-60	32957A	Wheelbox	1959-60	72734A
" " Later	1959-60	033283	Steering column control	1959-60	331610	Crosshead and rack assy. Cut to 44 3/8" ..	1959-60	744256
Generator	1959-60	22700D	Contact plate	—	31800A	Outer casing		
" (temporary alternative)			SWITCHES			Motor to wheelbox ..	1959-60	54711609
" 'Easidrive'	1959-60	*22704A	Dipper	1959-60	54331425	Wheelbox to wheelbox	1959-60	747046
" " Later	1960	22532B/D	Cap, rubber	—	31796A/B	End tube	1959-60	54711535
Horn			Flasher	1959-60	*31953A	Arm, left hand drive	1959-60	54711534
Low note	1959-60	69092A	Ignition and starting ..	1959-60	31951A	" right hand drive ..	1959-60	54711534
High note	1959-60	69091A	Lighting	1959-60	54330749	Blade	1959-60	54711282
			Knob	—				

HILLMAN 'Minx Special' Series III 1958-59: 'Husky' Series I 1955-60

Battery	1955-58	GT7A	LAMPS—continued			SWITCHES—continued		
" (cold climates) ..	1959-60	BT7A	Head, Export Europe (not France)	1955	51339A	Flasher	1955-56	31423B
" "	1958	GTW7A	ditto	1956-57	51738B	" " Later	1956-57	31533A
Coil, ignition	1955-56	BT9A	ditto	1958-59	51989D/F	" (U.S.A.)	1958-60	31737A/B
" "	1957-60	*45020A	(except France & Sweden) Later	1959-60	58365A	Ignition and lighting	1955-60	*31288A/D
Control box	1955-56	*37138D	Head, Export France ..	1955	*51341A	Knob	1955-60	316285
" "	1957-59	37182H	" " " Later	1956-57	51739B	Starting motor	1955-58	76423A
" "	1960	37182J	" " "	1958-59	51990D/F	Coupling	1955-58	764428
" " Later	1960	37182K	" " "	1959-60	58366A	Stop lamp	1955-57	764466
Distributor			Head, Export Sweden ..	1960	58656A	Cap	1955-57	31281B
High compression ..	1955-57	*40050J	Head, Export U.S.A. ..	1955	51343A	Spring	1955-57	*315714
ditto ('Special') ..	1958	40530A	" " "	1956-57	51741B	Stop lamp	1958-60	31082E
ditto ('Husky') ..	1959	40530B	" " "	1958-60	51991D/E	" " "	1958-60	316072
ditto	1959	*40562B	Number plate illumination	1955-56	*52240B/E	Windshield wiper ..	1956-57	31192B
ditto	1960	40530A/D	Side	1957	52240B	Knob	—	317453
ditto " Later	1960	40530E	Side and flasher	1957	52372A	Warning light (main beam) U.S.A.	1960	38118A
Low compression ..	1958	40492A	" " " Later	1957	52372A	Windshield wipers		
ditto ('Special') ..	1959	40492B	Stop tail	1958-60	52403A/B	Motor	1955-56	*75200B
ditto ('Husky') ..	1959-60	40492B	Stop tail, flasher and reflex ('Special')	1955-57	53178E/F	" " "	1957-59	75296A/D
ditto " Later	1960	40492D/E	(") U.S.A.)	1958	53540A/B	" " "	1960	75296E
Flasher unit	1955	*35003A	(") U.S.A.)	1958	*53648A/F	Wheelbox	1955-57	72663D/F
" "	1956	*35004A	(") U.S.A.)	1959	53444A/E	" " "	1958-60	72673A
Flasher relay	1957-60	35011A	(") U.S.A.)	1959	53753B	Crosshead and rack assy. Cut to 41 3/8" ..	1955-56	*743231
Fuse box	1955-56	33117A	(") U.S.A.)	1958	53685A	" " " 43 3/8" ..	1957-60	743235
" "	1955-57	033239	(") U.S.A.)	1958-59	53754A	Outer casing		
" "	1958-60	033277	(") U.S.A.)	1960	53752F	Motor to wheelbox ..	1955-57	745138
Generator	1955-56	22258D	(") U.S.A.)	1956	*57035D	" " "	1958-60	743517
" "	1957-60	22258E/H	Reflex reflector	1957	57095D	Wheelbox to wheelbox	1955-57	745139
" "	1958	70141B	Starting motor	1955-57	25022F/L	" " "	1958-60	743706
Low note	1955-60	69046A/F	" " " Later	1958-60	25022M	End tube	1955-60	740746
High note (optional)	1955-60	69047A/F	Steering column control ('Special')	1955-57	25022N/Q	Ferrule, casing retaining	1955-60	740715
Horn relay (when twins fitted)	1955-60	*33116B	(") U.S.A.)	1958-60	33292A/B	Arm, left hand drive ..	1955-57	745074
ditto	1959-60	*33116B	(") U.S.A.)	1958-60	33507B	" " "	1958-59	741845
LAMPS			Suppressor	1955	78105A	" " "	1960	54711558
Head, Home			SWITCHES			" right hand drive ..	1955-57	745073
R.H.D., dip left ..	1955	51336A	Dipper	1955-60	31284A/D	" " "	1958-59	741844
" " "	1956-57	51736B/D				" " "	1960	54711557
" " "	1958-60	51971E/H				Blade	1955-57	738724
						" " "	1958-60	737897

HILLMAN 'Minx Special' Series IIIA 1959-60: 'Husky' Series II 1960

Ammeter			Generator ('Easidrive') ..	1959-60	22532A	LAMPS—continued		
'Special' (optional, except with 'Easidrive') ..	1959-60	36254A	" " " Later	1960	22532B/D	Head, Export Sweden ('Special')	1960	58655A/B
Battery	1959-60	BT7A	Horn	1959-60	69092D	(") U.S.A.)	1960	58657A/B
" (cold climates) ..	1959-60	BT9A	LAMPS			Head, Export U.S.A. ('Special')	1959-60	58549A
Coil, ignition	1959-60	45102E	Head, Home			(") U.S.A.)	1960	*51779A/H
Control box	1959-60	37290D/E	R.H.D., dip left	1959-60	58548A/B	Number plate illumination	1959-60	53278B
" " ('Easidrive') ..	1959-60	37305A/B	(") U.S.A.)	1960	51777J	Side and flasher	1959-60	52467A/D
" " Later	1960	37323A	Head, Export			(") U.S.A.)	1960	52403B
Distributor			R.H.D., dip left	1959-60	58548A/B	Stop tail, flasher and reflex ('Special')	1959-60	53823A/B
High compression ..	1959-60	40681A	(") U.S.A.)	1960	51777J	(") U.S.A.)	1959-60	53824A/B
" Later	1960	40681B	Head, Export Europe (except France & Sweden) ('Special')	1959-60	58406A/B	(") U.S.A.)	1960	*53648F
Low compression ..	1959-60	40682A	(") U.S.A.)	1960	58359A	Starting motor	1959-60	53753A/B
" Later	1960	40682B	Head, Export France ('Special')	1959-60	58405A/F	" " " Later	1960	25022N/Q
Flasher unit	1959-60	35011A	(") U.S.A.)	1960	58360A	Steering column control ('Special')	1959-60	33509B
Fuse box	1959-60	033287				(") U.S.A.)	1960	33507B
Generator	1959-60	22700D						
" (temporary alternative)								
" "	1959-60	*22704A						

* See Supersession Chart

† Optional (except with 'Easidrive')

R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

HILLMAN—HUMBER

HILLMAN 'Minx Special' Series IIIA 1959-60: 'Husky' Series II 1960—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers		
Dipper	1959-60	31800A	Solenoid, throttle blipper ('Special', 'Easidrive')	1959-60	76521B	Motor, left hand drive .. right hand drive	1959-60	75389A
Cap, rubber	—	54331425	Solenoid operating ('Special', 'Easidrive')	1959-60	31872A	Wheelbox	1959-60	75388A
Flasher	1959-60	31737B	Starting motor	1959-60	76423A	Crosshead and rack assy. Cut to 44 3/4"	1959-60	72734A
Ignition and lighting ('Special')	1959	31958A	Coupling	—	764466	Outer casing	1959-60	744256
('Special' and 'Husky')	1960	31270F	Stop lamp	1959-60	31802B	Motor to wheelbox ..	1959-60	54711609
Knob	—	316285	Warning light (main beam) (U.S.A.)	1959-60	38118A	Wheelbox to wheelbox	1959-60	743706
Solenoid, starting motor ('Special', 'Easidrive')	1959-60	*76465A				End tube	1959-60	740746
						Arm, left hand drive ..	1959-60	54711535
						right hand drive ..	1959-60	54711534
						Blade	1959-60	54711282

HINDLE SMART Battery Vehicle 1951-54

Fuse box	1951-54	*37137B	LAMPS—continued			Windshield wipers		
Horn	1951-54	*069213	Side	1951-54	52102A	Motor	1951-54	*75120A
Horn push	1951-54	76205A	Tail and number plate ..	1951-54	*53041B	Arm	1951-54	*735061
LAMPS			SWITCH			Blade	1951-54	727803
Head	1951-54	50730A	Lighting	1951-54	*34024A			

H.R.G. 9 h.p. 1946-52

Ammeter	1946-51	*369047	LAMPS—continued			SWITCHES		
"	1952	*36018B	Fog	1951-52	*55029E	Dipper	1946-52	31284A
Battery	1946-52	SLG11E	Head, Home	1946-49	*50324A	Ignition and lighting ..	1946-52	34055A
Coil, ignition	1946-52	*45039A	Left hand	1946-49	*50323A	Panel	1946-52	31201B
Control box	1946-49	*37031A	Right hand	1949-50	*50458A	Knob	—	314026
"	1950	37065E	Left hand	1949-50	*50490A	Starting motor	1946-52	76428A
"	1951-52	37057E	Right hand	1949-50	*50985A	Stop lamp	1946-52	31281B
Distributor	1946-50	*409641	R.H.D., dip left	1951-52	*50985A	Spring	—	315543
"	1951-52	40192A/D	Head, Export	1949-50	*50458A	Warning light	1949-52	*38013B
Fuse box	1946-52	*385175	Vertical dip	1951-52	*50985A	Windshield wipers		
Generator	1946-52	22449B	R.H.D., dip left	1951-52	50877B	Motor	1946-52	75054A
"	1952	22449D	L.H.D., dip right	1951-52	50986A	Coupling bar	1946-52	*733472
Horn	1946-48	069344	Head, Export Europe (not France)	1951-52	*56051A	Bearing, passenger side	1946-52	731721
"	1949-52	*69011F	Roof	1946-52	52030A	Arm, left hand	1946-52	735119
Horn push	1946-52	31269A	Side	1946-52	*53031D	right hand	1946-52	735118
Junction box	1946-50	78266A	Stop tail and number plate	1946-52	*620128	Blade	1946-52	727784
"	1951-52	78264A	Mirror	1946-48	*250231			
LAMPS			Starting motor	1949-52	25017A			
Dash	1946-49	*545179	"	1949-52				

H.R.G. 12 h.p. 1946-52

Ammeter	1946-51	*369047	LAMPS, Head, Home—continued			SWITCHES—continued		
"	1952	*36018B	Right hand	1949-50	*50490A	Stop lamp	1946-52	31281B
Battery	1946-52	SLG11E	R.H.D., dip left	1951-52	*50985A	Spring	—	315543
Coil, ignition	1946-52	*45039A	(L.H. and R.H.)	1951-52	*50985A	Warning light	1949-52	*38013B
Control box	1946-48	*37032A	Head, Export	1946	*50165A	Windshield wipers		
"	1949-50	37065E	L.H. and R.H.	1949-50	*50458A	Motor	1946-52	75054A
"	1951-52	37057E	R.H.D., dip left	1951-52	*50985A	Coupling bar	1946-52	*733472
Distributor	1946-48	*405507	L.H.D., dip right	1951-52	50877B	Bearing, passenger side	1946	731721
"	1949	40062A/E	Head, Export Europe (not France)	1951-52	50986A	Arm, left hand	1946-52	735119
"	1950-51	*40167B/E	Number plate illumination ('Streamline')	1946	*53083A	right hand	1946-52	735118
"	1951-52	*40167F/H	Roof	1951-52	*56051A	Blade	1946-52	727784
Fuse box	1946-52	*385175	Side (Sports)	1946	52030A	Windshield wipers		
Generator	1946-48	*238311	Stop tail and number plate	1949-52	*53031D	('Streamline')	1946-50	*75053J
"	1949-52	22449B	Mirror	1946-52	*620128	Motor	1951-52	*75053K
"	1952	22449D	Starting motor	1946-48	*250231	Wheelbox	1946	*72548A/K
Horn	1946-48	069344	"	1949-52	25017A	Crosshead and rack assy.	1946	736121
"	1949-52	*69011F	SWITCHES			Inner cable rack	1946	736024
Horn push	1946-52	31269A	Dipper	1946-52	31284A	Outer casing	1946	739844
Junction box	1946-50	78266B	Ignition and lighting ..	1946-52	34055A	Motor to wheelbox ..	1946	*739954
"	1951-52	78264B	Panel	1946-52	31201B	Offside	1946	*739954
LAMPS			Knob	1946-52	314026	Nearside	1946	*740032
Dash	1949-50	56010A	Starting motor	1946-52	76428A	4", nearside wheelbox	1946	740031
Fog	1951-52	*55029E				3", offside wheelbox ..	1946	734458
Head, Home	1946	*50165A				Grommet, wheelbox ..	1946	735895
Left hand ('Streamline')	1946	*50166A				Guide tube, wheelbox ..	1946	*735050
Right hand	1946	*50324A				Arm	1946	*730503
Left hand (Sports) ..	1946	*50323A				Blade	1946-52	727707
Right hand	1949-50	*50458A						
Left hand	1949-50							

HUMBER 'Hawk' 1946-57

Ammeter	1946-48	364570	Control box	1946-48	*37032A	Distributor	1946-50	40070A/E
Battery	1946-47	SG9A	"	1949-52	37065E	"	1951-52	40218A/D
"	1948-57	GT9A	"	1952-56	*37138A/D	"	1953	40070A/E
Coil, ignition	1946-56	*45012A/D	"	1957	37182H	"	1953-54	*40376A/B
"	1957	*45054H				"	1955-56	*40430D
						"	1956-57	40491A/F

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued



Equipment Specification

HUMBER

HUMBER 'Hawk' 1946-57—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Flasher unit	1954-55	*35003A	LAMPS—continued			Warning lights		
" " " "	1956	*35004A	Reverse lamp kit	1955	052993	Flasher	1953-54	*38069A
" " " "	1957	35011A	Roof	1948	*540020	" " (De Luxe)	1955-57	38119A
Flasher relay	1953-57	33117A/B	" " " "	1949-54	56016A	" " " "	1957	38151A
Fuse box	1946-48	*385184	Side	1946-48	*52067A	Main beam	1951-54	*38069A
" " (G.P.O.) Later	1952-57	033239	" " " "	1950-54	52139B	" " (De Luxe)	1955-57	38118A
Generator	1951-52	*37131A	Side and flasher			" " " "	1957	38152A
" " " "	1946-48	*22446A	(U.S.A. and Canada) ..	1949	*52152D			
" " " "	1949-52	*22250E/F	ditto	1953	*52162B			
" " " "	1952-56	22258D	ditto	1955	*52162B			
" " " "	1957	22258E	ditto	1956-57	52240B	Windshield wipers		
Horn			ditto	1957	*52372A	Motor	1946-48	†75066A
Low note	1946-48	*69021A	ditto	1949	*53120B	" " " "	1949-50	*75053J
" " " "	1949-55	*69011F/J	Stop tail	1946-48	*53027B	" " " "	1951	*75053K
" " " "	1955-57	69046A/E	Stop tail and number plate			" " " "	1952	75150A
High note	1946-48	*69022A	ditto (U.S.A. & Canada)			" " " "	1953-54	*75174D
" " " "	1949-55	*69012F/J	ditto	1950-52	53174E	" " " "	1955-56	*75200B
" " " "	1955-57	69047A/E	ditto	1953-54	*53226D	" " " "	1957	75296A
Horn relay	1955-57	*33116B	Stop tail and reverse ..	1955	*53322A	Clutch housing	1946-48	737357
Junction box	1946-57	78266A	Stop tail, flasher and reverse			Bracket, with shaft and		
LAMPS			Tail and flasher indicator			coupling	1946-48	734489
Boot	1946-48	56018A	Reflex reflector	1953-54	53174B	Shaft, short	—	737243
Clock illumination			Starting motor	1950-54	65424A	Coupling	—	729036/S
Head, Home	1950-52	56041A	" " " "	1946-48	*255378	Link, primary	1946-48	733820
R.H.D., dip left (L.H.)	1946-48	50176A	" " " "	1949-57	25521B/D	" " " "	1946-48	733819
" " non-dip (R.H.)	1946-48	50177A	Steering column control			Wheelbox	1949-52	*72548A/F
" " dip left (L.H.)	1949	*50793B	Home	1946-48	323816	" " " "	1953-54	72636A/D
" " non-dip (R.H.)	1949	*50362F	Export	1946-48	323822	" " " "	1955-57	72660A
" " dip left (L.H.)	1950-51	*50445K	Steering column control ..	1949-50	32791A/J	" " (De Luxe)	1957	*72688A
" " non-dip (L.H.)	1950-51	*50446K	ditto	1950-52	32844F	Crosshead and rack assy.		
R.H.D., dip left			ditto	1953-54	32870A/H	Cut to 50%	1949-52	738499
(L.H. and R.H.) Later	1951	*50954A	ditto	1955-57	32908A/J	Crosshead and rack assy.	1953-55	*743231
" " " "	1952-53	50941A	SWITCHES			" " " "	1956-57	743238
" " " "	1953-55	51336A	Boot lamp	1946-48	359358	Outer casing		
" " " "	1956-57	51736B/D	Dipper	1953-57	31284A	Motor to wheelbox ..	1949-52	739858
" " (alternative)	1956-57	51742B	Door light	1949-54	31175A	" " " "	1953-54	740816
Head, Export			Foglamp	1949-50	*31212A	" " " "	1955	745029
R.H.D., dip left ..	1949	*50793B	Knob	1949-50	*315995	Wheelbox to wheelbox	1949-52	*739957
" " " "	1950-51	*50445K	Heater or fan	1947-48	*78233A	" " " "	1953-57	740814
R.H.D., dip left			Knob	—	*768523	End tube " " " ..	1949-52	740031
(L.H. and R.H.) Later	1951	*50954A	Heater or fan	1949-54	*31251A	" " " "	1953-57	740746
" " " "	1952-53	50941A	Knob	—	*316121	Ferrule, casing retaining	1955-57	740715
" " " "	1953-55	51336A	Ignition and lighting ..	1946-48	*344874	Grommet, wheelbox ..	1951-52	735824
" " " "	1956-57	51736B	" " " "	1949-52	*34052A	Arm	1946-48	*735098
" " (alternative)	1956-57	51742B	" " " "	1953-54	*34073A	" " left hand drive ..	1949-50	*737581
Vertical dip	1946-48	*50274A	" " " "	1955	34090A	" " " " " "	1951-52	*737576
L.H.D., dip right ..	1949	A50793B	Knob	1955	345096	" " " " " "	1953-54	*741293
" " " "	1950-51	*A50445K	Ignition and lighting ..	1956-57	*34073A	" " " " " "	1955-57	745072
" " " "	1951-52	*50804D	Panel	1949-57	*31236B	" " right hand drive ..	1949-52	*737529
" " " "	1953	50973A	Knob (ivory)	—	317508	" " " " " "	1953-54	*741292
" " " "	1953-55	*51337A & B	" (black, De Luxe) ..	1957	313604	" " " " " "	1955-57	745071
" " " "	1956	51737B	Reverse lamp	1956-57	31281B	Blade " " " "	1946-48	727759
Head, Export Europe			Roof lamp	1949-54	*31378A	" " " " " "	1949	*737433
(not France)	1949	*B50793B	Solenoid, starting motor			" " " " " "	1950-52	*738719
ditto	1950-51	*B50445K	" " " "	1946-48	76022A	" " " " " "	1953-57	738724
ditto	1951-52	*50963A	" " " "	1949-57	*76411D/E			
ditto	1953	50967A	Solenoid operating ..	1946-48	*317073	Laycock de Normanville		
ditto	1953-55	51339A	ditto	1949-52	*31195A	overdrive equipment		
ditto	1956-57	51738B	ditto	1953-57	31377A	(optional extra)		
Head, Export France			ditto (De Luxe) ..	1957	*31373B	Relay	1954-57	33157A
" " " "	1951-53	*50790E	Stop lamp	1946-54	31281B	Solenoid, transmission		
" " " "	1953-55	*51341A	" " " "	1955-57	31082D/E	gear	1954-57	*76505A/B
" " " "	1956-57	51739B	" " " "	1946-48	*31571A	Switches		
Head, Export N. America			" " " "	1949-54	315543	Control, left hand drive	1954-57	31496A/D
ditto	1948-53	50811A	Windshield wiper	1949-57	*31236B	ditto (De Luxe) ..	1957	*31628A
ditto	1953-55	51343A	Knob (ivory)	—	317507	Control, right hand drive	1954-57	31483A/D
ditto	1956	51741B	" (black, De Luxe) ..	1957	313605	ditto (De Luxe) ..	1957	*31627A
Head, Export Canada			Trafficators	1946-48	*54010A	" " " " " "	1954	*31077D
Number plate illumination	1949-54	53135A	" " " "	1949-50	*54018D	Gear lever	1955-57	31478A
" " " "	1953-57	53278B	" " " "	1951-52	*54039A	Inhibitor		
			" " " "	1953-54	54044A/D			

HUMBER New 'Hawk' Series I and IA 1958-60

Battery	1958	GT9A	LAMPS—continued			Screenjet (optional) ..	1959-60	077025
Coil, ignition	1959-60	BT9A	Head, Export Europe			Starting motor	1958-60	25521D
" " " "	1958-59	*45053J/K	(not France)	1958-59	51947A/B	Steering column control	1958-60	32980A/E
Control box	1960	*45054M	(except France & Sweden)					
" " " "	1958-59	37182H	Later			SWITCHES		
" " " "	1960	37182K & L	Head, Export France ..	1959-60	58369A	Dipper	1958-60	31284A/D
Distributor	1958-59	40560A/B	" " " "	1958-59	51948A	Flasher	1958-60	31625B/D
" " " "	1960	40560D/E & F	" " " "	1960	58609A	" " (with overdrive)		
Flasher unit	1958-60	35011A	Head, Export Sweden ..	1958-60	51949A	" " L.H.D.	1958-60	31713A/B
Fuse box	1958-60	033239	Head, Export U.S.A. ..	1960	58492A	" " R.H.D.	1958-60	31712A/B
Generator	1958-60	22258E/H	" " " "			Ignition and starting ..	1958-60	31637A/E
Horn			Number plate illumination			Lighting	1958-60	31426E
Low note	1958-60	69046F	(Estate Car)	1958-59	53518A	Knob	—	313097
High note	1958-60	69047F	" " " "	1960	53630A	Reverse lamp	1958	31281B
Horn relay	1958-60	*33116B	Number plate illumination			" " " "	1958-59	31826A
LAMPS			and reverse	1958-60	575923	" " " "	1960	31478A/B
Boot	1959-60	53788A	Reverse (Estate Car) ..	1958-60	*52246B	Screenjet (when fitted) ..	1959-60	31363A
Head, Home			Side and flasher	1958-60	52334B/K	Solenoid, starting motor	1958-60	*76411E
R.H.D., dip left ..	1958-60	51946B/D	Stop tail and flasher ..	1958-60	53547D/H	Stop lamp	1958-60	31082E
Head, Export			" " " " (U.S.A.) ..	1958-60	53643B/E	Windshield wiper	1958-60	*31668A
R.H.D., dip left ..	1958-60	51946B/D	Reflex reflector (dummy			Knob	1958	*316630
			filler cap)	1958-60	576271	" " " "	1959-60	*54330748

* See Supersession Chart
L.H.D. .. Left hand drive

† No longer available—refer to Wiper Conversion Set Section
R.H.D. .. Right hand drive

L.H. .. Left hand R.H. .. Right hand

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)

continued



Equipment Specification

HUMBER

HUMBER New 'Hawk' Series I and IA 1958-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Warning lights			Windshield wipers— <i>cont'd</i>			Windshield wipers— <i>cont'd</i>		
Flasher	1958-60	38142A	Screenjet nozzle and bush			Arm, left hand drive		
Ignition	1958-60	38140B	Left hand	1959-60	72733A	 Later	1959-60	54710008
Main beam	1958-60	38141B/E	Right hand	1959-60	72731A	 1958		†743528
Oil	1958-60	38148A/B	Crosshead and rack assy.	1958-60	744256	 right hand drive		
			ditto (L.H.D. only)			 Later	1958-59	745653
			 Later	1959-60	744254	 right hand drive		
Windshield wipers			Outer casing			 Later	1959-60	54710009
Motor	1958	†75305B	Motor to wheelbox ..	1958	†744403	Blade	1958	737897
.. .. . Later	1958-59	75310A	ditto Later	1958-59	745806	 1959	1959	54711280
.. .. . L.H.D. ..	1959-60	75374A	ditto (L.H.D.) ..	1959-60	54710508	 Later	1959-60	54711283
.. .. . R.H.D. ..	1959-60	75361A	ditto (R.H.D.) ..	1959-60	54710509			
Wheelbox, L.H. ..	1958	†72696B	Wheelbox to wheelbox	1958	†744404	Overdrive equipment		
.. .. . Later	1958	72701A	ditto Later	1958-59	745807	(optional)		
.. .. . R.H. ..	1958	†72695A	ditto	1959-60	54710349	Relay	1958-59	33157A/B
.. .. . Later	1958	72700A	End tube	1958-60	740746	 1959-60	1959-60	33174A/B
.. .. . L.H.D. ..	1959	72718A	Ferrule, casing retaining	1958-60	740715	Solenoid, transmission		
.. .. . R.H.D. ..	1959	72717A	Arm, left hand	1958	†743529	gear	1958	*76507A
.. .. . L.H.D. and			 left hand drive			ditto Later	1958-60	*76517A/B
.. .. . R.H.D. Later	1959-60	72730A	 Later	1958-59	745652	Switch		
						Inhibitor	1958-60	31478A

HUMBER 'Imperial' 1946-53: 'Pullman' 1946-54

Ammeter	1946-48	364570	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery	1946-49	SG11A	Head, Export Europe			Panel	1947-54	31173B
Coil, ignition ..	1950-54	GT11A	(not France)	1950-51	*B50445K	Reverse lamp	1946-50	*31077A
.. .. .	1946-47	*45039A	ditto Later	1951-52	*50963A	Roof lamp	1948-54	*31182D
.. .. .	1948-53	*45012A/D	ditto	1953	50967A	Solenoid, starting motor	1946-49	76022B
.. .. .	1954	*45046A	ditto Later	1953-54	51339A		1950-54	*76411D
Control box ..	1946-47	*37032A	Head, Export France ..	1951	*50790E	Solenoid operating ..	1946-54	*31174D
.. .. .	1948-49	37065E	 Later	1951-53	*50962A	Stop lamp	1946-54	31281B
.. .. .	1950-52	*37076E	Head, Export U.S.A. ..	1954	*51341A	Spring	—	*31571A
.. .. .	1953-54	*37139D		1948	50605H	Trafficator interrupter	1948-52	31177B
Distributor ..	1946-47	*410700	 Later	1951-53	50811A			
.. .. .	1948-53	40135E/H	Number plate illumination	1953-54	51343A	Trafficators	1946-47	*539973
Low compression	1954	*40312A/F	Reverse, tail and number	1946-54	53121A		1948-49	*54010A
.. .. . Later	1954	*40312H	plate	1946-47	53032B		1950-51	*54040A
High compression	1954	40401A/F	ditto	1950	53116A		1952	*54048A
Flasher unit ..	1953-54	*35003A	Roof	1946-54	56016A		1953-54	54044A/D
Fuse box (cigar lighter)	1946-52	*385184	Side	1946-47	*52067A	Warning lights		
.. .. .	1953-54	033239		1949-52	*52158D	Flasher	1953-54	*38069A
Generator	1946-49	*22446A	 Later	1952-54	52200A	Main beam	1951-54	*38069A
.. .. .	1950-52	*22435A/B	Side and flasher (U.S.A.)	1952-54	53222A			
.. .. .	1953-54	*22456A/B	Stop tail and number plate	1946-47	*53027B	Windshield wipers		
Horn			Stop tail and reverse ..	1948-52	*53115E	Motor	1946	†75066A
Low note	1946-50	*69021A	Stop tail and flasher	1953-54	53177B		1947-50	*75055K
.. .. .	1951-54	*69011F	(U.S.A.)	1951-53	53227A		1951-52	*75055L
High note	1946-50	*69022A	Mirror				1953-54	75152A
.. .. .	1951-54	*69012F	Left hand	1946-54	062590	Clutch housing	1946	737357
Junction box ..	1946-54	78266A	Right hand	1946-54	062587	Bracket, with shaft and		
LAMPS			Interior	1950-53	062577	coupling	1946	734489
Boot ('Pullman') ..	1946-47	*622047	Starting motor	1946	*270490	Shaft, short	—	737243
.. ('Imperial') ..	1946-47	56018A		1947-49	26026A/B	Coupling	—	729036/S
.. .. .	1948-54	*56017B	Steering column control ..	1950-54	26041A/B	Link, primary	1946	733820
Bulb holder, stop tail	1950-54	56037A		1946-47	*323616	 secondary	1946	*733819
Dash	1948	*56011A	SWITCHES	1948-54	32775H/J	Wheelbox, with switch	1947-54	72597H
.. .. .	1951-52	56045B	Door light	1948-54	31175A	 less switch ..	1947-54	72596D
Head, Home ..			Foglamp	1946	31201B	Crosshead and rack assy.	1947-54	736307
L.H. and R.H. ..	1946-47	50203E	Knob	1947-48	314026	Outer casing		
.. .. .	1948	*50362F	Foglamp	1948-54	*31172A	Motor to wheelbox ..	1947-52	739868
R.H.D., dip left (L.H.)	1949-51	*50445K	Heater or fan	1948-54	78203A		1953-54	*739832
.. non-dip (R.H.)	1949-51	*50446K	Knob	—	*768521	Wheelbox to wheelbox	1947-54	*739941
.. .. . dip left	1951	*50954A	Ignition	1948-54	*312168	3", offside wheelbox ..	1947-54	740031
.. .. . Later	1952-53	50941A	 and lighting	1946-47	*344874	Grommet, housing or		
.. .. .	1953-54	51336A	Lighting	1948-54	31183B	wheelbox	1946-54	734181
Head, Export ..			Knob	—	315037	Arm	1946-54	*735078
R.H.D., dip left ..	1949-51	*50445K				Blade	1946-54	727759
L.H.D., dip right ..	1950-51	*A50445K						
.. .. . Later	1951-52	*50804D						
.. .. .	1953	50973A						
.. .. .	1953-54	*51337A						

HUMBER 'Snipe' 1946

Battery	1946	SG11A	LAMPS— <i>continued</i>			Trafficators	1946	*539663
Coil, ignition ..	1946	*45039A	Side	1946	*52067A	Windshield wipers		
Control box ..	1946	*37032A	Stop tail and number plate	1946	*525123	Motor	1946	†75066A
Distributor ..	1946	*410700	Mirror	1946	*621601	Clutch housing	1946	737357
Fuse box	1946	*385184	Starting motor	1946	*270490	Bracket, with shaft and		
Generator	1946	*22446A	Steering column control ..	1946	*323616	coupling	1946	734489
Horn			SWITCHES			Shaft, short	—	737243
Low note	1946	*69021A	Foglamp	1946	*314442	Coupling	—	729036/S
High note	1946	*69022A	Ignition and lighting ..	1946	*344874	Link, primary	1946	733820
Junction box ..	1946	78266A	Reverse lamp	1946	*31077A	 secondary	1946	733819
LAMPS			Roof lamp	1946	359358	Grommet, housing ..	1946	734181
Boot	1946	*560602	Solenoid, starting motor	1946	76022B	Arm	1946	*735078
Head, Home ..	1946	50203A/D	Solenoid operating ..	1946	*317063	Blade	1946	727759
Reverse, tail and number			Stop lamp	1946	31281B			
plate	1946	*525133	Spring	—	*31571A			
Roof	1946	*540020						



Equipment Specification

HUMBER

HUMBER 'Super Snipe' 1946-57

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-48	364570	LAMPS—continued			SWITCHES—continued		
"	1949-52	36074E	Head, Export France ..	1950-51	*50790E	Solenoid, starting motor	1946-49	76022B
"	1953-54	*36152D	" Later	1952-53	*50962A	"	1950-57	*76411D/E
Battery	1955-57	36192A	"	1953-55	*51341A	Solenoid operating ..	1949-52	*31174D
"	1946-49	SG11A	"	1956-57	51739B	"	1953-57	*31373A/B
"	1950-57	GT11A	Head, Export N. America	1948-53	50811A	Stop lamp	1946-52	31281B
Coil, ignition ..	1946-54	*45012A/D	ditto Later	1953-55	51343A	Spring	—	*315714
"	1955-57	*45046B	ditto	1956-57	51741B	Stop lamp	1953-57	31082B/E
Control box	1946-47	*37032A	Interior	1951-57	56016A/B	Trafficator	1953-55	31346A
"	1948-49	37065E	Number plate illumination	1951-52	53135A	Windshield wiper	1953-57	*31297A/B
"	1950-52	*37076E	Number plate and reverse	1953-57	53238F	Knob	—	316633
" Later	*37139D/E		Reverse, tail and number					
Distributor	1946-49	*410700A	plate	1946	53032B	Trafficators	1946-47	*539663
"	1950-52	40135E/H	ditto	1947-50	53116A	"	1948-50	*54010A
Low compression	1953-54	*40312A/F	ditto (Heavy Duty)	1951-52	53116A	"	1953	*54039A
" Later	1954-55	*40312H	Roof	1946-54	56016A	" Later	1953-55	54044A/D
High compression	1953-55	40401A/F	"	1955	56047A			
Distributor	1956-57	40471A/B	Side	1946	*52067A	Warning lights		
Flasher unit	1953-55	*35003A	"	1950-52	*52158D	Flasher	1955	38119A
"	1956	*35004A	" Later	1952	52200A	"	1957	38124A
"	1957	35011A	"	1953-54	*52206A	Ignition	1955	31860A
Flasher relay	1955-57	33117A	"	1955	*52143E	Main beam (U.S.A.) ..	1951-52	*38069A
Fuse box	1946-52	*38518A	Side and flasher (U.S.A.)	1951	*53222A	"	1955 & 1957	38118A
" (G.P.O.)	1946-49	*33239	"	1953-55	*52162A/B			
Generator	1951-52	*37131A	Stop tail and number plate	1956-57	52240B			
"	1946-49	*22446A	ditto	1946	*53027B	Windshield wipers		
"	1950-52	*22435A/B	ditto (Heavy Duty)	1947-50	53117A	Motor	1946-47	*75066A
" Later	1952-54	*22456A/B	Stop tail and reverse ..	1951-52	53117A	"	1948-50	*75055K
"	1955-57	*22483A	Stop tail and flasher	1951-52	53203B	"	1951	*75055L
Horn	1946-50	*69021A	(U.S.A.)	1951-52	*53176B	" Later	1951-52	75152A
Low note	1951-55	*69011F/J	Stop tail	1953-57	53178D/F	" left hand drive	1953-55	*75187B
"	1956-57	69046A/E	Mirror	1946	*62160I	" right hand drive	1956-57	*75232A
High note	1946-50	*69022A	Reflex reflector	1947-52	062577	"	1953-55	*75177D
"	1951-55	*69012F/J	"	1953	*57035A	Clutch housing	1956-57	*75246A
"	1956-57	69047A/E	"	1954	57052A	Bracket, with shaft and	1946-47	737357
Horn relay	1953-57	*33116B	Front (Heavy Duty) ..	1955-57	*57078A	coupling	1946-47	734489
Junction box	1946-52	78266A	Rear	1955	*57063A	Shaft, short	—	737243
LAMPS			Starting motor	1946	*270490	Coupling	—	729036/S
Boot	1946-52	56018A	"	1947-49	26026A/B	Link, primary	1946-47	733820
"	1953-57	53264A/B	"	1950-54	26041A/B	" secondary	1946-47	733819
Clock illumination	1951-57	56041A	"	1955-57	26094A	Wheelbox, with switch	1948-52	72597H
Dash	1947-49	*56011A	Steering column control	1946-47	*32361E	" less switch	1948-52	72596D
"	1952-54	56045B	"	1948-52	32775H/J	"	1953-57	72636D
Head, Home	1946	50203A/D	"	1953-57	32873F	Crosshead and rack assy.	1948-52	736307
L.H. and R.H. ..	1947-49	*50793B	SWITCHES			Cut to 43 1/2"	1953-55	741263
R.H.D., dip left (L.H.)	1947-49	*50362F	Cigar lighter knob ..	1955	305493	"	1956-57	741264
" non-dip (R.H.)	1947-49	*50362F	Dipper	1953-57	31284A	Outer casing		
" dip left (L.H.)	1950-51	*50445K	Door light	1947-57	31175A	Motor to wheelbox ..	1948-51	739868
" non-dip (R.H.)	1950-51	*50446K	Flasher	1956-57	31502A	ditto Later	1951-52	*739832
R.H.D., dip left	1950-51	*50446K	Foglamp	1946	*314442	ditto	1953-55	740816
(L.H. and R.H.)	1951	*50954A	Heater or fan	1947-52	78203A	ditto	1956-57	745162
"	1952-53	50941A	Knob	—	*768521	Wheelbox to wheelbox	1948-52	*739941
"	1953-54	51336A	Ignition	1947-52	*312168	End tube	1953-57	740814
"	1955	51546A	"	1953-56	31187D	"	1948-52	740031
"	1956-57	51742B	"	1957	*31484A	"	1953-57	740746
Head, Export	1947-49	*50793B	Ignition and lighting	1946	*344874	Grommet, housing or	1946-52	734181
R.H.D., dip left ..	1950-51	*50445K	Interior light	1951-52	*31182D	wheelbox	1946-52	*735078
"	1951	*50954A	"	1953	31175A	Arm	1953-55	*741293
"	1952-53	50941A	"	1953	*31254A	" left hand drive ..	1956-57	745072
"	1953-54	51336A	"	1954-57	*31411A	" right hand drive ..	1953-55	*741292
"	1955	51546A	Lighting	1947-52	31183B	"	1956-57	745071
"	1956-57	51742B	Knob	—	315037	Blade	1946-52	727759
Vertical dip	1946	*50273A/D	Lighting	1953-57	*31251A/D	"	1953-57	738724
(L.H. and R.H.)	1949	*A50793B	Knob	—	316123	Overdrive equipment		
L.H.D., dip right ..	1950-51	*A50445K	Lighting	1947-52	*31737B	(optional)		
"	1951-52	*50804D	Panel	1953-57	*31251A/D	Relay	1956-57	33157B
"	1953	*50973A	Knob	—	316124	Solenoid, transmission	1956-57	*76505A/B
"	1953-55	*51337A & B	Reverse lamp	1946	*31077A	gear	1956-57	51946B/D
"	1956-57	51737B	"	1947-56	31281B	Switches		
Head, Export Europe	1949	*B50793A	Roof lamp	1946	359358	Control, L.H.D. ..	1956-57	31507A
(not France)	1950-51	*B50445K	"	1947-52	*31182D	R.H.D.	1956-57	31506A
ditto	1951-52	*50963A	"	1953	*31254A	Inhibitor	1956-57	31478A
ditto	1953	50967A	"	1954	*31411A			
ditto	1953-55	51339A						
ditto	1956-57	51738B						

HUMBER New 'Super Snipe' Series I and II 1959-60

Ammeter	1959-60	36241B	Fuse box	1959-60	033239	LAMPS—continued		
Battery	1959-60	BT9A	Generator	1959	*22483D	Head, Home		
Coil, ignition ..	1959-60	*45054	" Later	1959-60	22489B/D	R.H.D., dip left ..	1959	58175A
"		K/M	Horn			"	1960	58486A/B
Control box	1959	*37189J	Low note	1959-60	69046F	Head, Export		
"	1959-60	37297B	High note	1959-60	69047F	R.H.D., dip left ..	1959	58175A
Distributor			Horn relay	1959-60	*33116B	"	1960	51946B/D
Low compression	1959	*40568A	LAMPS			Head, Export Europe		
High compression	1959	40601A/D	Boot	1959	53681A	(not France)	1959	51947A/B
Distributor	1959	40660A/E	"	1960	53788B	(except France & Sweden)		
" (3 litre Engine)	1960	40685A/D	Glove box	1959-60	52405B	Later	1959-60	58369A
Flasher unit	1959-60	35011A						

* See Supersession Chart
L.H.D. .. Left hand drive

† No longer available—refer to Wiper Conversion Set Section
R.H.D. .. Right hand drive

L.H. .. Left hand

R.H. .. Right hand

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

HUMBER—JAGUAR

HUMBER New 'Super Snipe' Series I and II 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued			Windshield wipers—cont'd		
Head, Export France ..	1959	51948A	Panel rheostat ..	1959-60	78331A	Crosshead and rack assy.		
Head, " " Later ..	1959-60	58370A	" " " " Later ..	1960	78344A	Cut to 45 $\frac{1}{2}$..	1959-60	744256
Head, Export Sweden ..	1959-60	58609A	Knob ..	1959-60	54330752	Crosshead and rack assy.		
Head, Export U.S.A. ..	1959-60	51949A	Reverse lamp ..	1959	31826A	L.H.D. ..	1959-60	744254
Head, " " Later ..	1960	58492A	Screenjet (when fitted) ..	1959-60	*31077E	Outer casing ..	1959	745806
Number plate illumination (Estate Car) ..	1959-60	53630A	Solenoid, starting motor ..	1959-60	*76411E	Motor to wheelbox ..	1959-60	54710508
Number plate illumination and reverse ..	1959-60	575923	Stop lamp ..	1959-60	31082E	L.H.D. ..	1959-60	54710509
Reverse (Estate Car) ..	1959-60	*52246B	Windshield wiper ..	1959-60	*31668B	R.H.D. ..	1959	745807
Side and flasher ..	1959-60	52334B/K	Knob ..	—	*54330748	Wheelbox to wheelbox ..	1959-60	54710349
Stop tail and flasher ..	1959-60	53547H	Warning lights ..	1959-60	38142A	ditto ..	1959-60	740746
ditto (U.S.A.) ..	1959-60	53643E	Flasher ..	1959-60	38140B	End tube ..	1959-60	740715
Reflex reflector (dummy filler cap) ..	1959-60	576271	Ignition ..	1959-60	38141E	Ferrule, casing retaining ..	1959	745653
Screenjet (optional) ..	1959-60	077025	Main beam ..	1959-60	38148B	Arm, right hand ..	1959-60	54710009
Starting motor ..	1959-60	25521D	Oil ..	1959-60		" left hand ..	1959	745652
Steering column control ..	1959-60	33503B	Windshield wipers ..	1959	75310A	Blade ..	1959-60	54710008
SWITCHES			Motor ..	1959-60	75374A	" " " " Later ..	1959	54711280
Dipper ..	1959-60	31284A/D	" L.H.D. ..	1959-60	75361A	" " " " Later ..	1959-60	54711283
Flasher (With overdrive) ..	1959 60	31625B/D	" R.H.D. ..	1959-60		Overdrive equipment (optional)		
Left hand drive ..	1959-60	31713A/B	Wheelbox ..	1959	72718A	Relay ..	1959	33157B
Right hand drive ..	1959-60	31712A/B	L.H.D. ..	1959	72717A	" " " " ..	1960	33174B
Ignition and starting ..	1959-60	31637A/E	L.H.D. and R.H.D. ..	1959-60	72730A	Solenoid, transmission gear ..	1959-60	*76517A/B
Lighting ..	1959-60	31426E/H	Screenjet nozzle and bush ..	1959-60	72733A	Switch ..		
Knob ..	—	54330759	Left hand ..	1959-60	72731A	Inhibitor (long thread) ..	1959	31478A
			Right hand ..	1959-60		" (short thread) ..	1960	31542A

INVACAR Invalid Carriage 1951-55

Battery ..	1951-55	PUW7E/4	LAMPS—continued			SWITCHES—continued		
Fuse box ..	1953-55	033239	Side ..	1951	A52154A	Lighting ..	1951-54	31201B
Horn ..	1951	70048D	" ..	1952-53	A52182	Knob ..	—	314026
" ..	1952-55	069225	" ..		A/D	Starting motor ..	1953-55	76423A
Horn push ..	1951-55	76210A	Tail and number plate ..	1951	*A52105A	Trafficator ..	1951-55	31379A
Junction box ..	1951-55	78266A	" ..	1952-55	*53140B	Trafficators ..	1951-52	*54012A
LAMPS			Starting motor ..	1953-55	*A53056A	" ..	1953-55	54037A
Head ..	1951	*50292D	SWITCHES		25037A	Windshield wiper		
" ..	1952-53	*50306D	Dipper ..	1951-55	*31278A	Motor ..	1951-55	*75121A
" ..	1954-55	*50292D						

ISSETTA (Gt. Britain) '300' 1957-60

Battery ..	1957-60	HO7A-8	LAMPS—continued			Reflex reflector ..	1957-59	*57075B
(special applications) ..	1960	BT7A	Head, Export Canada ..	1957-60	58148A/B	Steering column control ..	1957-60	33504A
Coil, ignition ..	1957-60	*45035H/I	Number plate illumination ..	1957-60	*53650A/B	Suppressor ..	1957-60	78105A
Flasher unit ..	1957-60	35012A	Side ..	1959-60	52391A/B	SWITCHES		
" (Canada) ..	1957-60	35010A	Side and flasher (Canada) ..	1958-60	52338A/D	Dipper ..	1957-60	*31704A
Horn ..	1957-60	70141	Side and flasher plinth ..	1958-60	576987	Flasher ..	1957-60	31695A
Horn bracket ..	1957-60	705179	Stop tail ..	1957-59	53178F	Stop lamp ..	1957-60	31082E
LAMPS			Stop tail and number plate (Canada) ..	1958-60	53426A/B	Terminal block ..	1957-60	37101B
Flasher ..	1957-60	53362B	Stop tail and number plate plinth ..	1958-60	577091	Warning lights		
Head, Home ..	1957-58	58119B	Stop tail and reflex ..	1960	53520D	Flasher ..	1957-60	38102A
Vertical dip ..	1959-60	58415A	Tail, flasher and reflex (Canada) ..	1958-60	53377B	Ignition ..	1957	38100A
R.H.D., dip left ..	1959-60	58119B	Tail, flasher and reflex plinth ..	1958-60	576808	" ..	1958-60	*319388
Head, Export ..	1959-60	58415A				Main beam ..	1957-60	38145A
Vertical dip ..	1957-58	58119B						
R.H.D., dip left ..	1959-60	58415A						

JAGUAR $\frac{1}{2}$ litre Saloon 1946-48

Ammeter ..	1946-47	*369260	LAMPS, Head, Home—			SWITCHES—continued		
" ..	1948	36071A	continued			Ignition ..	1946-48	31287A
Battery ..	1946-48	SLG11A	R.H.D., dip left (special equipment, L.H.) ..	1946-47	50161A	Lighting ..	1946-48	31056A
Coil, ignition ..	1946-48	*45020A/B	R.H.D., non-dip (special equipment, R.H.) ..	1946-47	50162A	Panel ..	1946-48	*314613
Control box ..	1946-47	*37036A	R.H.D., dip left (L.H.) ..	1948	50161A	Knob ..	1946-48	314437
" ..	1948	37057E	" non-dip (R.H.) ..	1948	50162A	Reverse lamp ..	1946-48	*31077A
Distributor ..	1946	*40057F/H	Head, Export ..			Roof lamp ..	1947-48	*314613
" ..	1947-48	40091A/H	R.H.D., dip left ..	1947	*50385B	Knob ..	—	314437
Fuse box ..	1946-47	*385175	ditto (alternative) ..	1947	50289D	Solenoid, starting motor ..	1946-48	76022B
" ..	1948	37110A	ditto (special equipment) ..	1947	50355A	Solenoid operating ..	1946-48	31361A
Generator ..	1946-48	22452A	Number plate illumination ..	1946-47	*53064A	Stop lamp ..	1946-48	31281B
Pulley ..	—	228080	ditto (special equipment) ..	1946-47	*53051A	Trafficators ..	1946-48	539941
Horn ..	1946-47	*69021A	ditto ..	1947-48	*53051A	Warning light ..	1946	*318732
Low note ..	1946-47	*69011F	Side ..	1946-48	52030A	" " ..	1947-48	*38020A
" ..	1948	*69012F	Mirror ..	1946-48	*580892	Windshield wipers		
High note ..	1946-47	*69022A	Starting motor ..	1946-48	*255986	Motor ..	1946-48	†75066A
" " ..	1948	*69012F	Steering column control ..			Clutch housing ..	1946-48	737085
LAMPS			Home ..	1946	*323137	Bracket, with shaft and coupling ..	1946-48	737054
Boot ..	1946-48	56015A	Export ..	1947-48	32758F	Shaft, short ..	1946-48	737243
Fog ..	1946-48	*55009A	" ..	1946-48	32730A	Coupling ..	1946-48	729036/S
Head, Home ..			SWITCHES			Link ..	1946-48	729234
R.H.D., dip left (with biflex, L.H.) ..	1946	*50181A	Boot lamp ..	1946-48	359236	Grommet, housing ..	1946-48	729423
R.H.D., non-dip (with biflex, R.H.) ..	1946	*50182A	Foglamp ..	1946-48	*314613	" scuttle ..	1946-48	729378
R.H.D., dip left (with tripod, L.H.) ..	1946-47	*50150D	Knob ..	1947-48	78205A	Arm ..	1946-48	*735098
R.H.D., non-dip (with tripod, R.H.) ..	1946-47	*50151B	Heater or fan ..	—	768424	Blade ..	1946-48	727707
			Knob ..					

* See Supersession Chart
L.H.D. .. Left hand drive

† No longer available—refer to Wiper Conversion Set Section
R.H.D. .. Right hand drive

L.H. .. Left hand R.H. .. Right hand

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

JAGUAR

JAGUAR 2½ litre 1946-51

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-47	*369260	LAMPS—continued			SWITCHES—continued		
"	1948	36071A	Head, Export Europe			Reverse lamp	1946-51	*31077A
"	1949-50	*36079A	(not France)	1949-51	B50778A	Roof lamp	1946-48	*314613
"	1951	36135A	ditto Later	1951	B50933A	Knob		314437
Battery	1946	SG11A	Head, Export France ..	1949-51	*50780A	Roof lamp	1949-51	*31198A
"	1947-48	SLT13A	ditto Later	1951	50935A	Knob		*315233
"	1949-51	GT11A	Head, Export U.S.A. ..	1949-51	50781A	Solenoid, starting motor	1946-49	*760080
Coil, ignition ..	1946-48	*45039A	ditto Later	1951	50936A	ditto Later	1949-51	*76411D
"	1949-51	*45012A/D	Number plate illumination	1946-48	*53051A	Solenoid operating ..	1946-48	31361A
Control box	1946-47	37046A	ditto	1949-51	*53149D	"	1949-51	31153A
"	1948-51	*37076E	ditto Later	1951	53215A	Knob		31732A
Distributor	1946	40066A	Side	1946-48	*53255A	Windshield wiper ..	1949-51	31154A
"	1946	*40096A	"	1949-51	*52043A	Knob		315140
"	1947	*40096B/D	" Later	1951	52137B	Terminal block	1949-51	300990
"	1947	40092B/E	"	1951	52175A	Trafficators	1946-48	539941
"	1948	40156D	(U.S.A.)	1951	52176A	"	1949	54003E
"	1949-51	40156E/F	Stop tail	1949-50	*52167B	"	1950-51	*54039A
Fuse box	1946-47	*385175	Stop tail and flasher	1950	*53146A			
"	1948-50	37110A	ditto	1950-51	53190B	Warning lights		
"	1951	*37100D	ditto (U.S.A.) ..	1951	*53178D	Heater	1949-51	39015A
Generator	1946-47	*22447A	ditto	1949-50	*53145B	Ignition	1946-48	*38020A
"	1948	*22429A	Mirror	1951	*53176B	"	1949-51	38048A
"	1949	*22429D/E	"	1946-48	*580892			
"	1950-51	22429F/H	"	1950	062542	Windshield wipers		
Horn			Starting motor	1951	062548	Motor	1946-48	*75066A
Low note	1946-47	*69021A	" Later	1946-47	*255721	"	1949	*75063K
"	1948-51	*69011F	"	1947-48	*25506A	"	1950	*75055K
High note	1946-47	*69022A	"	1949-50	*25523A/D	"	1951	*75055L
"	1948-51	*69012F	"	1951	*25522B	Clutch housing	1946-48	737085
Horn relay (R.H.D.)	1951	*33116B	Steering column control	1946	323770	Bracket, with shaft and		
" .. (L.H.D.) ..	1951	33135B	"	1947-48	32759F	coupling	1946-48	737054
			"	1949-51	32801J	Shaft, short	1946-48	737243
LAMPS			SWITCHES			Coupling	1946-48	729036/S
Boot	1946-51	56015A	Boot lamp	1946-48	359236	Link	1946-48	729234
Fog	1946-50	*55009A	"	1949-51	31175A	Wheelbox	1949-51	*72548A/K
"	1951	55043E	Dipper	1949-51	31284A	Crosshead and rack assy.		
Head, Home			Foglamp	1949-51	31154A	Cut to 44½	1949-51	736307
R.H.D., dip left (L.H.)	1946-48	50163B	Knob		315140	Outer casing		
" non-dip (R.H.)	1946-48	50164B	Heater or fan	1946-48	*78263A	Motor to wheelbox ..	1949-51	*739832
" dip left (L.H.)	1949-51	50778A	Knob		768424	Wheelbox to wheelbox	1949-51	739932
" non-dip (R.H.)	1949-51	*50779A	Heater or fan	1949-51	31154A	End tube	1949-51	740031
" dip left (L.H.)	1949-51		Knob		315140	Grommet, housing ..	1946-48	729423
" Later	1951	50933A	Ignition	1946-48	31287A	" scuttle	1946-48	729378
" non-dip (R.H.)	1951	*50934A	"	1949-51	31216A	" wheelbox	1949-51	734181
Head, Export			Lighting	1946-48	31056A	Arm	1946-48	*735098
R.H.D., dip left ..	1947-48	50307B	"	1949-51	31227A	"	1949	736423
"	1949-51	50778A	Knob		327074	" left hand	1950-51	*737596
L.H.D., dip right ..	1947-48	50489B	Panel	1946-48	*314613	" right hand	1950-51	*737595
"	1949-51	A50778A	Knob		314437	Blade	1946-48	727707
			Panel	1949-51	31154A	"	1949	736428
			Knob		315140	"	1950-51	*737572

JAGUAR 3½ litre Mk. V 1946-52; Mk. VII 1952-58

Ammeter	1946-47	*369260	Generator	1948	*22429A	LAMPS—continued		
"	1948	36071A	"	1949	*22429D/E	Head, Export		
"	1949-50	*36079A	"	1950-52	*22429F/H	R.H.D., dip left ..	1947-48	50307B
"	1951	36135A	"	1953-58	*22462A/E	"	1949-51	50778A
Battery	1946	SG11A	Horn			"	1952-54	50933A
"	1947-48	SLT13A	Low note	1946-47	*69021A	R.H.D., dip left ..		
"	1949-50	GT11A	" (Export) ..	1948-53	*69011F	(L.H. and R.H.) ..	1955	*51505A
Coil, ignition ..	1946-58	*45039A	"	1954-58	*70063A/E	L.H.D., dip right ..	1956-58	*51762A
"	1951-55	*45012A/D	High note	1951-52	*69032A	"	1947-48	50489B
"	1955	*45054D	"	1953-54	*70063A	"	1949-51	A50778A
Control box	1946-47	37046A	"	1946-47	*69022A	"	1952-54	A50933A
"	1948-50	*37076E	"	1948-53	*69012F	"	1955	*51506A
"	1951-53	*37118A	" (Export) ..	1954-58	*70071A/E	"	1956-58	51763A
"	1953-56	*37139D/E	Horn relay (Home) ..	1951-52	*69033A	Head, Export Europe		
"	1957-58	37183H	" (Export) ..	1953-54	*70071A	(not France)	1949-51	B50778A
Distributor	1946-47	*40080A	Inspection lamp sockets	1951-53	33135B	(except countries listed)	1952-54	B50933A
"	1947	40093D	LAMPS	1951-53	*33116B	"	1955-58	51507A
"	1948-50	40149E/F	Boot	1951-58	38604A	Head, Export France ..	1949-51	*50780A
7-1" compression ratio			Flasher, front	1946-51	56015A	" Later	1951-54	50935B
(Standard)	1951-55	*40263A/B	" Later	1955	*52222A	"	1955-58	51563A/B
ditto	1955	40435A	" (U.S.A.) ..	1957-58	52271A	Head, Export Switzerland	1953	51472A
ditto (Competition)	1955	40435A	Fog	1957-58	52343A	Head, Export Holland and		
(Standard)	1956-58	40435A	"	1946-50	*55009A	Switzerland	1955-58	51565B
8-1" compression ratio	1951-53	*40276A/B	"	1951	55043E	Head, Export Norway and		
(Standard)	1954-58	*40372A	"	1955-56	55128B	Sweden	1953-54	51479A
(Competition) ..	1955-58	*40436A	"	1957-58	55174D	ditto	1955-58	51564A/B
(Special equipment)	1956-58	40445A/B	" (France) ..	1955-58	55133B	Head, Export U.S.A. ..	1949-51	50781B
Flasher unit	1953-56	*35003A	Head, Home			"	1952-54	*50936A
"	1957-58	35010A	R.H.D., dip left (L.H.)	1946-48	*50163B	"	1955-58	51562A/B
Flasher relay	1953-58	33117A/D	" non-dip (R.H.)	1946-48	50164B	Map reading	1951-58	39006A
Fuse box	1946-47	*385175	" dip left (L.H.)	1949-51	50778A	Number plate illumination	1946-48	*53051A
"	1948-50	37110A	" non-dip (R.H.)	1949-51	*50779A	ditto	1949-51	*53149D
"	1951-57	*37100D	" dip left (L.H.)	1952-54	50933A	ditto Later	1951-52	*53255A
"	1958	37263A	" non-dip (R.H.)	1952-54	*50934A	ditto	1953-58	53215A
Generator	1946-47	*22447A	R.H.D., dip left ..	1955	*51505A	Number plate and reverse		
Pulley	—	228080	(L.H. and R.H.) ..	1956-58	*51762A	(France)	1957-58	53556A

* See Supersession Chart
L.H. .. Left hand R.H. .. Right hand

† No longer available—refer to Wiper Conversion Set Section
L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)

‡ and reverse

continued



Equipment Specification

JAGUAR

JAGUAR 3½ litre Mk. V 1946-52; Mk. VII 1952-58—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued			Windshield wipers—cont'd		
Side	1946-48	*52043A	Panel	1951-58	31114A	Wheelbox	1949-50	*72548A/K
"	1949-51	52137B	Knob	—	315242	"	1951-52	72625A/E
"	1951-58	52175D	Petrol	1951-54	31304A	"	1952-58	72628A/H
" (U.S.A.)	1951	52167B	Knob	—	316645	Crosshead and rack assy.		
"	1951-54	52176A	Petrol	1955-58	31429A/D	Cut to 44 1/8"	1949-50	736307
Stop tail	1949-50	*53120B	Knob	—	316645	"	1951-52	738223
" (U.S.A.)	1949-50	*53145A	Reverse lamp	1946-58	*31077A/E	Crosshead and rack assy.	1953-56	741262
"	1950-51	*53196B	Solenoid, starting motor	1946-49	*760080	Cut to 50 1/8"	1958	744257
"	1950	*53146A	ditto	1949-58	*76411D/E	Outer casing		
"	1950-51	*53176B	Solenoid operating	1946-48	31361A	Motor to wheelbox	1949-50	*739832
"	1951-54	53178D	Knob	1946-48	31153A	ditto	1951-52	738223
" (left hand)	1955-58	53340E/F	Solenoid operating	1949-51	317324	ditto	1952-58	740713
" (right hand)	1955-58	53341E/F	Knob	—	—	Wheelbox to wheelbox	1949-50	739932
Mirror	1946-48	580892	Solenoid operating	1951-58	31253A/E	ditto	1951-52	*739975
"	1950	*062542	Knob	—	317365	ditto	1952-58	740714
"	1951-52	062548	Step light	1951-54	31175A	End tube	1949-52	740031
Left hand (Export only)	1955-58	062590	Windshield wiper	1949-51	31154A	"	1952-58	740746
Right hand (Export only)	1955-58	062587	Knob	—	315140	Grommet, housing	1946-48	729278
Starting motor	1946-49	*270401	Windshield wiper	1951-52	31304A	"	1946-48	*735098
"	1950-51	26032B	Knob	—	316623	Arm	1946-48	736423
"	1951-58	26062A	Windshield wiper	1952-58	*31302A/D	"	1949	*737596
Steering column control	1946	323770	Knob	—	316646	" left hand	1950-51	737571
ditto	1947-48	32759F	Terminal block (4-way)	1949-58	300990	"	1951-52	*737571
ditto	1949-51	32801J	" (8-way)	1948-58	37082A	"	1952-55	*741290
ditto	1951-54	32847D	Trafficators	1946-48	539941	"	1956-58	745083
ditto	1955-58	32922A/D	"	1949	54003E	" right hand	1950-51	*737595
Suppressor	1955	78113A	"	1950-51	*54039A	"	1951-52	*737570
"	1956-58	78114A	"	1952-54	54044D	"	1952-55	*741291
SWITCHES			Warning lights			"	1956-58	745082
Boot lamp	1946-48	359236	Flasher	1955-58	38048A	Blade	1946-48	727707
"	1949-51	31175A	Bulb holder	—	305411	"	1949	736428
Dipper	1949-58	31284A	Bezel and glass	—	305721	"	1950-52	*737572
Foglamp	1949-51	31154A	Heater	1949-51	39015A	"	1952-58	741680
Knob	—	315140	Ignition	1946-48	*38020A	Optional equipment:		
Heater or fan	1946-48	*78263A	Bulb holder	1949-58	38048A	Borg Warner automatic		
Knob	—	768424	Bezel and glass	—	305414	transmission		
Heater or fan	1949-51	31154A	Trafficator	1951-54	38048A	Cover, selector	1954-58	397046
Knob	—	315140	Windshield wipers			"	1954-58	39022E
Heater or fan	1951-58	31113A/D	Motor	1946-48	†75066A	Starting motor	1954	*26085A
Knob (heater control)	—	316486	"	1949	*75063K	"	1955-58	26097B/D
(fan)	—	316485	"	1950	*75055K	Switches		
Ignition	1946-48	31287A	"	1951-52	*75088M	Hydraulic pressure	1954-58	31393A
"	1949-51	31216B	"	1952-53	*75147E	Interrupter	1954-58	*31077A/E
"	1951-58	31187D/E	" (left hand drive)	1954-56	75231A	Solenoid, brake line		
Lighting	1946-48	31056A	"	1957-58	*75291A	valve	1954-58	76502D/E
Knob	1949-51	31227A	" (from Chassis			Throttle	1954-58	31392A
"	—	327074	760989) Later	1958	75319A	Laycock de Normanville		
Lighting	1951-54	31303A	"	1957-58	75231A	overdrive		
Knob	—	316622	" (from Chassis	1958	75308A	Relay	1954-57	33157A/B
Lighting	1955-58	31428A/E	780777) Later	1958	737085	"	1958	33174B
Knob	—	316622	Clutch housing	1946-48	737054	Switches		
Map light	1951-58	31113A	Bracket, with shaft and			Centrifugal	1954-58	76102A
Knob	—	316487	coupling	1946-48	737243	Interrupter (gear lever)	1954-58	*31077E
Panel	1946-48	*314613	Shaft, short	1946-48	729036/S	Rotary throttle	1954-57	31402A/B
Knob	—	314437	Coupling	1946-48	729234	"	1958	31504B
Panel	1949-51	31154A	Link	1946-48		Solenoid, transmission		
Knob	—	315140				gear	1954	*76500E

JAGUAR Mk. VIII 1957-59; Mk. IX 1959-60

Ammeter			LAMPS—continued			LAMPS—continued		
Battery	1957-60	36128A/B	Fog	1957-60	55174D/E	Stop tail, flasher and reflex		
"	1957-59	GT11A	" (France)	1957-60	55133E/F	Left hand	1960	53728A
Coil, ignition	1957-60	*45067D/H	Head, Home	—	—	Right hand	1960	53729A
Control box	1957	37183H	R.H.D., dip left	1957-60	51762A	U.S.A. (left hand)	1960	53759A
"	1958-59	*37189J	Head, Export	—	—	" (right hand)	1960	53760A
"	1959-60	37297A/B	R.H.D., dip left	1957-60	51762A	Mirror		
"	1960	37301B/D	L.H.D., dip right	1957-60	51763A	(Mk. IX)	1959-60	062564
Distributor (Mk. VIII)			Head, Export Europe			Left hand (Export only)	1957-60	062590
7-1 compression ratio	1957-59	40578A/D	(except countries listed)	1957-60	51507A	Right hand (Export only)	1957-60	062587
8-1	1957-59	40576A/D	Head, Export France	1957-60	51563B	Starting motor	1957-60	26062A
Distributor (Mk. IX)			"	1960	58588A	Steering column control		
8-1 compression ratio	1959-60	40640A/D	Head, Export Holland and			(Mk. VIII)	1957-59	32922D
9-1	1959-60	40665A/B	Switzerland	1957-60	51565A/B	(Mk. IX)	1959-60	329902H
Flasher unit	1957-60	35010A	Head, Export Norway and			Slip ring (serviced by		
Flasher relay (Mk. VIII			Sweden	1957-59	51564B	Jaguar)	1959-60	328266B
only)	1957-59	33117A/D	Head, Export Norway and			Suppressor	1957-60	78114A
Fuse box	1957	*37100D	Germany	1959-60	51564B	SWITCHES		
Generator (Mk. VIII)			Head, Export Sweden	1960	58632A	Dipper	1957-60	31284A/D
Power steering	1957-59	*22462E	Head, Export Austria	1960	58633A	Flasher (Mk. IX)	1959-60	*31776B
"	1959	*22524E	Head, Export Italy	1959-60	58293A	Heater or fan (Mk. VIII)	1957-59	31113A/D
"	1959-60	†22528A/D	Map reading light	1957-60	39006A	"	1959-60	31114E
"	1960	22803A	Number plate and reverse			Knob, fan (Mk. VIII)	1957-59	316485
Horn			ditto (France)	1957-60	53215A	"	1959-60	54331265
Low note	1957-60	*70063E/F	Side	1957-60	52175D	" heater	1957-60	316486
High note	1957-60	*70071E/F	" (Switzerland)	1960	52499A	Ignition (Mk. VIII)	1957-59	31187D/E
Inspection lamp sockets	1957-60	38604A	Stop tail and flasher			(Mk. IX)	1959-60	*31484B
LAMPS			Left hand	1957-58	53340F	Lighting	1957-60	31428A/E
Flasher, front	1957-60	52271A/B	"	1959	53340H	Knob	—	316622
" (U.S.A.)	1957-60	52343B	Right hand	1957-58	53341F	Map light	1957-60	31113A/D
" (Switzerland)	1960	52500A	"	1959	53341H	Knob	—	316487

* See Supersession Chart
 † No longer available—refer to Wiper Conversion Set Section
 ‡ On Mk. VIII when power steering fitted

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)

continued



Equipment Specification

JAGUAR

JAGUAR Mk. VIII 1957-59: Mk. IX 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES—continued			Windshield wipers			Optional equipment:		
Panel	1957-60	31114E	Motor, left hand drive	1957	*75291A	Borg Warner automatic transmission		
Knob	—	315242	ditto .. Later	1957-60	75319B	Cover, selector (Mk. VIII) ..	1957-59	397046
Petrol	1957-60	31429B/E	Motor, right hand drive	1957	75231A	Cover, selector illumination ..	1957-60	39022E
Knob	—	316645	ditto .. Later	1957-60	75308B	Starting motor ..	1957-60	26097B/D
Reverse lamp ..	1957-60	*31077E	Wheelbox (Mk. VIII) ..	1957-59	72628A/H	Switches		
Solenoid, starting motor	1957-60	*76411E	" (Mk. IX) ..	1959-60	72719A	Hydraulic pressure ..	1957-60	31393A
Solenoid operating	1957-60	31253E	Crosshead and rack assy. (Mk. VIII) ..	1957-58	741262	Interrupter ..	1957-60	*31077E
Knob	—	317365	ditto .. Later	1958-59	744257	Solenoid, brake line valve ..	1957-60	76502D/E
Step light ..	1957-60	*31222D	Crosshead and rack assy. (Mk. IX) Cut to 58½"	1959-60	744258	Solenoid, gear holding	1957-60	*76459A/D
Windshield wiper	1957-60	*31302D	Outer casing			Throttle ..	1957-60	31392A
Knob	—	316646	Motor to wheelbox (Mk. VIII) ..	1957-59	740713	Laycock de Normanville overdrive		
Terminal block (4-way) (Mk. VIII) ..	1957-59	300990	(Mk. IX) ..	1959-60	54710694	Relay	1957	33157D
(Mk. IX)	1959-60	37101B	Wheelbox to wheelbox (Mk. VIII) ..	1957-59	740714	"	1958-60	33174B
Terminal block (8-way) ..	1957-60	37082A	(Mk. IX) ..	1959-60	54710695	Switches		
Warning lights			End tube ..	1957-60	740746	Centrifugal (Mk. VIII only) ..	1957-59	76102A
Brake	1960	*38091A	Ferrule, casing retaining	1959-60	740715	Interruptor or top gear	1957-60	*31077E
Flasher	1957-60	38048A	Arm, left hand drive ..	1957-59	741847	Rotary throttle (Mk. VIII) ..	1957-59	31402B
Bulb holder ..	—	305411	" .. right hand drive ..	1957-59	54711568	(Mk. IX) ..	1959-60	31504D
Bezel and glass ..	—	305721	" .. " ..	1960	54711567	Solenoid, transmission gear ..	1957-58	*76505B
Ignition	1957-60	38048A	Blade	1957-59	738734	ditto ..	1959-60	76515A
Bulb holder ..	—	305414	" Later	1959-60	54710656			
Bezel and glass ..	—	305720						

JAGUAR 2.4 litre 1956-59: Mk.II 1960

Ammeter	1956-57	36206D	LAMPS—continued			SWITCHES—continued		
" Later	1957-59	36237A	Stop tail and flasher			Solenoid operating ..	1956-59	31253A/E
"	1960	36262A	Left hand	1956-59	53381D/H	Knob	—	*317370
Battery	1956-60	GT9A	Right hand	1956-59	53382D/H	Solenoid operating ..	1960	31967A
Bulb holder, panel light	1958-60	554734	Left hand	1960	53726A	Stop lamp	1958-60	31082B
Bulb	—	987	Right hand	1960	53727A	Windshield wiper ..	1956-59	*31427B/D
Coil, ignition ..	1956-60	*45067B/H	U.S.A. (left hand) ..	1960	53757A	Knob	—	312613
Control box ..	1956	*37139E	" (right hand) ..	1960	53758A	Windshield wiper	1960	*31966B
"	1957-58	37183H	Screenjet			Warning lights		
" Later	1958-59	*37189J	Motor and jar ..	1960	077011A	Choke	1957-60	38147A
"	1959-60	37297A/B	"T" piece	1960	295091	Brake fluid level	1960	*38075A
Distributor			Tubing	1960	*54711658	" Later	1960	*38091A
7-1 compression ratio ..	1957-60	40557A/B	Nozzle	1960	54711657	Windshield wipers		
8-1	1956-60	40528A/B	Starting motor ..	1956-60	25521D	Motor, left hand drive	1956-57	*75294A
Flasher unit ..	1956	*35003A	Steering column control ..	1956-59	32902F/H	ditto	1958	*75323A
"	1957-60	35010A	"	1960	33550A	ditto .. Later	1958-60	75311A/B
Fuse box	1956-57	033239	Slip ring "serviced by Jaguar" ..	1956-59	38262A/E	Motor, right hand drive	1956-57	*75293A
"	1958-60	033242	ditto	1960	38271A	ditto	1958	*75322A
Generator	1956-59	*22483A/D	Steering column nacelle			ditto .. Later	1958-60	75310A/B
" Later	1959-60	22489B/D	Nacelle, upper:			Wheelbox	1956-58	72677A
Horn			Conventional	1960	54360427	ditto	1959-60	72714A/B
Low note	1956-60	*70063D/F	Overdrive	1960	54360623	Crosshead and rack assy.	1956-58	741262
High note	1956-60	*70071D/F	ditto	1960	54360621	ditto .. Later	1958-60	744257
Inspection lamp sockets ..	1956-57	38604A	Automatic	1960	54360426	Outer casing		
Junction box ..	1960	78264B	ditto	1960	54360425	Motor to wheelbox ..	1956-60	743818
LAMPS			Automatic	1960	54360619	Wheelbox to wheelbox	1956-60	743819
Flasher, front ..	1960	52479A	Cover, lower:			End tube	1956-60	740746
" (U.S.A.) ..	1960	52480A	Conventional	1960	54360363	Ferrule, casing retaining	1956-60	740715
Fog "when fitted" ..	1956	55128D	Overdrive	1960	54360624	Grommet, wheelbox ..	1959-60	740811
" Later	1956-59	55174A/D	ditto	1960	54360419	Arm, left hand drive ..	1956	*741293
"	1960	55232A	Automatic	1960	54360622	ditto	1957-58	741844
" (France, when fitted)	1956-59	55133B/F	ditto	1960	54360420	ditto .. Later	1958-59	745650
"	1960	55233A	Automatic	1960	54360420	ditto	1960	54711526
Head, Home			SWITCHES			Arm, right hand drive ..	1956	*741292
R.H.D., dip left ..	1956-58	51767D	Choke warning light ..	1960	31931A	ditto	1957-58	741845
"	1959-60	58225A	Dipper	1956-60	31284A	ditto .. Later	1958-59	745651
Head, Export			Cap, rubber	—	360026	ditto	1960	54711525
R.H.D., dip left ..	1956-58	51767D	Flasher	1956-59	31559E	Blade	1956-59	738734
"	1959-60	58225A	"	1960	31964E	" Later	1959	54710656
L.H.D., dip right ..	1956-58	51791D/E	" (headlamp) ..	1960	34314A	"	1960	54711282
"	1959-60	58226A	Hand brake	1960	31504D	Optional equipment:		
Head, Export Europe (except countries listed)	1956	51339D	Heater or fan (when fitted) ..	1956-59	31529A	Borg Warner automatic transmission		
ditto	1957-60	51738B/D	ditto	1960	31960A	Knob, selector ..	1960	54332201
ditto Later	1960	58230E	Ignition	1956-59	31287B/F	Starting motor ..	1958-60	26097D
Head, Export France ..	1956	*51590B/E	"	1960	31962A	Switches		
"	1957-60	51886A	Interior light ..	1956-59	31527A	Hydraulic pressure ..	1958-60	31393A
" Later	1960	58231A/E	Lighting	1956-59	31963A	Inhibitor	1958-59	31680A
Head, Export Norway, Sweden and Germany ..	1956-60	51792D/E	Knob	—	31426A/H	"	1960	31972A
Head, Export Sweden			Escutcheon plate ..	—	305608	Interrupter	1958-60	*31077E
Later	1960	58450A	Lighting (special equipment) ..	1956-59	31524A/E	Solenoid, brake line ..	1958-60	76502E
Head, Export Italy ..	1959-60	58230B/E	Knob	—	317603	" gear holding	1958	*76459D
Head, Export Austria ..	1960	58634A	Escutcheon plate ..	—	305604	"	1959-60	76516B
Head, Export U.S.A. ..	1956	51343B	Lighting			Throttle	1958-59	31392A
"	1957-59	51741B	4-position	1960	31981A	Laycock de Normanville overdrive		
"	1960	*58497B	3-position (U.S.A.) ..	1960	31902A	Relay	1956-57	33157B/D
" Later	1960	58669A	Lever	—	54332270	"	1958-60	33174B
Map reading ..	1960	52477A	Escutcheon plate ..	—	54850095	Switches		
Number plate, boot and reverse ..	1956-60	53453A	ditto (U.S.A.) ..	—	54850094	Interrupter	1956-60	*31077E
ditto (France) ..	1956-60	53557A	Panel	1956-59	31528A	Overdrive (L.H.) ..	1960	31965B
Side (except Switzerland) ..	1960	52474A	"	1960	31969A	" (R.H.) ..	1960	34313A
Side and flasher ..	1956-59	52264A	Reverse lamp ..	1956-60	*31077E	Rotary throttle ..	1958-60	31504D
ditto (Switzerland) ..	1960	52498A	Screenjet	1960	31984A	Solenoid, transmission gear ..	1956-58	*76505B
			Solenoid, starting motor	1956-60	*76411E	ditto	1959-60	76515A

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

JAGUAR

JAGUAR 3.4 litre 1958-59: Mk. II 1960: 3.8 litre 1960

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1958-59	36237A	LAMPS—continued			SWITCHES—continued		
Battery	1960	36262A	Stop tail and flasher—cont'd			Solenoid, starting motor	1958-60	*76411E
Bulb holder, panel light ..	1958-59	GTW9A-2	Left hand	1960	53726A	Solenoid operating ..	1958-59	31253E
Bulb	1960	BV11A	Right hand	1960	53727A	Knob	—	*317370
Coil, ignition	1958-60	554734	U.S.A. (left hand) ..	1960	53757A	Solenoid operating ..	1960	31967A
Control box	1959-60	987	U.S.A. (right hand) ..	1960	53758A	Stop lamp	1958-60	31082B
Distributor (3.4 litre)	1958-60	*45067D/H	Screenjet			Windshield wiper ..	1958-59	*31427D/E
7-1 compression ratio ..	1958-59	*37189J	Motor and jar	1960	077011A	Knob	—	312613
8-1	1959-60	37297A/B	"T" piece	1960	295091	Windshield wiper ..	1960	*31966A
9-1	1960	40640B/D	Tubing	1960	*54711658	Warning light (brake fluid level) ..	1960	*38075A
Distributor (3.8 litre)	1958-60	40578A/D	Nozzle	1960	54711657	Windshield wipers ..		
8-1 compression ratio ..	1958-60	40576A/D	Starting motor	1958-60	26140A	Motor, left hand drive	1958	*75323A
9-1	1959-60	40617A/B	Steering column control	1958-59	32902H	ditto (from Chassis 986134) Later	1958-60	75311A
Flasher unit	1960	40640B/D	Slip ring (serviced by Jaguar)	1958-59	38262A	Motor, right hand drive	1958	*75322A
Fuse box	1960	40665B	Steering column control	1960	33550B/D	ditto (from Chassis 970327) Later	1958-60	75310A
Generator	1958-60	35010A	Slip ring (serviced by Jaguar)	1960	38271A	Wheelbox	1958	72677B
" (power steering)	1958-59	*22462E	Steering column nacelle			"	1959-60	72714A
Horn	1959-60	22496B/D	Nacelle, upper: ..			Crosshead and rack assy.		
Low note	1960	22528D	Conventional	1960	54360427	Cut to 50	1958	741262
High note	1958-60	*70063E/F	Overdrive	1960	54360623	" " 50 Later	1958-60	744257
LAMPS			Automatic	1960	54360621	Outer casing		
Flasher, front	1960	52479A	"	1960	54360425	Motor to wheelbox ..	1958-60	743818
" (U.S.A.)	1960	52480A	Cover, lower: ..			Wheelbox to wheelbox	1958-60	743819
Fog	1958-59	55174D	Conventional	1960	54360363	End tube	1958-60	740746
"	1960	55232A	Overdrive	1960	54360624	Arm, left hand drive ..	1958	741845
" (France)	1958-59	55133F	Automatic	1960	54360419	ditto Later	1958-59	745651
Head, Home	1960	55233A	"	1960	54360622	Arm, right hand drive ..	1958	741844
R.H.D., dip left	1958	51767D	SWITCHES			ditto Later	1958-59	745650
"	1959-60	58225A	Dipper	1958-60	31284A	ditto	1960	54711525
Head, Export			Cap, rubber	—	360026	Blade	1958-59	738734
R.H.D., dip left	1958	51767D	Flasher	1958-59	31559E	" Later	1959	54710656
"	1959-60	58225A	"	1960	31964E	"	1960	54711282
L.H.D., dip right	1958	51791D/E	" (headlamp) ..	1960	34314A	Optional equipment:		
"	1959-60	58226A	Hand brake	1960	31504D	Borg Warner automatic transmission		
Head, Export Europe (except countries listed)	1958-60	51738B/D	Heater or fan	1958-59	31529A	Knob, selector	1960	54332201
ditto Later	1960	58230E	Ignition	1960	31960A	Starting motor	1958-60	26097D
Head, Export France	1958-60	51886A	"	1958-59	31287D/F	Switches		
" Later	1960	58231A/E	Interior light	1960	31962A	Hydraulic pressure ..	1958-60	31393A
Head, Export Norway, Sweden and Germany ..	1958-60	51792B/H	Lighting	1958-59	31527A	Inhibitor	1958-59	31680A
Head, Export Sweden	1960	58450A	"	1960	31963A	"	1960	31972A
Head, Export Italy	1959-60	58230A/E	Knob	—	317603	Interrupter	1958-60	*31077E
Head, Export Austria	1960	58634A	Escutcheon plate ..	—	305608	Solenoid, brake line ..	1958-60	76502E
Head, Export U.S.A.	1958-59	51741B	Lighting (special equipment) ..	1958-59	31524B/E	" gear holding	1958	*76459D
"	1960	*58497A/B	"	—	317603	Throttle	1959-60	76516B
"	1960	58669A	Escutcheon plate ..	—	305604	"	1958-59	31392A
Map reading	1960	52477A	Lighting			Laycock de Normanville overdrive	1960	31931A
Number plate, boot and reverse	1958-60	53453A	4-position	1960	31981A	Relay	1958-60	33174B
ditto (France)	1958-60	53557A	3-position (U.S.A.) ..	1960	31982A	Switches		
Side (except Switzerland) ..	1958-60	52474A	Lever	—	54332270	Interrupter	1958-60	*31077E
Side and flasher	1958-59	52264A	Escutcheon plate ..	—	54850095	Overdrive (L.H.) ..	1960	31965B
ditto (Switzerland)	1960	52498A	ditto (U.S.A.)	—	54850094	" (R.H.)	1960	34313A
Stop tail and flasher ..			Panel	1958-59	31528A	Rotary throttle	1960	31504B/D
Left hand	1958-59	53381H	Reverse lamp	1958-60	31969A	Solenoid, transmission gear	1958	*76505B
Right hand	1958-59	53382H	Screenjet	1960	*31077E	ditto	1959-60	76515A

JAGUAR XK120 1949-54: XK140 1955-57: XK150 1958-60

Ammeter	1949-57	36071A/B	Flasher unit	1953-56	*35003A	LAMPS—continued		
"	1958-60	36237A	Flasher relay	1957-60	35010A	Fog	1952-54	*55055B
Battery	1949-53	SG11E	Fuse box	1953-59	33117A	"	1955-56	55128B/D
" (Fixed Head Coupé) ..	1954	STG11E	"	1949-54	37110A	"	1957-60	55174D/E
" (other models)	1955-57	STG11E	" Later	1954-58	*37100D	" (France)	1955-60	55133B/F
" (all models)	1958-60	STG11E	"	1959-60	37263B	Head, Home		
Coil, ignition	1949-54	*45012A/D	"	1955	033240	R.H.D., dip left (L.H.)	1949-50	50838A
"	1955	*45054D	"	1956-58	033239	" non-dip (R.H.) ..	1949-50	*50839A
"	1956-60	*45067B/H	"	1959-60	033242	" dip left (L.H.) ..	1951-54	50778A
Control box	1949-54	*37076E	Generator	1949	*22429D/E	" non-dip (R.H.) ..	1951-54	50779A
"	1955-59	*37189D/J	"	1950-52	*22429F/H	R.H.D., dip left	1955	*51505A
" Later	1959-60	37297A/B	"	1953-59	*22462B/E	"	1956-60	51762A
Distributor			Horn	1959-60	22496B/D	Head, Export		
7-1 compression ratio ..	1949-53	40198A/D	Low note	1949-52	*69032A	R.H.D., dip left	1949-50	50838A
ditto Later	1953-54	40249A/B	"	1953-54	*69011F	"	1951-54	50778A
ditto	1955-57	40435A	" (Export)	1955-60	*70063A	"	1955	*51505A
ditto	1958-60	40578B/D	High note	1949-52	*70063D/F	"	1956-60	51762A
ditto	1949-54	*40199E	"	1953-54	*69033A	L.H.D., dip right	1949-50	A50838A
8-1 compression ratio ..	1955-57	*40436A	" (Export) ..	1955-60	*69012F	"	1951-54	A50778A
(Standard)	1958-60	40576A/D	"	1953-54	*70071A	"	1955	*51506A
(Competition)	1955-57	*40436A	Horn relay	1949-50	*70071D/F	"	1956-60	51763A
(Special equipment) ..	1958-60	*40199E	"	1951-54	*33116B	Head, Export Europe (not France)	1949-50	B50838A
9-1 compression ratio ..	1955-57	*40293A	Junction box	1951-54	*33135B	(except countries listed)	1951-54	B50778A
3.8 litre	1959-60	40616A/B	LAMPS			Head, Export France ..	1949-50	*50840A
8-1 compression ratio ..	1960	40640A/D	Boot	1949-57	56015A	"	1951-54	51194A
9-1	1960	40665B	Flasher, front	1955-60	52271A	" Later	1955-60	51563A
			" (U.S.A.) ..	1957-60	52343A	"	1960	58588A
			" (Switzerland)	1960	52500A	Head, Export Holland and Switzerland	1955-60	51565A/B

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued



JAGUAR XK120 1949-54: XK140 1955-57: XK150 1958-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued			Windshield wipers—cont'd		
Head, Export Switzerland	1952-54	51478A	Ignition	1949-60	31287A/D	Motor	1955-57	*75233A
Head, Export Norway and Sweden	1952-54	51480A	Interior light	1949-52	31228A	.. (left hand drive)	1958-60	75308A
ditto	1955-59	51564A/B	Knob	—	314437	.. (right hand drive)	1958-60	75319A
Head, Export Norway and Germany	1959-60	51564B	Interior light	1953-57	*31389A	Wheelbox (Sports) ..	1949-54	72590A/K
Head, Export Sweden	1960	58362A	Knob	—	*317515	.. (Coupe)	1952-54	72630A/F
Head, Export Austria	1960	58633A	Interior light	1958-60	31527A		1955-57	72649B
Head, Export Italy	1959-60	58293A	Lighting	1949-52	31056A		1958	72698A
Head, Export U.S.A.	1949-50	50841A	Knob	1953-54	31387A	Crosshead and rack assy. (Sports)	1959-60	72715A
"	1951-54	50781B	Lighting	—	317603	.. Cut to 36 $\frac{1}{8}$ "	1949-50	738987
"	1955-59	51562A/B	Knob	1955-59	31426A/E	(Coupe)	1951-54	736177
"	1960	58546A/D	Lighting (alternative until 1960)	—	317603	Cut to 34 $\frac{1}{8}$ "	1952-54	738764
Number plate and reverse ditto	1949-50	53161D	Knob	1955-60	31524A	L.H.D. Cut to 41 $\frac{1}{8}$ " ..	1955-57	741263
ditto	1951-57	*53159B	Panel	—	317603	.. Later	1958	744256
ditto	1958-60	53215A	Knob	1949-52	31228A	R.H.D.	1958-60	744254
ditto (France)	1957	53551A	Panel	1953-54	314437	(Open 2-seater)	1959-60	744256
ditto	1958-60	53556A	Knob	—	314437	Outer casing		
Side	1949-52	*52150B	Panel	1953-54	*78218A	Motor to wheelbox (Sports)	1949-50	739833
Indicator window	1953-60	52175A/D	Knob	—	768913		1951-54	739870
Spring clip	—	5713449	Panel	1955-57	78253B	(Coupe)	1952-54	739855
Side (U.S.A.)	1952-54	52176A	Knob	—	768913		1955	740952
" (Sports)	1954	52176A	Panel	1958-60	31528A	(Open 2-seater)	1956-57	740952
" (Switzerland)	1960	52449A/D	Petrol/Oil	1949-52	31229A	(Coupe)	1956-57	740952
Stop tail	1949-50	*53151D	Reverse lamp	1949-60	*31077A	Left hand drive	1958	745534
"	1951-54	53178D	Solenoid, starting motor ..	1949-60	*76411D/E	.. Later	1958-60	747248
Stop tail and flasher Left hand	1955-59	*53350H	Solenoid operating	1949-52	31361A	Right hand drive	1958-60	747248
Right hand	1955-59	*53351H	Knob	1953-60	31253E	(Open 2-seater)	1959-60	54710186
Left hand	1960	53738A	Knob	—	*317370	Wheelbox to wheelbox (Sports)	1949-54	*739933
Right hand	1960	53739A	Stop lamp	1954-60	31082B/H		1952-54	739937
U.S.A. (left hand)	1960	53755A	Windshield wiper	1949-52	31228A	(Coupe)	1955	740953
" (right hand)	1960	53756A	Knob	—	314437	(Open 2-seater)	1956-57	745127
Starting motor	1949	26042A	Windshield wiper (Coupe) ..	1953-54	31304A	(Coupe)	1956-57	740953
" Later	1949-52	24042E	Knob	—	317602	(XK150)	1958-60	745555
"	1953-60	26062A	Windshield wiper (Sports) ..	1953-54	*31391A	End tube	1949-54	740031
Steering column control (Sports)	1949-52	32809H	Knob	—	317602		1955-58	740746
"	1953-54	32847D	Windshield wiper (Sports) ..	1953-54	*31391A	Ferrule, casing retaining ..	1958-60	740715
(Coupe)	1952-54	32847D	Knob	1955-60	*31427A/D	Grommet, wheelbox	1949-54	734458
Steering column control ..	1955-60	32902F/H	Windshield wiper	1955-57	*318168	Arm	1949-50	*736411
Slip ring (serviced by Jaguar)	1955-58	*38261A	Knob	1958-60	312613	" left hand	1951-54	*737625
ditto	1959-60	38263A	Terminal block	1958-60	37101B	"	1955	*741295
SWITCHES			Warning lights			"	1956-57	745081
Boot lamp	1949-57	*31222A	Flasher	1953-55	38048A	"	1958	741844
Dipper	1949-60	31284A/D	Bulb holder	1956-57	554734	" right hand drive	1959	745650
Flasher	1955-58	31250H	Bezel and glass	1956-57	305721	"	1960	54711569
Knob (Open 2-seater) ..	—	311075	Bulb	1956-57	987	Blade	1949-50	736428
" (Coupe)	—	311301	Ignition	1949-52	*38020A	"	1951-52	*737572
Flasher	1959-60	31776A	"	1953-55	38048A	"	1953-57	741680
Striker plate (serviced by Jaguar)	—	348480	Bulb holder	1956-57	554734	"	1958	738734
Fog lamp	1953-54	31228A	Bezel and glass	1956-57	305720	"	1959-60	54710656
Knob	—	314437	Bulb	1956-57	987	Overdrive equipment (optional)		
Heater or fan	1951-54	*78262A	Windshield wipers			Relay	1956-57	33157B/D
Knob	—	768473	Motor	1949	*75088L		1958-60	33174B
Heater or fan	1955-57	*78209A	"	1950	*75084K	Switches:		
Knob	—	768473	" (Sports)	1951	*75084L	Interrupter	1956-60	*31077E
Heater or fan	1958	31529A	"	1952-54	75143A	Rotary throttle	1956-57	31402A
Knob	1959-60	*78262B	" (Coupe)	1952	*75084L		1958-60	31504B/D
"	—	768473	"	1953-54	75143A	Solenoid transmission gear	1956-58	*76505B

JAGUAR XK-SS Open 2-seater (U.S.A. only) 1958

Battery	1958	RCPR11A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1958	*45046B	Side	1958	52198A	Starting motor	1958	76438A
Control box	1958	37204A/E & H	Stop tail and flasher ..	1958	53330D	Knob	—	764354
Distributor	1958	*40473A	Starting motor	1958	25549B/D	Stop lamp	1958	31556A
Flasher unit	1958	35010A	SWITCHES			Warning lights		
Flasher relay	1958	33117D	Dipper	1958	31277D	Flasher	1958	38054A
Fuse box	1958	37110A	Flasher	1958	31250H	Ignition	1958	*38084B
Generator	1958	22279D	Knob	—	311301	Windshield wipers		
Horn	1958	*70071E	Headlamp	1958	*31202B	Motor, left hand drive ..	1958	75319A
Horn push	1958	76205B	Knob	—	*316248	Wheelbox	1958	*72702A
Junction box	1958	78266B	Ignition	1958	*31484B	Crosshead and rack assy. ..	1958	744256
LAMPS			Panel	1958	*31202B	Outer casing		
Flasher, front	1958	*52246B	Knob	—	*316246	Motor to wheelbox	1958	743599
Head	1958	51766B/E	Side lamp	1958	*31202B	Wheelbox to wheelbox ..	1958	745133
Number plate illumination	1958	53093H	Knob	—	*316249	End tube	1958	740746
						Arm	1958	741813
						Blade	1958	737910

* See Supersession Chart

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



JENSEN 3 3/4 litre 1946-47

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-47	*364391	LAMPS—continued			Trafficators	1946-47	*539971
Battery	1946-47	SLG13E	Tail	1946-47	52114A	Warning light	1946-47	*38015B
Coil, ignition	1946-47	*45039A	Mirror	1946-47	*62018A	Windshield wipers		
Control box	1946-47	*37031B	Starting motor	1946-47	26060A	Motor	1946-47	*75074J
Distributor	1946-47	*411052	Steering column control ..	1946-47	32751B	Wheelbox, with switch ..	1946-47	*72565A/J
Generator	1946-47	238498	SWITCHES			.. less switch ..	1946-47	*72564A/F
Horn			Battery master	1946-47	*768008	Crosshead and rack assy.		
Low note	1946-47	*69021A	Dipper	1946-47	31284A	Cut to 48 1/8"	1946-47	738499
High note	1946-47	*69022A	Ignition and lighting ..	1946-47	*34035A	Outer casing		
Junction box	1946-47	78266B	Petrol reserve valve ..	1946-47	*314422	Motor to wheelbox ..	1946-47	*739832
LAMPS			Reverse lamp	1946-47	*31077A	Wheelbox to wheelbox ..	1946-47	*739971
Map reading light ..	1946-47	39006A	Solenoid operating ..	1946-47	*317075	End tube	1946-47	740031
Number plate illumination	1946-47	53580A	Stop lamp	1946-47	31281B	Grommet, wheelbox ..	1946-47	*734181
Side	1946-47	*522968	Spring	—	315543	Arm	1946-47	*737481
						Blade	1946-47	*737572

JENSEN 4 litre 'Interceptor' 1950-55

Battery	1950-55	GT11A	LAMPS—continued			Warning light (ignition) ..	1950-54	*38015B
Coil, ignition	1950-55	*45012A/D	Head, Export Europe			Holder	1955	304994
Control box	1950	37057E	(not France)	1950	B50825A	Shade	1955	305305
" "	1951-52	*37076E	ditto	1951-54	*50963A	Window	1955	305303
" "	1952-55	*37139D	ditto	1955	51339A	Windshield wipers		
Distributor	1950-55	*40147D/H	Head, Export France ..	1951	*50790E	Motor	1950	*75074J
Flasher unit	1954-55	*35003A	" "	1952-54	*50962A	" "	1951-52	*75055L
Flasher relay	1954-55	33117A	" "	1955	*51590A	" "	1953-55	75152A
Fuse box	1952-55	033239	Map reading light ..	1950-55	39006A	" "	1955	75231A
Generator	1950	*22435A/B	Number plate illumination	1950-55	53097E	Wheelbox (with switch) ..	1950	*72565A/J
" "	1951	*22436A	Side	1950-51	*52092A	" (less switch) ..	1950	*72564A/F
" "	1951-53	*22465A/E	" "	1952	52139B	" "	1951-55	*72548A/K
" "	1953-55	22478A	" "	1952-55	52182B	" "	1955	72628H
Horn			Stop tail	1950	53194B	Crosshead and rack assy.		
Low note	1950-55	*69011F	" "	1951-55	53178D	Cut to 48 1/8"	1950-55	738499
High note	1950-55	*69012F	Mirror	1950-52	*062553	" " 48 1/8"	1955	741264
Horn relay	1950-55	33135B	" "	1952-53	*062557	Outer casing		
Junction box	1950-55	78266A	" "	1953-55	*062567	Motor to wheelbox ..	1950-55	*739832
LAMPS			Reflex reflector	1955	*57070A	ditto	1955	745277
Boot	1952-55	53163A	Starting motor	1950-55	26043A	Wheelbox to wheelbox ..	1950	*739971
Driving (De Luxe) ..	1955	55120A	Steering column control ..	1950-53	32751B	ditto	1951-52	*739960
Flasher, front	1954-55	53210A	ditto	1953-55	32893A/B	ditto	1953-55	*739979
Fog (De Luxe)	1955	*55055B	Suppressor	1951-55	78114A	ditto	1955	745278
Head, Home			SWITCHES			End tube	1950-55	740031
R.H.D., dip left ..	1950	50825A	Dipper	1950-55	31284A	" "	1955	740746
" " (L.H.) ..	1951	*50445K	Driving lamp (when			Ferrule, casing retaining	1955	740715
" non-dip (R.H.) ..	1951	*50446K	fitted)	1955	31201D	Later	1950	734181
" dip left	1952	*50954A	Knob	1952-55	*31222A	Grommet, wheelbox ..	1951-55	733695
" "	1952	*50941A	Door light	1955	31201D	" "	1950	*737481
" "	1952-54	51336A	Foglamp (when fitted) ..	1955	314026	" left hand drive ..	1951-54	*737596
" "	1955	51336A	Knob	1950	*34035A	" right hand drive ..	1951-54	*737595
" " (De Luxe) ..	1955	51546A	Ignition and lighting ..	1950	*34061A	" "	1955	741485
Head, Export			Panel	1951-55	31201B	Blade	1950-52	*737572
R.H.D., dip left ..	1950	50825A	Knob	1952-55	314026	" "	1953-54	*737683
" "	1951	*50445K	Reverse lamp	1950-55	*31077A	" "	1955	741680
" "	1952	*50954A	Solenoid, starting motor	1950-55	*76411D/E	Overdrive equipment		
" "	1952-54	50941A	Solenoid operating ..	1950-55	31282A	(special orders)		
" "	1955	51336A	Stop lamp	1950-54	31281B	Relay	1953-55	33157A
L.H.D., dip right ..	1950	A50825A	Spring	1955	315443	Switches		
" "	1951	*A50445K	Stop lamp	1951-55	31201B	Gear lever	1953-55	*31077A/D
" "	1952-54	*50804D	Windshield wiper ..	1955	314026	Solenoid, gearbox ..	1953-54	*76500E
" "	1955	*51337B	Knob	1950-51	54022D	" "	1955	*76505A
			Trafficators	1952-53	*54035A	Overdrive control ..	1953-55	031218
			" "	1953-54	54044D	Knob	—	314026
			" "	Later				

JENSEN 541 and 541R 1954-60

Battery	1954-58	GTW	Horn			LAMPS—continued		
" "	1958-60	11A-2	Low note	1954-60	69046A/F	Number plate illumination	1954-55	53093E
" "	1954-56	BT11A	High note	1954-60	69047A/F	Number plate illumination		
Coil, ignition	1957-60	*45012D/K	LAMPS			and reverse	1956-60	*53159B
Control box	1954-59	*37189D/J	Bonnet	1954-58	53163A	Side	1954-60	*52182A/D
" "	1960	37304B	" "	1958-60	53264B	Stop tail	1954-55	53178D
Distributor	1954-56	*40147D/H	Boot	1954-57	53163A	Stop tail and reflex ..	1956-60	53305D
" "	1957-60	40371A/F	Driving (optional) ..	1955-60	55132B	Mirror	1954-55	*062567
Flasher unit	1954-55	*35003A	Flasher, front	1954-60	53359B/D	Reflex reflector	1954-55	*57070B
" "	1956-59	35010A	Flasher, rear	1954-60	52337A	Petrol reserve valve ..	1954-60	78030A
" "	1960	35020A	Fog (optional)	1955-60	55128B	Relay, horn	1954-60	33135B/D
Fuse box	1954-60	033239	Head, Home			Screenjet (541R) ..	1958-60	077011
Generator (541) ..	1954-57	*22483D	R.H.D., dip left ..	1954-58	51546D/E	Starting motor	1954-60	26043A
" (541R)	1958-59	22478D	Head, Export			Steering column control ..	1954-60	32953A/B
" "	1960	22503D	R.H.D., dip left ..	1954-58	51546D/F	Suppressor (distributor) ..	1956-60	78114B
			" "	1959-60	51535D/F	" (plug)	1956-60	78118A



JENSEN 541 and 541R 1954-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers—cont'd		
Choke	1956	*31557A	Windshield wiper ..	1957	*31557A	Outer casing ..	1954-56	743509
Knob	—	326346	Knob	—	317530	Motor to wheelbox ..	1957-60	744738
Dipper	1954-60	31284A/D	Windshield wiper ..	1958-60	31430A/D	Wheelbox to wheelbox ..	1954-56	743510
Door light	1958-60	*31222D	Knob	—	316646	End tube " .. " ..	1957-60	744739
Flasher	1954-60	31250A/H	Terminal block	1954-60	37101E	Arm	1954-60	740746
Handle	—	*311132	Warning lights			Blade	1954-59	741836
Heater or fan ..	1955-56	*31251D/E	Holder	1954	304994	" Later	1959-60	54711561
Ignition and lighting	1954-60	*34061B	Flasher	1954-60	38102A	Blade	1954-55	*738735
Panel	1954-55	31201A	Ignition	1954-60	38100A	"	1956-60	737897
Knob	—	*314015	Petrol reserve	1954-56	38101A	Laycock de Normanville		
Panel	1956-60	*31557A	"	1957-60	38162A	overdrive equipment		
Knob	—	*317352	Windshield wipers			Relay	1954-55	33157A
Petrol reserve ..	1954-60	31201A/D	Motor	1954-56	*75200B	"	1956-59	33135B
Knob	1954-55	314026	"	1957	75296A	"	1960	33213B
"	1956-60	*314421	"	1958-60	75311A	Cover, rubber ..	1954-60	340786
Reverse lamp ..	1956-60	*31077E	Wheelbox	1954-56	*72665A	Switches		
Solenoid, starting motor	1954-60	*76411D/E	"	1957-60	72660A	Gear lever	1954-60	*31077D/E
Solenoid operating ..	1954-55	*31282A	Crosshead and rack assy.	1954-56	*743220	Isolating	1960	*31824A
"	1956-60	31363A	"	1957	743221	Solenoid	1954-57	*76505A
Windshield wiper ..	1954-56	31201A	"	1958-60	744254	"	1958-60	*76517A
Knob	—	*317506						

JENSEN 'JNSN' 6 ton Lightweight 1946-47

Battery	1946-47	6CXBE W13	LAMPS			SWITCHES		
Control box	1946-47	*37032A	Side	1946-47	52081F	Cab light	1946-47	31201B
Generator	1946-47	*22446A	Stop tail and number plate	1946-47	*53007B	Knob	—	314026
Horn	1946-47	*069206	Starting motor (serviced by C.A.V.)	1946-47	1330070	Dipper	1946-47	31284A
Horn push	1946-47	76205B				Trafficator	1946-47	*310380
Junction box	1946-47	78265A				Trafficators	1946-47	*053830

JENSEN 'Jen-Tug' 30 cwt. Tractor 1946-54

Battery	1946-52	SG13E	Horn	1946-52	069343	SWITCHES—continued		
" Later	1952-54	GT9A	" Later	1952-53	*069206	Ignition and lighting ..	1946-54	*34022B
Coil, ignition ..	1946-52	*45016A	"	1954	*069399	Panel	1946-54	*31276A
" Later	1952-54	*45020A	Horn push	1953-54	76225A	Starting motor	1946-52	*764150
Control box	1946-50	*37035H	LAMPS			" Later	1952-54	76423A
"	1951-52	*37102A/D	Head, Home	1946-52	50406D	Coupling	1952-54	764428
" Later	1952-54	*37138A/B	Head, Export	1952-54	51026A	Trafficator	1946-54	31379A
Distributor	1946-52	40286A	Side	1946-52	A52036A	Trailer security	1953-54	31384A
"	1953	40357A	" Later	1952-54	52036A	Trafficators	1946-52	053831
" Later	1953-54	*40284A/E	Tail and number plate ..	1946-52	*A53007B	" Later	1952-54	*053830
Fuse box	1946-52	*385221	ditto	1952-54	*53007B	Windshield wipers		
" Later	1952-53	033239	Starting motor	1946-48	*270301	Motor	1946-49	*75120A
"	1953-54	*37137A	"	1949-52	26009A	"	1950-52	*75121A
Generator	1946-48	22409A	" Later	1952-54	25022A/F	" Later	1952-54	*75120A
"	1949-50	*22251E/F	Suppressor	1953-54	78105A	Arm	1946-49	*735098
"	1951	22409B/H				"	1950-54	*735049
" Later	1951-52	22409J	SWITCHES			Blade	1946-49	727707
"	1952-54	22258D	Dipper	1946-54	31284A	"	1950-54	727803

JENSEN Lightweight Commercial Vehicle 1954-55

Ammeter	1954	*36117A	LAMPS—continued			SWITCHES		
"	1955	36155A	Head, Export	1954-55	51336A	Dipper	1954-55	31284A
Battery	1954	CX13A	R.H.D., dip left ..	1954-55	*51337B	Foglamp	1955	31201B
"	1955	MT19E	L.H.D., dip right ..	1955		Knob	—	314026
Control box	1955	*37139A	Head, Export Europe ..	1955	51339A	Lighting	1954	*34022B
Fuse box	1955	033239	(not France)	1955	*51590A	" Later	1954-55	34065A
Generator	1955	*22456A	Head, Export France ..	1955	53101E	Panel	1954-55	31201B
Horn	1954-55	*069399	Number plate illumination	1954	52139B	Knob	—	314026
Junction box	1954-55	78265A	Side	1955	*52238A	Trafficator	1954-55	31379A
LAMPS			Stop tail and number plate	1954	*53007B	Trafficators	1954	*053830
Head, Home			"	1955	53178F	"	1955	54052A
R.H.D., dip left ..	1954-55	51336A	Reflex reflector	1954-55	57033D	Windshield wipers		
			Panel light bulb holder ..	1954-55	39007A	Motor	1954-55	*75120A
			Starting motor (serviced by C.A.V.)	1954-55	1330070	Arm	1954-55	*735049
						Blade	1954-55	727803

§ FUEL INJECTION EQUIPMENT (Perkins P6 Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1954-55	BPE6A60S310S6321	Venturi	1954-55	BEPK50-50-101
Governor	1954-55	BEPMZ80A99	Nozzle holder	1945-55	BKB32S630
Coupling	1954-55	BZKH31-538	Nozzle	1954-55	BDL110S6133
Feed pump	1954-55	BFPK22P68	Filter	1954	BFA5P1
Primer	1954-55	BFPUE2-54Z	"	1955	F2-8
Pre-filter	1954-55	BFJSJ1-501			



Equipment Specification

JENSEN—JOWETT

JENSEN 'Tempo 1500' 1958-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1958-60	SG9E	LAMPS— <i>continued</i>			Warning lights		
Coil, ignition	1958-60	*45053K	Number plate illumination	1958-60	53101E/J	Flasher (shade and window)	1958-60	*54360085
Control box	1958-60	37182H	Side	1958-60	52391A	Ignition (shade and window)	1958-60	*319388
Distributor	1958	*40499A	Stop tail and reflex ..	1958-60	53377B			
" Later	1959-60	40499B/D & F	Starting motor	1958-59	25022M			
Flasher unit	1960	*40499E & H	"	1960	25022N/Q			
Fuse box	1958-60	35010A	SWITCHES			Windshield wipers		
Generator	1958-60	033239	Heater	1958-60	*31814A	Motor	1958-60	75342D
Horn	1958-60	22293A	Knob	—	312892	Link set	1958-59	745965
LAMPS	1958-60	70141B	Horn push and dipper ..	1958-60	31288B	" Later	1959-60	54712397
Engine compartment ..	1958-60	53163A	Ignition and lighting ..	1958-60	*31288A	Arm, left hand	1958-59	54710492
Flasher, rear	1958-60	*52272D	Solenoid, starting motor	1958-60	*76411E	" Later	1959-60	54711547
Flasher, side	1958-60	53362B	Solenoid operating	1958-60	*31071A	" right hand ..	1958-59	54710491
Head, Home			Stop lamp	1958-60	31082H	" Later	1959-60	54711546
R.H.D., dip left	1958-60	51336E	Windshield wiper	1958-60	*31819A	Blade	1958-60	*737941
Head, Export			Knob	—	312872			
R.H.D., dip left	1958-60	51336E						

JOWETT 'Javelin' 1948-54

Battery	1948-49	SLG11E	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Coil, ignition	1950-54	GT9A	Head, Export Europe	1948-50	*B50792B	Solenoid, starting motor	1948-49	76022B
Control box	1948-54	*45020A/B	(not France)	1951	*B50445K	Solenoid operating ..	1950-54	*76411D
Distributor	1948-51	37065E	ditto	1951-53	*50963A	"	1948-51	31150B
" Later	1951-54	*37138A/B	ditto Later	1951-53	*50963A	"	1952	31272A
Flasher unit	1948-52	40115H	Head, Export France ..	1953-54	51339A	"	1953-54	*31294A
Flasher relay (U.S.A.) ..	1953-54	*40317A	"	1951	*50790E	Stop lamp	1948-54	31281B
Fuse box	1952-54	*35003A	" Later	1951-52	*50962A	Spring	—	*315723
Generator	1952-54	33117A	"	1953-54	*51341A	Trafficator	1948-54	031046
"	1951-54	033239	Number plate illumination	1950-51	*53186A	Windshield wiper ..	1948-51	*31148A
" Later	1948-49	*22431A	ditto Later	1951	53224A	"	1952	*31348A
Horn	1949-51	*22250E/F	ditto	1952-54	*53093E	Trafficators	1953-54	*31399A
"	1951-54	22258D	Side	1951-54	52139B	"	1948-50	*54014D
Low note	1948-54	*69011F	(U.S.A.)	1951-54	*52162A	Warning light (ignition) ..	1951-54	*54041A
High note	1948-54	*69012F	Stop tail	1948-49	53099A	"	1948-51	*31853A
Horn relay	1951-54	*33116B	"	1950	*53150B	"	1952-54	*38069A
			" Later	1950-54	*53204B			
LAMPS			Mirror	1948-54	*062532	Windshield wipers		
Head, Home			Panel light bulb holder ..	1952-54	39020B	Motor	1948-50	*75055K
R.H.D., dip left (L.H.)	1948-50	*50792B	Starting motor	1948-49	*25012A/D	"	1951	*75055L
" non-dip (R.H.)	1948-50	*50578E	"	1950-54	25025A/D	"	1952-54	75152A
" dip left (L.H.)	1951	*50445K	Steering column control ..	1948	*32769A	Wheelbox	1948-54	72590A/K
" non-dip (R.H.)	1951	*50446K	ditto Later	1948-54	32764D	Crosshead and rack assy.		
R.H.D., dip left	1951-52	*50954A	Slip ring (horn push) ..	1948-51	38252A	Cut to 27 1/2"	1948-51	736177
"	1952-53	50941A	"	1952-54	38258A	Crosshead and rack assy.	1952-54	736364
"	1953-54	51336A	SWITCHES			Outer casing		
Head, Export			Dipper	1948-54	31284A	Motor to wheelbox ..	1948-51	739844
R.H.D., dip left	1948-50	*50792B	Heater or fan	1948-51	*31147A	"	1952-54	*739855
"	1951	*50445K	"	1952	*31347A	Wheelbox to wheelbox	1948-51	739937
"	1951-52	*50954A	"	1953-54	*31407A	End tube	1952-54	*739955
"	1952-53	50941A	Ignition and lighting ..	1948-51	34038B	Grommet, wheelbox ..	1948-54	740031
"	1953-54	51336A	Knob	1952-54	31270A	Arm	1948-50	73752A
L.H.D., dip right	1948-50	*A50792B	"	1952	*316416	" left hand drive	1951-54	*737581
"	1951	*A50445K	Panel	1953-54	*316437	" right hand drive	1951-54	*737529
"	1951-53	*50804D	"	1948-51	*31149A	Blade	1948-50	*737433
"	1953-54	*51337A	"	1952	*31349A	"	1951	*738719
			"	1953	*31400A	"	1952-54	*738724

JOWETT 'Javelin' De Luxe 1948-54

Ammeter	1950	*36098A	LAMPS, Head, Home—			Mirror	1950-54	*062532
"	1951	36135A	<i>continued</i>			Starting motor	1950-54	25025A/D
"	1952-54	36155A	R.H.D., dip left	1951-52	*50954A	Steering column control ..	1950-54	32876A
Battery	1950-54	GT9A	"	1952-53	50941A	Slip ring (horn push) ..	1950-52	38252A
Coil, ignition	1950-54	*45020A/B	"	1953-54	51336A	"	1953-54	38258A
Control box	1950-51	37065E	Head, Export			SWITCHES		
Distributor	1951-54	*37138A/B	R.H.D., dip left	1948-50	*50792B	Dipper	1950-54	31284A
Flasher unit	1950-52	40115H	"	1951	*50445K	Foglamp	1950	31201B
Flasher relay (U.S.A.) ..	1953-54	*40317A	" Later	1951-52	*50954A	Knob	—	*316218
Fuse box	1952-54	*35003A	"	1952-53	50941A	Heater or fan	1950-54	31201B
Generator	1952-54	33117A	"	1953-54	51336A	Knob	1950-51	*316217
"	1951-54	033239	L.H.D., dip right	1948-50	*A50792B	"	1952-54	*316244
" Later	1950-51	*22250E/F	"	1951	*A50445K	Ignition	1952-54	31287A
Horn	1951-54	22258D	" Later	1951-53	*50804D	Ignition and lighting ..	1950-51	*34061A
Low note	1950-54	*69011F	"	1953-54	*51337A	Lighting	1952-54	31303A
High note	1950-54	*69012F	Head, Export Europe			Knob	—	316622
Horn relay	1950-54	*33116B	(not France)	1948-50	*B50792A	Panel	1950-54	31201B
Inspection lamp sockets ..	1952-54	38604A	ditto	1951	*B50445K	Knob	1950-51	*316220
LAMPS			ditto Later	1951-53	*50963A	"	1952-54	*317501
Boot	1948-50	*53056A	ditto	1953-54	51339A	Reverse lamp	1952-54	*31077A
Boot and bonnet	1953-54	53163A	Head, Export France ..	1951	*50790E	Solenoid, starting motor	1950-54	*76411D
Fog	1950	*55063B	" Later	1951-52	*50962A	Solenoid operating ..	1950-51	31281B
"	1951	*55077A	"	1953-54	*51341A	"	1952-54	31363A
"	1952-54	*55085A	Head, Export U.S.A. ..	1953	*50919B	Stop lamp	1950-54	*316218
Head, Home			Number plate illumination	1950-51	*53186A	Spring	—	*315723
R.H.D., dip left (L.H.)	1948-50	*50792B	"	1952-54	53097E	Trafficator	1950-54	031046
" non-dip (R.H.)	1948-50	*50578E	Reverse	1951	53223A	Windshield wiper ..	1950-54	31201B
" dip left (L.H.)	1951	*50445K	Side	1951-54	52139B	Knob	1950-51	*316219
" non-dip (R.H.)	1951	*50446K	(U.S.A.)	1951-54	*52162A	"	1952-54	*317502
			Stop tail	1950	*53150B	Trafficators	1950	*54014D
			" Later	1950-54	*53204B	"	1951-54	*54041A

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued



JOWETT 'Javelin' De Luxe 1948-54—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Windshield wipers			Windshield wipers—cont'd			Windshield wipers—cont'd		
Motor	1948-50	*75055K	Outer casing			Arm	1950	*737524
"	1951	*75055L	Motor to wheelbox ..	1948-51	739844	" left hand drive ..	1951-54	*737581
"	1952-54	75152A	"	1952-54	*739855	" right hand drive ..	1951-54	*737529
Wheelbox	1948-54	72590A/K	Wheelbox to wheelbox	1948-51	739937	Blade	1950	*737433
Crosshead and rack assy.			"	1952-54	*739955	"	1951-52	*738719
Cut to 27 $\frac{1}{8}$ "	1948-51	736177	End tube "	1948-54	740031	"	1953-54	738724
Crosshead and rack assy.	1952-54	736364	Grommet, wheelbox ..	1948-54	735349			

JOWETT 'Jupiter' Sports 1951-54

Ammeter (plate fixing) ..	1951-52	36135A	LAMPS—continued			SWITCHES—continued		
(clamp fixing) ..	1951-54	36155A	Head, Export U.S.A. ..	1951	50942A	Trafficator	1951-54	031046
Battery	1951-52	SLG11E	"	1952-54	51067B	Windshield wiper ..	1951-54	31201B
"	1953-54	GT9A	Number plate illumination	1951-54	53093E	Knob	1951-52	*316226
Coil, ignition	1951-54	*45012A/D	Side	1951-54	52139B	" Later	1952-54	*317502
Control box	1951	37065E	Stop tail	1951-52	53178D	Trafficators	1951-54	*54041A
"	1952	*37076E	" Later	1952-54	*53204B			
"	1952-54	*37139D	Mirror	1951-54	*062567	Warning lights		
Distributor	1951-52	40115H	Panel light bulb holder ..	1951-54	39020B	Red glass	1951-54	*38013B
"	1953-54	*40317A	Starting motor	1951-54	25025A/D	Green glass	1951-54	*38042A
" (Racing Model)	1953-54	40318A/B	Steering column control ..	1951-52	32764D	Blue glass	1951-54	*38081A
Fuse box	1952-54	033240	ditto Later	1952-54	32877A	Windshield wipers		
Generator	1951-54	*22436A	Slip ring	1951-52	38252A	Motor	1951	*75075K
Horn			" Later	1952-54	38258A	"	1952	*75088M
Low note	1951-54	*69011F				" Later	1952-54	*75151A
High note	1951-54	*69012E	SWITCHES			Wheelbox	1951-54	72590A/K
Horn relay	1951-54	*33116B	Dipper	1951-54	31284A	Crosshead and rack assy.		
			Foglamp	1951-54	31201B	Cut to 44 $\frac{1}{8}$ "	1951-54	736307
LAMPS			Knob	1951-52	*316288	Outer casing		
Head, Home			" Later	1952-54	*317503	Motor to wheelbox ..	1951-54	*739832
R.H.D., dip left (L.H.)	1951	50825A	Heater or fan	1951-54	31201B	Wheelbox to wheelbox	1951-54	*739967
non-dip (R.H.)	1951	*50826A	Knob	1951-52	*316225	End tube	1951-54	740031
R.H.D., dip left ..	1952-54	51065A	" Later	1952-54	*316244	Grommet, wheelbox ..	1952-54	734697
Head, Export			Ignition and lighting ..	1951-53	*34067A	Arm, left hand drive ..	1951-54	*737661
R.H.D., dip left ..	1951	50825A	Knob	1953-54	31270A	" right hand drive ..	1951-54	*737660
"	1952-54	51065A	"		316285	Blade	1951-52	*737516
L.H.D., dip right ..	1951	A50825A	Panel	1951-54	31201B	"	1953-54	737681
"	1952-54	A51065A	Knob	1951-52	*316227	Overdrive equipment		
Head, Export Europe			" Later	1952-54	*317501	(optional)		
(not France)	1951	B50825A	Solenoid, starting motor	1951-54	*76411D	Relay	1953-54	33094A
ditto	1952-54	B51065A	Solenoid operating ..	1951-53	*31289A	Switches		
Head, Export France ..	1953-54	*51056A	" Later	1953-54	*31071A	Gear lever	1953-54	*31077A
			Stop lamp	1951-54	31281B	Solenoid, gearbox ..	1953-54	*76500A
			Spring		*315723			

JOWETT 10 cwt. 'Bradford' Van 1946-54

Ammeter	1946-50	*369001	LAMPS, Head, Home—			SWITCHES—continued		
"	1951-52	*36110A	continued			Panel	1946-52	*314129
Battery	1946-50	SG11E	Non-dip (R.H.)	1946-52	*50570B	"	1953-54	*31400A
"	1951-52	GT7A	ditto (alternative)	1947-52	50646A/B	Solenoid, starting motor	1953-54	*76411D
"	1953-54	GT9A	R.H.D., dip left ..	1953	51344A	Solenoid operating ..	1953-54	*31294A
Coil, ignition	1946-50	*45016A	" Later	1953-54	*51407A	Starting motor	1946-47	*764247
"	1951-54	*45020A/B	Head, Export			Stop lamp	1951-52	*76429A
Control arm	1946	*310254	Vertical dip	1946	*50303A	"	1946-54	31281B
"	1947-48	31143A	"	1947-50	50569B	Spring		*315723
"	1949-52	31124B	" (alternative)	1947-50	50645E	Windshield wiper ..	1953-54	*31399A
Control box	1946	*37050A	R.H.D., dip left ..	1953	51344A	Trafficators	1946-50	*54002A
"	1947-48	*37033A	" Later	1953-54	*51407A	"	1951-52	*54036A
"	1949-50	37081E	L.H.D., dip right ..	1953	*51345A	"	1953-54	54044D
"	1951-52	37065E	" Later	1953-54	*51409A	Warning lights		
"	1953-54	*37138B	Head, Export Europe			Main beam	1951-52	*38015B
Distributor	1946	409607	(not France)	1953	51346A	"	1953-54	38052B
"	1947-52	40121A/H	ditto Later	1953-54	*51408A	Windshield wipers		
"	1953-54	40347A	Head, Export France ..	1953	51411A	Motor	1946-50	*75047A
Fuse box	1953-54	033239	"	1953-54	*51414A	"	1951-52	75128A
Generator	1946	*20900A	Side	1946	*52003A	"	1953-54	75179A
"	1947-48	*228365	"	1953-54	52139B	Wheelbox	1953-54	72590A/K
"	1948-49	*22433A	Stop tail and number plate	1946	*524752	Crosshead and rack assy.		
"	1949-50	*22251F	"	1947-52	*53060A	L.H.D. Cut to 25 $\frac{1}{8}$ "	1953-54	736364
"	1951-52	*22250F	Stop tail	1953-54	53178D	R.H.D. " 41 $\frac{1}{8}$ "	1953-54	736307
"	1952-54	22258D	Tail and number plate ..	1946	*53007B	Outer casing		
Horn	1946-50	*069348	Mirror	1946-52	*062500	Motor to wheelbox		
"	1951-54	*069399	"	1953-54	*062574	L.H.D. and Utility ..	1953-54	739868
Junction box	1946-52	78266A	Panel light bulb holder ..	1951-54	39007A	R.H.D., except Utility	1953-54	739866
			Starting motor	1946-49	*255901	Wheelbox to wheelbox		
LAMPS			"	1950	25031D	Utility only	1953-54	739932
Head, Home			"	1951-54	25022A/F	End tube	1953-54	740031
Vertical dip (L.H.) ..	1946	*50141A	SWITCHES			Arm	1946-52	735065
Non-dip (R.H.) ..	1946	*50142A	Ignition	1953-54	31287B	"	1953-54	*737529
Vertical dip (L.H.) ..	1946-52	50569B	Lighting and horn ..	1953-54	*34085A	Blade	1946-52	*727802
ditto (alternative)	1947-52	50645A/B	" ignition ..	1946-52	*34020B	"	1953-54	738724

JOWETT De Luxe Van and 6 Light Utility 1949-52

Ammeter	1949-50	*369001	Control arm	1949-52	31124B	Generator	1951-52	*22250F
"	1951-52	*36110A	Control box	1949-50	37081E	" Later	1952	22258D
Battery	1949-50	SG11E	"	1951-52	37065E	Horn	1949-50	069343
"	1951-52	GT7A	Distributor	1949-52	40121A/H	"	1951-52	069344
Coil, ignition	1949-50	*45016A	Generator	1949-50	*22251F	Junction box	1949-52	78266A
"	1951-52	*45020A/B						

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

JOWETT—KARRIER

JOWETT De Luxe Van and 6 Light Utility 1949-52—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			Panel light bulb holder ..	1949-52	39007A	Warning lights ..	1949-50	*31850A
Head, Home			Starting motor ..	1949	*255901	" ..	1951-52	*38015B
Vertical dip (L.H.) ..	1949-50	50569B	" ..	1950	25031D			
Non-dip (R.H.) ..	1949-50	*50570B	" ..	1951-52	25022A/F	Windshield wipers		
Vertical dip (L.H.) ..	1951-52	50645E	SWITCHES			Motor ..	1949-50	75073A
Non-dip (R.H.) ..	1951-52	50646E	Ignition and lighting ..	1949-52	*34020B	" ..	1951-52	75129A
Head, Export			Panel ..	1949-52	*314129	Coupling bar ..	1949-50	727293
Vertical dip ..	1949-50	50659B	Starting motor ..	1949-52	*76429A	" ..	1951-52	*732907
" ..	1951-52	50645E	Stop lamp ..	1949-52	31281B	Bearing, passenger side	1949-52	731721
Stop tail and number plate	1949-52	*53060A	Spring ..	—	*315723	Arm, left hand ..	1949-52	735133
ditto (De Luxe Van)	1949-52	*53029A	Trafficators ..	1949-50	54002A	" right hand ..	1949-52	735132
Mirror ..	1949-52	*62006A	" ..	1951-52	*54036A	Blade ..	1949-52	727707

KARRIER 'Bantam' 1946-60

Ammeter ..	1946-50	*369263	LAMPS—continued			SWITCHES—continued		
Battery ..	1946-50	SG11A	Head, Export			Lighting (British		
" (Petrol) ..	1951-59	GT11A	R.H.D., dip left ..	1951	*50445K	Railways Model) ..	1950	*344544
" (Diesel) ..	1960	BT11A	" ..	Later	*50954A	Lighting and ignition ..	1946	34054A
Coil, ignition ..	1946	*45020A	" ..	1952-53	50941A	" ..	1947-50	*34014B
" ..	1947-56	*45012A/D	" ..	1954	51336A	Lighting and ignition or		
" ..	1956-57	*45054D/H	" ..	1955-56	*50954A	main ..	1951-60	31194A/D
" ..	1958	*45053J	" ..	1957-60	50941A	Knob ..	1951-60	316285
" ..	1959-60	*45054K/M	L.H.D., dip right ..	1951	*A50445K	Panel ..	1946-50	*31285A
Control box ..	1946-47	*37032A	" ..	Later	*50804D	" ..	1951-53	31113A
" ..	1948-52	37065E	" ..	1955-59	*51337A	Knob ..	1951-53	311512
" ..	1952-54	*37138A/B	" ..	1960	*50804D	Panel (except Tractor) ..	1954-56	31248A
" ..	1955-56	37182A	Head, Export Europe		50973A	Knob ..	—	316493
" ..	1955-56	*37139E	(not France) ..	1951	*B50445K	Panel (except Tractor)		
" ..	1957-60	37182H	ditto ..	Later	*50963A	Knob ..	1956-60	31113A/D
" ..	1960	37182K & J	ditto ..	1951-53	51339A	" ..	1956	315112
Distributor ..	1946	*406319	ditto ..	1955-56	*50963A	" ..	1957-60	*315143
" ..	1947-50	*409624	ditto ..	1957-59	50967A	Solenoid operating		
" ..	1951-53	40218A/D	(except France & Sweden)	1960	58340A	(Diesel, serviced by		
" ..	1953	40070A/E	Head, Export France ..	1951-53	*50962A	C.A.V.) ..	1956-60	1823410
" ..	1954-56	*40376A/B	" ..	1954	*51341A	Starting motor ..	1946-48	76428A
" ..	1957-59	40491A/F	Head, Export Sweden ..	1960	58585A	" ..	1949-50	76404B
" ..	1959-60	40667A/B	Head, Export Canada ..	1960	50811A	" (Petrol) ..	1951-60	76423A
Flasher unit (when fitted)	1960	35010A	Number plate illumination	1955-60	53343A	Coupling ..	1951-58	764428
Fuse box ..	1948-52	*385221	Side ..	1946	52036A	" ..	1959-60	764466
" ..	1952-56	033240	" ..	1947-48	*52003A	Trafficator ..	1955-56	31379A
" ..	1956-60	033239	" ..	1949	52153A	Windshield wiper ..	1953-60	31248A/B
" ..			" ..	1950	52154A	Knob ..	1953-57	*316366
" (Diesel heater, serviced by C.A.V.) ..	1958-60	1800020	" ..	1951-60	52139B/F	" ..	1958-60	312954
Generator ..	1946-48	22455A/B	Stop tail and number plate	1951-54	*53063B	Trafficators (when fitted)	1955	*053830
" ..	1948-49	*22446A	Stop tail (except Tractor)	1955-60	53178E/J	ditto ..	Later	54050A
" ..	1950	*22435A/B	Tail and number plate ..	1949-53	*53007B	Warning light ..	1946-50	38015B
" ..	1951-52	*22250E/F	Magneto (British Railways Model) ..	1950	44088A/D	Windshield wipers		
" ..	1952-56	22258D	Reflex reflector (except			Motor ..	1946-52	*75027A
" ..	1955-56	*22483A	Tractor) ..	1955-60	57073B/D	" ..	1953	*75074J
" ..	1957-60	22258E/H	Starting motor ..	1946-50	*255378	" ..	1953-60	75144A/B
Horn ..	1946-57	*069213	ditto (Petrol) ..	1951-60	25521B/D	" ..	1953-60	72560A/K
Low note ..	1957-60	69046E/F	ditto (Diesel, serviced by C.A.V.) ..	1955-56	BS512L66	Wheelbox ..		
High note (optional)	1957-60	69047E/F	ditto (Diesel) ..	1957	26133A/B	Crosshead and rack assy.		
Horn relay (when twins fitted) ..	1957-60	*33116B	ditto ..	1958-59	26133D/E	Cut to 40 1/2" ..	1953-60	736307
Junction box (Tractor Models only) ..	1948-50	78265A	ditto ..	1959-60	26133H & K	Outer casing ..		
LAMPS			ditto ..	1956-60	32937A/B	Motor to wheelbox ..	1953-60	739833
Head, Home			Steering column control ..	1956-57	331397	Wheelbox to wheelbox ..	1953	*739965
Non-dip ..	1946	50129A	Brush ..	1957-58	333189	ditto ..	1953-55	*739979
Vertical dip ..	1946-50	*50285A	SWITCHES			ditto ..	1956-60	739932
R.H.D., dip left (L.H.) ..	1951	*50445K	Battery master (British Railways Model) ..	1950	*768061	End tube ..	1953-60	740031
" non-dip (R.H.) ..	1951	*50446K	" ..	1956-60	31284A/D	Ferrule, casing retaining	1956-60	738410
R.H.D., dip left ..	1951	*50954A	Dipper ..	1956-60		Grommet, wheelbox ..	1953	729423
" ..	1952-53	50941A	Heater, Diesel (serviced by C.A.V.) ..	1956-60	1823420	" ..	1953-60	734458
" ..	1954	51336A	Horn push and dipper ..	1946-50	*380148	Arm ..	1946-52	*735061
" ..	1955-56	*50954A	" ..	1951-56	*31325A	" left hand ..	1953-56	*737629
" ..	1957-60	50941A	Ignition (British Railways Model) ..	1950	*314144	" right hand ..	1957-60	742275
						" ..	1953-56	*737628
						Blade ..	1957-60	742274
						" ..	1946-52	727802
						" ..	1953-60	727759

§ FUEL INJECTION EQUIPMENT (Standard 23CV Engine 1955-60)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump ..	1955-56	DPA3246020	Nozzle holder—continued ..	1959-60	BKB40S697K
" ..	1957	DPA3246070	Nozzle ..	1955-58	BDN45P6188
" ..	1958	DPA3246071	" ..	1959-60	BDN45P6263
" ..	1959-60	DPA3246103	Filter ..	1955-58	F4-1
Nozzle holder ..	1955-58	BKB40S697	" ..	1959-60	F4B-3

KARRIER 'Cob' 1947-48

Ammeter ..	1947-48	*369263	LAMPS			SWITCHES—continued		
Coil, ignition ..	1947-48	*45020A	Fog ..	1947-48	*55027B	Starting motor ..	1947-48	76428A
Control box ..	1947	*37032A	Side ..	1947-48	*52003A	Warning light (ignition) ..	1947-48	*38015B
" ..	1948	37065E	Starting motor ..	1947-48	*255378	Windshield wipers		
Distributor ..	1947-48	*409624	SWITCHES			Motor ..	1947-48	*75027A
Fuse box ..	1947-48	*385221	Ignition and lighting ..	1947-48	*34014B	Arm ..	1947-48	*735096
Generator ..	1947-48	*22446A	Panel ..	1947	*31285A	Blade ..	1947-48	727802
Horn ..	1947-48	069344						



Equipment Specification

KARRIER

KARRIER 3 ton CK3 1946-52

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1946-50	*369263	LAMPS			Starting motor	1946-47	*270490
"	1951-52	36001D	Head, Home			"	1948	26026A/B
Battery	1946-52	SG11A	R.H.D., dip left (L.H.)	1947-48	*50262A	"	1949-50	*26035A
Coil, ignition	1946-49	*45039A	" non-dip (R.H.)	1947-48	*50263A	"	1951-52	26041A/B
"	1950-52	*45012A/D	" dip left (L.H.)	1949	*50445K			
Control box	1946-47	*37032A	" non-dip (R.H.)	1949	*50446K	SWITCHES		
"	1948-50	*37065E	" dip left (L.H.)	1950	*50878A	Horn push and dipper ..	1946-50	*380168
"	1950-52	*37076E	" non-dip (R.H.)	1951-52	*50445K	Ignition and lighting ..	1946-50	*34014B
"	1952	*37139D	" dip left (L.H.)	1951-52	*50446K	"	1951-52	34055A
Distributor	1946-49	*410700	Head, Export			Panel	1946-52	*31285A
"	1950-52	40135E/H	R.H.D., dip left ..	1947-48	*50262A	Starting motor	1946-49	76428A
Fuse box	1948-52	*385221	L.H.D., dip right ..	1949-52	*50445K	"	1949-50	76404B
"	1952	033240	"	1949-52	*A50262A	"	1951-52	76427B
Generator	1946-49	*22446A	Head, Export Europe			Stop lamp	1946-52	31281B
"	1950-52	*22435A/B	(not France)	1947-48	*B50262A	Spring	—	315543
"	1952	*22456A/B	ditto	1949-52	*B50445K	Warning light (ignition) ..	1946-50	*38015B
Horn	1946-52	*069213	Head, Export France ..	1951-52	*50962A	"	1951-52	38046A
Inspection lamp sockets ..	1946-52	39507A	Side	1947-49	*52003A			
			"	1950	52154A	Windshield wipers		
			Stop tail and number plate	1951-52	*52079A	Motor	1946-52	*75027A
			"	1947-48	*5328B	Arm	1946-52	*735061
			"	1949	*53008D	Blade	1946-52	727802
			"	1950-52	*53063B			

KARRIER 'Gamecock' (Municipal and Industrial) 1953-60

Battery (Petrol)	1953-59	GT11A	LAMPS—continued			Trafficators	1954-55	*053830
" (Diesel)	1960	BT11A	Head, Export France ..	1953-55	*51341A	"	1955-59	54050A
Coil, ignition	1953-55	STXT19E	"	1956-60	*51341B/E	Warning light (direction indicator) (when fitted)	1959-60	38191A
Control box	1953-54	*45012A/D	"	1960	58231A/E			
"	1955-59	*45054D/M	Number plate illumination	1955-60	53343A	Windshield wipers		
"	1960	*37139D	Side	1953-60	52139A/F	Motor	1953-58	75144A
Distributor	1953	37183A/H	Stop tail and number plate	1953-54	*53063B	"	1959-60	75289B
"	1954	37183K & L	Stop tail	1955-60	53178E/J	"	1960	75398A
"	1954	*40305D	Reflex reflector	1955-60	57073B/D	Wheelbox	1953-58	72560A/K
"	1954	40359A/B	Starting motor	1953-54	26086A	"	1959-60	72660A
Flasher unit (when fitted)	1957	*35003A	(Petrol)	1955-60	26094A			
"	1958-60	35010A	(Diesel, serviced by			Crosshead and rack assy.		
Fuse box	1953-57	033239	C.A.V.)	1955-58	1340010	Cut to 40°	1953-58	736307
"	1958-60	*37137A	ditto	1959-60	1320061	Crosshead and rack assy.	1959-60	743722
Generator	1953-54	*22456A/B	Steering column control ..	1955-60	32937A/B	Outer casing		
"	1955-56	*22483A	Suppressor (G.P.O.) ..	1953-59	78106A	Motor to wheelbox ..	1953-58	739833
"	1957-59	*22483D				ditto (left hand) ..	1959-60	743708
"	1960	22489B/D	SWITCHES			ditto (right hand) ..	1959-60	743709
Horn	1955-56	*069213	Battery master (G.P.O.)	1953-59	76605A/B	Wheelbox to wheelbox	1953-58	*739979
Low note (alternative) ..	1955-56	*69011J	Dipper	1955-60	31284A/D	End tube	1953-58	740031
High note (optional) ..	1956-60	69046A/F	Flasher (when fitted) ..	1957-60	31564A/D	"	1959-60	740746
"	1956-60	69047A/F	Heater (Diesel)	1959-60	31425A/B	Ferrule, casing retaining	1957-58	738410
Horn relay (when twins fitted)	1956-60	*33116B	Knob	—	54330528	Grommet, wheelbox ..	1953-58	734458
Junction box	1957-60	78265A	"	1953-54	*31325A	Arm, left hand	1953-56	*737629
LAMPS			Horn push and dipper ..	1953-60	31194A/E	"	1957-58	742275
Flasher (optional) ..	1957-60	52314A	Lighting and ignition or	1953-60	316285	"	1959-60	741845
Head, Home			main	1953-60	316285	"	1960	54711558
R.H.D., dip left ..	1953-55	51336A	Knob	—	316285	"	1953-58	742275
"	1956-60	51336B/J	Solenoid, starting motor	1953-60	*76411D/E	"	1959	*741294
Head, Export			Solenoid operating			"	1953-56	*737628
R.H.D., dip left ..	1953-55	51336A	(Petrol)	1955-60	31115A/E	"	1957-58	742274
"	1956-60	51336B/J	Knob	—	*317315	"	1959-60	741844
L.H.D., dip right ..	1953-54	*51337A	(Diesel, serviced by			"	1950	54711557
"	1955	*51337B	C.A.V.)	1955-58	1823410	"	1953-58	742275
"	1956-59	*51337D/E	(Diesel)	1959-60	31810A	"	1959	*741295
"	1959-60	*51337F/K	Knob	—	*317315	"	1953-58	727759
Head, Export Europe			Trafficator (when fitted)	1954-60	31379A	"	1959-60	737897
(not France)	1953-55	51339A	" (G.P.O.)	1953-54	031046	"	1959	737883
ditto	1956-59	51339B/H	Windshield wiper	1955-59	031296	Plug, 8-pin	1953-58	809797
ditto	1959-60	58230A/E	"	1955-60	31248A/B	Socket, 8-point	1953-58	809798
			Knob	1960	34266A			
			"	1955-56	*316366			
			"	1957-60	312954			

§ FUEL INJECTION EQUIPMENT (Rootes TS3 Engine 1955-58)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1955-58	NL3F80-97	Nozzle—continued	1957-58	BDLL10S6213
Governor	1955	LP9	Feed pump	1955-57	DFP3-13
Coupling	1956-58	LPB25	"	1958	DFP3-26
"	1955-57	FCB3	Venturi	1955-56	BEPKE85-99V
"	1958	FCB5	"	1957-58	BEPKE85-117
Nozzle holder	1955-58	BKBL52S656	Filter	1955	F2-9
Nozzle	1955-56	BDLL10S6134	"	1956-58	F2-13

(Perkins C305 Engine 1959-60)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1959	DPA3264003	Filter	1959	F4-3
"	1960	DPA3264035	"	1960	F4B-3
Nozzle holder	1959-60	BKB32S630	Thermostart	1959-60	285-2A
Nozzle	1959-60	BDLL10S6267			

* See Supersession Chart
R.H.D. .. Right hand drive

§ Serviced by C.A.V. Ltd.

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

KARRIER-LAGONDA

KARRIER 1¼/1½ ton Passenger Chassis 1957-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1957-60	STXWT	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1957-60	*45054	Head, Export Europe (not France)	1957-59	51339B/H	Solenoid operating (Diesel, serviced by C.A.V.)	1957-60	1823410
Control box	1957-59	37183H	ditto Later	1959-60	58230A/E	Starting motor (Petrol)	1957-60	76423A
Distributor	1960	37183K & L	Head, Export France	1960	58231A/E	Coupling	1957-58	764428
Fuse box	1957-59	40491A/B	Number plate illumination	1957-60	53343A	Windshield wiper	1959-60	764466
Generator	1960	40667A	Side	1957-60	52139F	Knob Later	1957-60	31248B
Horn	1957-60	03323D	Stop tail	1957-60	53178F/J	Terminal block	1960	34266A
Low note	1957-59	*22483D	Reflex reflector	1957-60	57073B	Warning light (ignition)	1959-60	31295A
High note (optional)	1957-59	22489B/D	Starting motor (Petrol)	1957-60	25521D			
Horn relay (when twins fitted)	1959-60	*069213	" " (Diesel)	1957	26133B	Motor	1957-60	75144A
LAMPS			" " Later	1958-60	26133D/E	Wheelbox	1957-60	72655A
Head, Home			Steering column control	1957-60	26133H & K	Crosshead and rack assy.	1957-60	736307
R.H.D., dip left	1957-60	51336B/J	Suppressor	1957-60	78106A	Outer casing		
Head, Export			SWITCHES			Motor to wheelbox	1957-60	739844
R.H.D., dip left	1957-60	51336B/J	Dipper	1957-60	31284A/D	Wheelbox to wheelbox	1957-60	739972
L.H.D., dip right	1957-59	*51337D/E	Heater (Diesel, serviced by C.A.V.)	1957-60	1823420	End tube	1957-60	740031
" " " " Later	1959-60	*51337F/K	Ignition and lighting or main	1957-60	*31288A/D	Ferrule, casing retaining	1957-60	738410
			Knob	1957-60	316285	Arm, left hand	1957-60	737496
			Panel	1957-60	31248B	" right hand	1957-60	737495
			Knob	1957	*316365	Blade	1957-60	727803
			" " " " Later	1957-60	313655			

§ FUEL INJECTION EQUIPMENT

(Rootes TS3 Engine 1957-58)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1957-58	NL3F80-97	Nozzle	1957-58	BDLL10S6213
Governor	1957-58	LPB25	Feed pump	1957	DFP3-13
Coupling	1957	FCB-3	" " " " " "	1958	DFP3-26
" " " " " "	1958	FCB-5	Venturi	1957-58	BFPKE85-117
Nozzle holder	1957-58	BKBL52S656	Filter	1957-58	F2-13

(Perkins C305 Engine 1959-60)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1959	DPA3264003	Filter	1959	F4-3
" " " " " "	1960	DPA3264035	" " " " " "	1960	F4B-3
Nozzle holder	1959-60	BKB32S630	Thermostart	1959-60	285-2A
Nozzle	1959-60	BDL110S6267			

LAGONDA 2½ litre 1949-52

Ammeter	1951-52	36144A	LAMPS—continued			SWITCHES—continued		
Battery	1949-52	SG11E	Head, Export Europe (not France)	1949-50	*B50445K	Solenoid, starting motor	1949	76022B
Coil, ignition	1949-52	*45012A/D	ditto	1951-52	*50963A	ditto Later	1949-52	*76411D
Control box	1949-52	37105A	Head, Export France	1951-52	*50962A	Solenoid operating	1949-52	*31071A
" " " " " " Later	1952	*37139D	Number plate illumination	1949-52	53093E	Stop lamp	1949-52	31281B
Distributor	1949-50	40125A/D	Reverse tail	1949-52	52120D	Trafficator	1949-52	031046
" " " " " " " "	1951-52	40125E/F	Side	1949-52	52047A	Windshield wiper	1949-52	*31322A
Fuse box	1952	40264A/B	Stop tail	1949	*53082B	Terminal block	1951-52	37082A
Generator	1949-52	*37107A	" " " " " " " "	1950-52	53194B	Trafficators (U.S.A.)	1951-52	37101A
Horn	1949-52	23000A/J	Petrol reserve valve	1949-52	78006A	Warning lights	1949-52	*54039A
Low note	1949-52	*69021A	Starting motor	1949-50	*270244	Choke	1949-52	*38019B
High note	1949-52	*69022A	" " " " " " " " Later	1950-52	26043A	Ignition	1949-52	*38013B
LAMPS			Steering column control	1949-52	32756A	Petrol reserve	1949-52	*38042A
Fog	1949-52	*55055B	SWITCHES			Windshield wipers		
Head, Home			Battery Master	1949-52	*76604A	Motor	1949-50	*75062J
R.H.D., dip left (L.H.)	1949-50	*50445K	Choke warning light	1949-52	*31323A	" " " " " " " " Later	1951-52	*75062K
" non-dip (R.H.)	1949-50	*50446K	Dipper	1949-52	*31284A	Wheelbox	1952	75161A
" dip left	1951-52	*50954A	Foglamp	1949-52	*31320A	Crosshead and rack assy.	1949-52	*72548A/K
Head, Export			Ignition and lighting	1949-52	*34018A	Cut to 55 1/16"	1949-52	738223
R.H.D., dip left	1949-50	*50445K	Interior light	1949-52	*31276A	Outer casing		
" " " " " " " " " "	1951-52	*50954A	Panel	1949-52	*31321A	Motor to wheelbox	1949-52	739858
L.H.D., dip right	1949-50	*A50445K	Petrol gauge	1949-52	*31295A	Wheelbox to wheelbox	1949-52	*739956
" " " " " " " " " "	1951-52	*50804D	Petrol reserve	1949-52	*31319A	End tube	1949-52	740031
			Reverse lamp	1949-52	*31077A	Arm	1949-52	*736418
						Blade	1949-52	736414

LAGONDA 3 litre Saloon and Coupé 1954-58

Ammeter	1954-58	36144A	Horn			LAMPS—continued		
Battery	1954-58	SG11E	Low note	1954-57	*69011F	Head, Export U.S.A.	1956-57	51067B
(Export)	1954-58	STGW11E	" " " " " " " " " "	1958	69046F	Head, Export Mexico	1956-58	51482E
Coil, ignition	1954-58	*45012D	High note	1954-57	*69012F	Number plate illumination		
Control box	1954-55	*37139D	" " " " " " " " " "	1958	69047F	and reverse	1954-58	53097E
Distributor	1955-58	37183A/H	Horn relay	1954-58	33135B	Side (2-door)	1954-55	52139B
Flasher relay	1954-58	40125F	Inspection lamp sockets	1954-58	301187	" (4-door)	1955	*52162B
Flasher unit (headlamp)	1955-58	33117A/D	LAMPS			Side and flasher	1956-58	52240D
" " " " " " " " " "	1958	*33116B	Fog	1954-58	*55055B/D	Stop tail	1954-55	53174E
Flasher unit	1958	35010A	Head, Home			Stop tail and flasher	1955-58	53330A/D
Fuse box	1954-55	*37130A	R.H.D., dip left	1954-55	51065A	Petrol reserve valve	1954-57	78006A
" " " " " " " " " "	1955-58	*37137A	" " " " " " " " " "	1956-58	51560A	" " " " " " " " " "	1958	78034A
" " " " " " " " " "	1954-58	*37107A	Head, Export			Starting motor	1954-58	26043A
Generator	1954-58	*22462A/E	R.H.D., dip left	1956-58	51560A	Steering column control	1954-58	32756A
			Head, Export France	1956-58	51561A	Slip ring	1954-58	348048
						Suppressor	1954-58	78105A



LAGONDA 3 litre Saloon and Coupé 1954-58—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers		
Battery master	1954	*76604A	Solenoid, starting motor	1954-58	*76411D/E	Motor	1954-58	*75236A
"	1955-58	76605A	Solenoid operating ..	1954-58	*31071A	Wheelbox	1954-58	72639D
Dipper	1954-55	31284A	Stop lamp	1954-58	31281B	Crosshead and rack assy.		
Foglamp	1954-58	*31320A/B	Trafficator	1954	031046	Cut to 49 1/2" ..	1954-58	741264
Heater	1954-58	*31328A	Under-bonnet light ..	1955-57	*31327A	Outer casing ..		
Ignition and lighting ..	1954-58	*34018A/B	"	1958	*31532A	Motor to wheelbox ..	1954-58	740867
Interior light	1954	*31276A	Windshield wiper ..	1954-58	*31302A	Wheelbox to wheelbox	1954-58	740782
"	1958	*31327A	Knob	—	316646	End tube	1954-58	740746
Map light	1955-58	*31536A	Terminal block	1954-58	37101A/B	Ferrule, casing retaining	1954-58	740715
Panel	1954-55	*31321A	Trafficators	1954-55	54044D	Arm	1954	*741300
"	Later	1955				"	1955	745075
Knob	—	768913	Warning lights			"	1955-57	*741294
Petrol and oil gauge ..	1954-58	31295B	Ignition	1954-58	*38013B	"	1958	745080
Petrol reserve	1954-58	*31319A	Petrol	1954-58	*38042A	Blade	1954-55	738734
Reverse lamp	1954-58	*31077D/E				"	1955-58	*738735

LAMBOURNE, C. F. 'Lamb-Kar' 1952-54

Battery	1952-54	GU11E	LAMPS			SWITCHES		
Fuse box	1952-54	*385211	Side	1952-54	52139B	Ignition	1952-54	31201B
Horn	1952-54	*069239	Tail and number plate ..	1952-54	*53140B	Knob	—	314026
Horn push	1952-54	31269A	Panel light bulb holder ..	1952-54	39007A	Windshield wipers		
						Motor	1952-54	*75121A
						Arm	1952-54	*735045
						Blade	1952-54	727802

LANCHESTER 10 h.p. LD10 1946-51

Battery	1946-51	SG9A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1946-51	*45012A/D	Head, Export			Panel	Later	1951
Control box	1946-50	*37031A	Vertical dip	1948-51	50654A	Knob	—	31113A
"	1951	37057E	Number plate illumination	1946-47	*53045B	Starting motor ..	1946-51	*316490
Distributor	1946-47	*409929	"	1948	*53061A	Stop lamp	1946-51	76428A
"	1948-51	40112A	Side	1946-47	53093E	Spring	—	31281B
Generator	1946-51	22449B	"	1948	52057A	Trafficators	1946-50	315543
"	Later	22449D	"	1951	*52078A	"	1951	*54014D
Horn			Stop tail	1951	52057A			*54041A
Low note	1946-50	*69021A	Mirror	1951	53173B	Windshield wipers		
"	1951	*69011F	Starting motor	1946-51	*62007A	Motor	1946-51	†75066A
High note	1946-50	*69022A	Steering column control ..	1946-51	*25000A/D	Clutch housing ..	1946-51	737085
"	1951	*69012F			32711A/F	Bracket, with shaft and		
Inspection lamp sockets ..	1946-51	301187	SWITCHES			coupling	1946-50	735395
LAMPS			Battery master	1951	76605B	Shaft, short	1946-50	737243
Fog	1951	*55029E	Dipper	1946-51	31284A	Coupling	1946-50	729036/S
Head, Home	1946	*50098A	Heater or fan	1951	*78221A	Grommet, housing ..	1946-50	734181
"	Later	1946-48	Knob	—	768378	Arm	1946-51	*735050
"	1948-51	*50211A	Ignition and lighting ..	1946-51	*344890	Blade	1946-51	727707
"		*50623A	Panel	1946-50	*359350			
			Knob	1951	*78235A			
					768378			

LANCHESTER 14 h.p. 1952-53

Battery	1952-53	GT11A	LAMPS—continued			SWITCHES—continued		
Coil, ignition	1952-53	*45012A/D	Head, Export Europe			Solenoid operating ..	1952-53	31115A
Control box	1952-53	*37138A/B	(not France)	1952-53	*50963A	Knob	—	*317335
Distributor	1952-53	40294A/B	ditto	1953	51339A	Stop lamp	1952-53	31281B
"	Later	40337A/D	Head, Export France ..	1952-53	*50962A	Spring	—	315543
Flasher unit	1953	*35003A	"	1953	51342A	Windshield wiper ..	1952-53	31113A
Fuse box	1952-53	033239	Number plate and reverse	1952-53	53161D	Knob	—	*316491
Generator	1952-53	22258D	Side	1952-53	53210D	Terminal block	1952-53	37101A
Horn			Side and flasher (U.S.A.)	1952-53	*52162A	Trafficators	1952	*54041A
Low note	1952-53	*69011F	Stop tail	1952-53	53199B	"	1953	54044A/D
"	1952-53	*69012F	Stop tail and flasher			Windshield wipers		
Inspection lamp sockets ..	1952-53	38604A	(U.S.A.)	1952-53	53153E	Motor	1952-53	75152A
Junction box	1952-53	78266A	Starting motor	1952-53	25521B/D	Wheelbox	1952-53	*72548A/K
"	Later	1953	Steering column control ..	1952-53	32866A/H	Crosshead and rack assy.		
LAMPS			SWITCHES			Cut to 45 1/2" ..	1952-53	736307
Head, Home			Dipper	1952-53	31284A	Outer casing ..		
Non-dip	1952	*50623A	Heater or fan	1952-53	78250A	Motor to wheelbox ..	1952-53	*739907
Dip left	1953	*50954A	Knob	—	768663	Wheelbox to wheelbox	1952-53	739937
"	Later	*51336A	Ignition and lighting ..	1952-53	31194A	End tube	1952-53	740031
Head, Export			Knob	—	316287	Grommet, wheelbox ..	1952-53	734652
Vertical dip	1952-53	50654A	Panel	1952-53	31113A	Arm, left hand drive	1952-53	*737603
L.H.D., dip right ..	1952-53	*50804D	Knob	—	*316492	"	1952-53	*737602
"	Later	1953	Reverse lamp	1952-53	31281B	Blade	1952-53	*738719
"			Solenoid, starting motor	1952-53	*76411D	"	Later	1953
								738724

LANCHESTER 'Sprite' 1955-56

Ammeter	1955-56	36224A	Flasher unit (U.S.A.) ..	1955-56	*35003A	Horn		
Battery	1955-56	GT7A	Flasher relay (U.S.A.) ..	1955-56	33117D	Low note	1955-56	69046B/E
Coil, ignition	1955-56	*45054H	Fuse box	1955-56	033239	High note	1955-56	69047B/E
Control box	1955-56	37182D/F	Generator	1955-56	22258D	Inspection lamp sockets ..	1956	38604A
Distributor	1955-56	*40507A/D	"	Later	22258E	Junction box	1955	78266A
"	Later	40547A/D						



LANCHESTER 'Sprite' 1955-56—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			Starting motor	1955-56	25058D	SWITCHES—continued		
Driving	1955	55132A	Steering column control ..	1955-56	32969B	Windshield wiper ..	1955	*31557A
Fog	1955	55128A				"	1956	*31498A
Head, Home			SWITCHES			Knob	1955-56	316371
R.H.D., dip left ..	1955	51336A	Blower	1955-56	*31557A	Trafficators	1955-56	54044E
"	1956	51336B/J	Knob		312897	Warning lights		
Head, Export ..			Dipper	1955-56	31284A	Gear selection	1955-56	*38153A
R.H.D., dip left ..	1955	51336A	Ignition and lighting ..	1955-56	31194D	Oil pressure	1955-56	38144A
"	1956	51336B/J	Knob	1955	316435	Trafficator	1955-56	38143A
L.H.D., dip right ..	1955	*51337B	Knob	1956	316285	Windshield wipers		
"	1956	*51337D/E	Panel	1955-56	78299B	Motor	1955-56	*75200A
Head, Export Europe			Knob		313600	Wheelbox	1955-56	72660A
(not France) ..	1955	51339A	Reverse lamp	1955-56	31281B	Crosshead and rack assy.	1955-56	*743231
ditto	1956	51339B/H	Switch circuit breaker			Outer casing		
Head, Export France			(Borg Warner			Motor to wheelbox ..	1955-56	743149
"	1955	*51341A	transmission) ..	1956	*31077E	Wheelbox to wheelbox	1955-56	744150
"	1956	*51341B/E	Solenoid, starting motor	1955-56	*76411E	End tube	1955-56	740746
Number plate illumination			Solenoid operating ..	1955-56	31115E	Arm, left hand drive ..	1955-56	745072
and reverse ..	1955-56	53161D	Knob		*317379	" right hand drive ..	1955-56	745071
Side	1955-56	53210D	Stop lamp	1955-56	31082E	Blade	1955-56	738724
Side and flasher (U.S.A.)								
Stop tail and flasher	1955-56	*52162E						
		53410B						

LANCIA 'Appia' and 'Flamina' Coupés 1959-60

LAMPS			Windshield wipers			Windshield wipers—cont'd		
Stop tail and flasher			('Appia')			Outer casing		
('Appia', U.S.A.) ..	1959-60	53541A	Motor	1959-60	75213A	Motor to wheelbox ..	1959-60	744327
('Flamina')	1959-60	53639A	Wheelbox	1959-60	72699B	Wheelbox to wheelbox	1959-60	744217
(" U.S.A.) ..	1959-60	53710A	Crosshead and rack assy.	1959-60	*743212	End tube	1959-60	740746
						Arm	1959-60	743527
						Blade	1959-60	737897

LARMAR ENGINEERING Invalid Carriage 1948-54

Ammeter	1948-50	*369076	LAMPS			SWITCHES		
Battery	1952-54	SG9E	Head	1948-54	50129A	Ignition and lighting ..	1948-49	34055A
Coil, ignition	1948-50	*45036A	Side	1948-54	*A52066A	Solenoid, starting motor	1952-54	76022B
Distributor	1948-50	40079D	Tail and number plate ..	1948-54	*A53056A	Solenoid operating ..	1952-54	*31071A
Horn	1948-54	069343	Mirror	1949-54	*62003A	Windshield wipers		
Horn push	1948-54	76205A	Regulator	1948-49	*33018A	Motor	1948-54	*75127A
			Starting motor	1952-54	25032A	Arm	1948-54	*735031
						Blade	1948-54	727801

LAYTON SPORTS CARS 'Jomar' (T.V.R.) 1959-60

Ammeter	1959-60	*36117B	LAMPS—continued			SWITCHES—continued		
Battery	1959-60	BT7A	Flasher, rear (U.S.A.) ..	1959-60	53600A/E	Lighting	1959-60	*31251A
Bulb holder, warning light			Head, Home	1959-60	51336B/J	Knob		316154
Bulb	1959-60	*54940878	Head, Export U.S.A. ..	1959	58493A	Panel light	1959-60	31201D
Coil, ignition	1959-60	281	"	1960	58618A	Knob		314026
Control box			Number plate illumination	1959-60	53093B	Solenoid, starting motor	1959-60	*76411E
(Climax Engine) ..	1959-60	37298A/B	Panel	1959-60	52405B	ditto Later	1960	*76445A
(Ford Engine) ..	1959-60	37182H	Side	1959-60	*52182D	Stop lamp	1959-60	31082E
ditto Later	1960	37182J & K	Stop tail and reflex ..	1959-60	53377B	Windshield wiper ..	1959-60	31201D
Distributor			Starting motor			Knob		314026
(Climax Engine) ..	1959-60	40565B	(Climax Engine) ..	1959-60	25063E/F	Warning lights		
(Ford Engine) ..	1959-60	40402J	(Ford Engine) ..	1959	25022M	Flasher	1959-60	38192A
Flasher unit	1959-60	35011A	"	1960	25022N/Q	Main beam	1959-60	38190A
Fuse box	1959-60	37110A	Steering column control ..	1959-60	33553A	Windshield wipers		
Generator			Stator tube		54300350	Motor	1959-60	75296E
(Climax Engine) ..	1959-60	22290A/E	SWITCHES			Wheelbox	1959-60	72694A
(Ford Engine) ..	1959-60	22258E/H	Dipper	1959-60	31780D	Crosshead and rack assy.	1959-60	*743214
Horn			" (U.S.A.)	1959-60	31800A	Outer casing		
Low note	1959-60	69046F	Fan	1959-60	31201D	Motor to wheelbox ..	1959-60	54711025A
High note	1959-60	69047F	Knob	1959-60	314026	Wheelbox to wheelbox	1959-60	54711026A
Horn relay	1959-60	33188A	Flasher	1959-60	31476A	End tube	1959-60	740746
LAMPS			Ignition and starting ..	1959-60	31912A	Arm	1959-60	745650
Flasher, front and rear						Blade	1959-60	737897
Flasher, front (U.S.A.)	1959-60	52337A						
	1959-60	52345A						

LEA FRANCIS 14 h.p. 1946-54

Ammeter	1949-54	36052B	Fuse box	1949-54	*37107A	LAMPS—continued		
Battery	1946-50	SG11A	Generator	1946-49	*22447A	Fog	1951	*55055B
"	1951-54	GT11A	"	1950-53	*22435A/B	"	1952-54	*55094A
Coil, ignition	1946-48	*45020A	" Later	1953-54	*22456A/B	Head, Home		
"	1949-54	*45012A/D	Horn			R.H.D., dip left (L.H.)	1946-50	*50325A/B
Control arm (6 light			Low note	1946-49	*69002B	" non-dip (R.H.)	1946-50	*50326A/B
Saloon)	1949	31143A	" Later	1949-54	*69011F	" dip left (L.H.)		
Control box	1946-48	*37032A	High note	1946-49	*69003B	" Mk. V and VI	1950	*50445K
"	1949	37065E	" Later	1949-54	*69012F	" non-dip (R.H.)		
"	1950-54	*37076E	LAMPS			Mk. V and VI	1950	*50446K
Distributor	1946-48	*405570	Boot (Saloon)	1951-54	53163A	" dip left	1951	*50954A
"	1949-53	*40148A/F	Fog	1946-50	*55010A	"	1952	50941A
" Later	1953-54	40245B/D				"	1953-54	51336A



Equipment Specification

LEA FRANCIS

LEA FRANCIS 14 h.p. 1946-54—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			Starting motor	1946-48	*255378	Windshield wipers		
Head, Export			ditto	1949	*255721	Motor (4 Light Saloon		
Vertical dip	1950	50349A/B	ditto (6 Light Saloon)	1949	*255378	and Utility) ..	1946-50	†75066A
R.H.D., dip left (Mk.			ditto	1950-54	25521B/D	" (6 Light Saloon)	1949	*75068K
V and VI)	1950	*50445K	Steering column control ..	1946-48	322890	"	1950	*75063K
R.H.D., dip left ..	1951	*50954A	ditto (4 Light Saloon			"	1951-52	*75063L
"	1952	50941A	and Utility) ..	1949-50	32738A	"	1953-54	75158A
"	1953-54	51336A	ditto (6 Light Saloon)	1950	32738A	Clutch housing ..	1946-50	735691
L.H.D., dip right ..	1950	*A50445K	ditto	1951-54	32845F	Bracket, with shaft and		
"	1951-52	*50804D				coupling	1946-50	735395
"	1953-54	*51337A				Shaft, short	1946-50	737243
Head, Export Europe			SWITCHES			Coupling	1946-50	729036/S
(not France)	1950	*B50445K	Battery master	1946-54	76605B	Link	1946-50	737274
ditto	1951-52	*50963A	Foglamp	1946-54	31201B	Wheelbox	1949	72560A/K
ditto	1953-54	51339A	Knob	1946-54	314403	"	1950-54	*72548A/K
Number plate illumination	1946-50	*53064A	Heater or fan	1950-53	*78211A	Crosshead and rack assy.		
(Saloon Mk. V and VI)	1950	53097E	Knob	1946-54	768473	Cut to 49 $\frac{1}{8}$ " ..	1949	738499
Number plate illumination	1951-54	53097E	Ignition and lighting ..	1946-54	*34026D	" " 44 $\frac{1}{8}$ " ..	1950	736307
(Estate Car)	1953-54	*53064A	Panel	1946-48	314026	" " 49 $\frac{1}{8}$ " ..	1951-54	738499
Roof	1946-52	*56017B	Knob	1949-54	*31024A	Outer casing ..		
"	1953-54	56047A	Reverse lamp	1949-50	*31068A	Motor to wheelbox ..	1949	*739832
"	1953-54	56047A	Knob	—	*314665	"	1950	739868
Side	1946-48	*52042A	Reverse lamp (6 Light	1949-50	*31077A	"	1951-52	*739855
"	1948	52070A	Saloon)	1951-54	*31077A	"	1953-54	*739907
"	1949-50	*52092A	Reverse lamp	1946-49	*760080	Wheelbox to wheelbox	1949	*739971
"	1951-54	52160A	Solenoid, starting motor	1950-54	*76411D	"	1950-54	*739960
" (Mk. V and VI)	1950	52151B	"	1946-48	*31071A	End tube	1949-54	740031
" (Mk. V and VI,			Solenoid operating ..	1949-53	*317063	Grommet, housing ..	1946-50	733874
U.S.A.)	1950-54	*52130A	"	1953-54	*31318A	" scuttle	1946-50	729378
Stop tail	1948	*53091A	Stop lamp	1946-54	31281B	" wheelbox ..	1949	734458
"	1951	53199B	Spring	1946-54	315543	"	1950	735824
Stop tail and flasher			Windshield wiper ..	1949-54	31201B	"	1951-54	733874
(Mk. V and VI, U.S.A.)	1950	53183B	Knob	—	*314691	Arm (4 Light Saloon and		
(U.S.A.)	1951-54	53153E	Trafficators	1946-49	*54018D	Utility)	1946-50	*735050
Stop tail and reverse	1950-52	53203B	"	1950-54	*54039A	" (6 Light Saloon) ..	1949	*736418
"	1952-53	53198B				"	1951-54	*736418
"	1946-48	*580785	Warning lights			Blade (4 Light Saloon		
"	1949	*62030A	Ignition	1946-48	*318505	and Utility) ..	1946-50	727707
"	1950-54	*062574	"	1949-54	*38013B	" (6 Light Saloon)	1949	736428
Panel light bulb holder	1950-54	39007A	"	1949-54	*38042A	"	1951-52	736428
Relay, side lamp ..	1949-54	33052A	Side lamp	1949-54		"	1953-54	736412

LEA FRANCIS 18 h.p. 4 Light Saloon 1951-54

Ammeter	1951-54	36052B	LAMPS—continued			SWITCHES—continued		
Battery	1951-54	GT11A	Head, Export Europe			Solenoid, starting motor	1951-54	*76411D
Coil, ignition	1951-54	*45012A/D	(not France)	1951-52	*50963A	Solenoid operating ..	1951-52	*317063
Control box	1951-54	*37076E	ditto	1953-54	51339A	"	1953-54	*31318A
Distributor	1951-52	40206D/E	Number plate illumination	1951	*53111A	Stop lamp	1951-54	31281B
"	1952-54	40239A/B	"	1952-54	53097E	Spring	—	315543
Flasher unit	1952-54	*35003A	Roof	1951	*56017B	Windshield wiper ..	1951-54	31201B
Fuse box	1951-54	*37107A	"	1952-54	56047A	Knob	—	*314691
Generator	1951-52	*22435A	Side	1951-54	52160A	Trafficators	1951	*54018D
"	1952-53	*22456A/B	(U.S.A.)	1952-54	*52130A	"	1952-54	*54039A
Horn			Stop tail	1951	53199B	Warning lights		
Low note	1951-54	*69011F	Stop tail and flasher			Ignition	1951-54	*38013B
High note	1951-54	*69012F	(U.S.A.)	1953-54	53153E	Side lamp	1951-54	*38042A
LAMPS			Stop tail and reverse	1952-54	53198B	Windshield wipers		
Boot	1951-54	53163A	Mirror	1951-54	*062574	Motor	1951-52	*75063L
Fog	1951-54	*55094A	Panel light bulb holder	1951-54	39007A	"	1953-54	75158A
Head, Home			Relay, side lamp ..	1951-54	33052A	Wheelbox	1951-54	*72548A/K
R.H.D., dip left ..	1951-52	*50954A	Starting motor	1951-52	26045A	Crosshead and rack assy.		
"	1952	50941A	"	1952-54	26041A/B	Cut to 49 $\frac{1}{8}$ " ..	1951-54	738499
"	1953-54	51336A	Steering column control ..	1951-54	32845F	Outer casing		
Head, Export			SWITCHES			Motor to wheelbox ..	1951-52	*739855
R.H.D., dip left ..	1951-52	*50954A	Battery master	1951-54	76605B	"	1953-54	*739907
"	1952	50941A	Foglamp	1951-54	31201B	Wheelbox to wheelbox	1951-54	*739960
"	1953-54	51336A	Knob	—	314403	End tube	1951-54	740031
L.H.D., dip right ..	1951-52	*50804D	Heater or fan	1951-53	*78211A	Arm	1951-54	*736418
"	1953-54	*51337A	Knob	—	768473	Blade	1951-52	736428
			Ignition and lighting ..	1951-54	*34026D	"	1953-54	736412
			Panel	1951-54	*31024A			
			Reverse lamp	1951-54	*31077A			

LEA FRANCIS 18 h.p. 6 Light Saloon 1950-53

Ammeter	1950-53	36052B	LAMPS—continued			LAMPS—continued		
Battery	1950-53	GT11A	Fog	1952-53	*55094A	Number plate illumination	1950-53	53100A
Coil, ignition	1950-53	*45012A/D	Head, Home			Roof	1951	*56017A
Control box	1950-53	*37076E	R.H.D., dip left (L.H.)	1950	*50445K	"	1952-53	56047A
Distributor	1950-52	40206D/E	" non-dip (R.H.)	1950	*50446K	Side	1950-53	52151B
"	1952-53	40239A/B	" dip left	1951-53	*50954A	" (U.S.A.)	1950-53	*52130A
Flasher unit	1952-53	*35003A	"	1953	51336A	Stop tail (U.S.A.)	1950	*53145B
Fuse box	1950-53	*37107A	Head, Export			Stop tail and flasher		
Generator	1950-52	*22435A/B	R.H.D., dip left ..	1950	*50445K	(U.S.A.)	1953	53153E
"	1952-53	*22456A/B	"	1951-53	*50954A	Stop tail and reverse	1950	*53143B
Horn			"	1953	51336A	"	1950	53203B
Low note	1950-53	*69011F	L.H.D., dip right ..	1950	*A50445K	"	1951-53	53198B
High note	1950-53	*69012F	"	1951-53	*50804D	Mirror	1950-53	*062574
LAMPS			"	1953	*51337A	Panel light bulb holder	1950-53	39007A
Bonnet	1952-53	53163A	Head, Export Europe			Relay, side lamp ..	1950-53	33052A
Fog	1950	*55063B	(not France)	1950	*B50445K	Starting motor	1950-52	26045A
"	1951	*55055B	ditto	1951-52	*50963A	"	1952-53	26041A/B
			ditto	1953	51339A	Steering column control ..	1950	32738A
						"	1951-53	32845F

* See Supersession Chart
L.H.D. .. Left hand drive

† No longer available—refer to Wiper Conversion Set Section
R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)

L.H. .. Left hand R.H. .. Right hand

continued



LEA FRANCIS 18 h.p. 6 Light Saloon 1950-53—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers—cont'd		
Battery master	1950-53	76605B	Windshield wiper ..	1950-53	31201B	Crosshead and rack assy.		
Foglamp	1950-53	31201B	Knob	—	*314691	Cut to 44 1/8"	1950	736307
Knob	—	314403	Trafficators	1950-51	*54018D	" " 49 1/8"	1951-53	738499
Heater or fan	1950-52	*78211A	" "	1952-53	*54039A	Outer casing		
Knob	—	768473	Warning lights			Motor to wheelbox ..	1950	739868
Ignition and lighting ..	1950-53	*34026D	Ignition	1950-53	*38013B	" " " "	1951-52	*739855
Panel	1950-53	*31024A	Side lamp	1950-53	*38042A	" " " "	1953	*739907
Reverse lamp	1950-53	*31077A	Windshield wipers			Wheelbox to wheelbox ..	1950-53	*739960
Solenoid, starting motor ..	1950-53	*76411D	Motor	1950	*75063K	End tube	1950-53	740031
Solenoid operating	1950-52	*317063	" "	1951-52	*75063L	Grommet, wheelbox ..	1950	735824
" " " "	1953	*31318A	" "	1953	75158A	" " " "	1951-53	733874
Stop lamp " "	1950-53	31281B	Wheelbox	1950-53	*72548A/K	Arm " " " "	1950-53	*736418
Spring	—	315543				Blade	1950-52	736428
						" " " "	1953	736412

LEA FRANCIS 1 1/2 litre Sports 1949: 2 1/2 litre Sports 1950-54

Ammeter	1949-54	36052B	LAMPS—continued			SWITCHES—continued		
Battery	1949	SG11A	Head, Export Europe			Stop lamp	1949-54	31281B
Foglamp	1950-54	GT11A	(not France)	1952	*50963A	Spring	—	315543
Coil, ignition	1949-54	*45012A/D	ditto	1953-54	51339A	Windshield wiper ..	1950-54	31201B
Control box	1949	37065E	Map reading	1949	*56021A	Knob	—	*314691
" " " "	1950-54	*37076E	Number plate illumination	1949-54	53097E	Trafficators	1949-50	*54018D
Distributor	1949	*40148A/F	Roof	1949-50	*56017B	" " " "	1951-54	*54039A
" " " "	1950-52	40206D/E	Side	1950-54	56047A	Warning lights		
" " " " Later	1952-54	40239A/B	(U.S.A.)	1950-54	52151B	Ignition	1949-54	*38013B
Flasher unit	1952-54	*35003A	Stop tail and number plate	1953-54	*52130A	Side lamp	1949-54	*38042A
Fuse box	1949-50	*37107A	Stop tail	1949	*53031D	Windshield wipers		
Generator	1949	*22447A	Stop tail and reverse ..	1950	*53143B	Motor	1949	75051D
" " " "	1950-52	*22435A/B	Stop tail	1951-54	53199B	" " " "	1950	*75063K
" " " "	1953-54	*22456A/B	Mirror	1950-54	*062574	" " " "	1951-52	*75063L
Horn			Panel light bulb holder ..	1949-54	39007A	" " " "	1953-54	75158A
Low note	1949	*69002B	Relay, side lamp	1949-54	33052A	Coupling bar	1949	732191
" " " "	1950-54	*69011F	Starting motor	1949	*255721	Bearing, passenger side	1949	731721
High note	1949	*69003B	" " " "	1950-52	26045A	Wheelbox	1950-54	*72548A/K
" " " "	1950-54	*69012F	" " " " Later	1952-54	26041A/B	Crosshead and rack assy.		
			Steering column control ..	1949-50	32738A	Cut to 44 1/8"	1950	736307
			" " " "	1951-54	32845F	" " " " 49 1/8"	1951-54	738499
LAMPS			SWITCHES			Outer casing		
Fog	1952-54	*55094A	Battery master	1949-54	76605B	Motor to wheelbox ..	1950	739868
Head, Home			Foglamp	1949-54	31201B	" " " "	1951-52	*739855
R.H.D., dip left (L.H.) ..	1949-50	*50793B	Knob	—	314403	" " " "	1953-54	*739907
" " non-dip (R.H.) ..	1949-50	*50362F	Heater or fan	1950-53	*78211A	Wheelbox to wheelbox ..	1950-54	*739960
" " dip left	1951-52	*50954A	Knob	—	768473	End tube	1950-54	740031
" " " " Later	1952-53	50941A	Ignition and lighting ..	1949-54	*34026D	Grommet, wheelbox ..	1950	735824
" " " "	1953-54	51336A	Panel	1949-54	*31024A	" " " "	1951-54	733874
Head, Export			Reverse lamp	1949-54	*31077A	Arm, left hand " " ..	1949	*732927
R.H.D., dip left	1952	*50954A	Solenoid, starting motor ..	1949	*760080	" " right hand	1949	*732926
" " " " Later	1952-53	50941A	Solenoid operating	1950-54	*76411D	" " " "	1950-54	*736418
" " " "	1953-54	51336A	" " " "	1949-52	*317063	Blade	1949	727784
L.H.D., dip right	1952-53	*50804D	" " " "	1953-54	*31318A	" " " "	1950-52	736428
" " " " Later	1953-54	*51337A				" " " "	1953-54	736412

LEWIS, H. T. Pedestrian Controlled Battery Vehicle 1951-55

Junction box	1951-55	78264A	LAMPS—continued			SWITCH		
LAMPS			Tail and number plate ..	1951-55	*53041B	Lighting	1951-55	31201B
Side	1951-55	52034A	2-pin plug	1951-55	545025	Knob	—	314026
			2-pin socket	1951-55	770419			

LIGHT DELIVERY VEHICLES 'Bi-Van' and Tri-Van' 1949-51

Alternator	1951	47068H	LAMPS			SWITCHES		
Battery	1949-51	PUW7E-4	Head, Home			Dipper	1949-50	*380521
Coil, ignition	1951	*45036A	('Bi-Van')	1949-51	*50306D	Ignition	1949-51	31246A
Horn	1949-51	*70001D	('Tri-Van')	1949-51	*50292D	Lighting	1949-51	*31254A
Horn push	1949-51	76204A	Side ('Tri-Van')	1949-51	A52036A			
Rectifier	1951	*47072A	Tail and number plate					
			('Bi-Van')	1949-51	*53140B			
			('Tri-Van')	1949-50	*A53007B			
			" " " "	1951	*53133A			

LLOYD '650' Roadster 1948-50

Ammeter	1948-50	*364576	LAMPS			SWITCHES—continued		
Battery	1948-50	SG9E	Head, Home			Stop lamp	1948-50	31281B
Coil, ignition	1948-50	*45016A	Vertical dip (L.H.) ..	1948-50	*50647D	Spring	—	315543
Control arm	1948-50	31168A	Non-dip (R.H.) ..	1948-50	*50648B	Trafficators	1948-49	*54012A
Control box	1948-50	37081E/H	Stop tail and number plate	1948-50	*A53071B	" " " "	1950	54037A
Distributor	1948-50	40094A/D	ditto (Export)	1948-50	*A53029A	Warning light (ignition) ..	1948-50	*38012B
Generator	1948-50	*22433A	Starting motor	1948-50	25032A	Windshield wipers		
Horn	1948-50	069343	SWITCHES			Motor	1948-50	*75121A
			Ignition and lighting ..	1948-50	*34006B	Bearing, passenger side	1948-50	731721
			Panel	1948-50	*314142	Arm, left hand	1948-50	735119
			Starting motor	1948-50	76428A	" " right hand	1948-50	735118
						Blade	1948-50	727784



Equipment Specification

LOTUS—MEYNELL

LOTUS Mk. VII and Mk. VIII (Ford 100E Engine) 1958

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1958	36001D	LAMPS			SWITCHES		
Coil, ignition	1958	*45053J	Driving	1958	55132B	Dipper	1958	31291A
Control box	1958	37182H	Fog	1958	55128B	Ignition	1958	*31631A
Distributor	1958	40402A/N & Q/T	Number plate illumination	1958	53518A	Lighting (Mk. VII)	1958	31126E
Fuse box	1958	033239	Stop tail	1958	53330D	" (Mk. VIII)	1958	31183H
Generator	1958	22258F	Starting motor	1958	25022M & N/Q	Solenoid, starting motor	1958	*76411E
Horn	1958	70141B	Steering wheel centre (Mk. VII)	1958	76231A	Stop lamp	1958	31082E
Horn push (Mk. VIII)	1958	76229A						

LOTUS Mk. IX (Climax or M.G. Engine) 1958-59

Ammeter	1958-59	*36117A	Horn	1958-59	70141B	Starting motor	1958-59	25022M
Coil, ignition	1958-59	*45054K				" " .. Later	1959	25063B
Control box	1958-59	37182H	LAMPS			SWITCHES		
" .. Later	1959	37204E	Flasher, front (U.S.A.)	1958-59	52338A	Flasher (U.S.A.)	1958-59	31476B
Distributor	1958-59	40566A/B	Flasher, rear (U.S.A.)	1958-59	53600A	Horn push and dipper	1958-59	31438A
(Climax Engine)	1958-59	40510B/D	Head, Home	1958-59	51960A	Lighting	1958-59	*34018A
(M.G. Engine)	1958-59	35010A	Side	1958-59	*52182D	Solenoid, starting motor	1958-59	*76411E
Flasher unit (U.S.A.)	1958-59	*37137A	Stop tail	1958-59	53178F/J	Solenoid operating	1958-59	*31071A
Fuse box	1958-59	22265E	Stop tail and number plate	1958-59	53244B/D	Stop lamp	1958-59	31082E
Generator	1958-59	22290A	Reflex reflector	1958-59	*57035D			
(Climax Engine)	1958-59	22258F						
" .. Later	1959							
(M.G. Engine)	1958-59							

LOTUS 'Elite' 1959-60

Ammeter	1959-60	*36246B	LAMPS—continued			SWITCHES—continued		
Battery	1959-60	FRVZ9A	Head, Home	1959-60	58260A/D	Heater	1959-60	*31900A
Bulb holder, warning lights	1960	*860547	R.H.D., dip left	1959-60	58260A/D	Knob	—	*54331339
Flasher and main beam	1960	*861113	Head, Export	1959-60	58260A/D	Ignition and starting	1959-60	*31846A
Ignition	1960	987	R.H.D., dip left	1960	58263B	Lighting	1959-60	31662A
Bulb	1960	*45054K	L.H.D., dip right	1960	58560A	Knob	—	54332710
Coil, ignition	1959-60	*37187L	Head, Export Europe (except France & Sweden)	1959-60	58561A	Solenoid, starting motor	1959-60	*76411E
Control box	1959-60	37307A/B	Head, Export France	1959-60	58631A	Windshield wiper	1959-60	*31954A
" .. Later	1959-60	37298A/B	Head, Export Sweden	1959-60	*52463A	Knob	—	*318167
" ("95")	1959-60	40566B	Number plate illumination	1959-60	52449B	Warning light (flasher)	1959	38102A
Distributor	1959-60	35010A	Side	1959-60	53819A	Shade and window	1960	54360259
Flasher unit	1959-60	*37131A	Stop tail and reflex	1959-60	33188A	Windshield wipers		
Fuse box	1959-60	22296A	Relay, horn	1959-60	33209A	Motor	1959-60	75311A
Generator	1959-60	69046F	Relay, lighting	1959-60	25063B/D	Wheelbox	1959-60	72686B
Horn	1959-60	69047F	Starting motor	1959	25063E	Crosshead and rack assy.	1959-60	744258
Low note	1959-60		" " .. Later	1959-60		Outer casing		
High note	1959-60					Motor to wheelbox	1959-60	54710413
LAMPS			SWITCHES			Wheelbox to wheelbox	1959-60	54710551
Flasher, front	1959-60	52337A	Dipper	1959-60	31800A	End tube	1959-60	740746
" (N.A.D.A.)	1959-60	52345A/B	Door pillar	1959-60	*31222A	Arm	1959	745082
Flasher, rear	1959-60	*52462A	Flasher	1959-60	*31905A	" .. Later	1959	745650
" (N.A.D.A.)	1959-60	53861A	Knob	—	*311097	Blade	1960	54711569
							1959-60	738734

LOTUS Mk. VII Series II 1960

Coil, ignition	1960	*45053M	Generator	1960	22700D	Starting motor	1960	25022N/Q
(Austin A40 and Ford 100E Engine)	1960	45111D	(Austin A40 and Ford 105E Engine)	1960		(Austin A40 and Ford 100E Engine)	1960	25071A/D
(Ford 105E Engine)	1960		ditto (temporary alternative)	1960	*22704A	(Ford 105E Engine)	1960	76231A/D
Control box	1960	37183L	(Ford 100E Engine)	1960	22258H	Steering wheel centre	1960	
(Austin A40 Engine)	1960	37182K	Horn	1960	70141A	SWITCHES		
(Ford 100E Engine)	1960	37290D				Driving lamp	1960	*31851A
" (105E ")	1960		LAMPS			Horn	1960	34307A
Distributor	1960	40675B	Driving	1960	55132E	Ignition	1960	31889A
(Austin A40 Engine)	1960	*40706A	Fog	1960	55128E	Lighting	1960	31788B
(Ford 100E Engine)	1960	40652B/F	Side	1960	*52182D	Starting motor	1960	76427D
" (105E ")	1960	033283				Stop lamp	1960	31802D
Fuse box	1960							

MEYNELL (See also Paramount) 'Cub' Mk. I, 'Vixen' and 'Flying Fox' Roadster and Coupé Mk. I 1952

Ammeter	1952	*36072D	LAMPS—continued			SWITCHES—continued		
Battery	1952	GT7A	Head, Export Europe (not France)	1952	*50961A	Panel	1952	*31251A
Coil, ignition	1952	*45020A/B	Head, Export France	1952	*50978A	Knob	—	315042
Control box	1952	37065E	Number plate illumination	1952	53093E	Starting motor	1952	*764150
" .. Later	1952	*37138A/B	Side	1952	52139B	Windshield wiper	1952	31248A
Distributor	1952	40286A	Stop tail	1952	53178D	Knob	—	315042
Fuse box	1952	033239	Mirror	1952	062587	Trafficators	1952	*54039A
Generator	1952	22258D	" (Coupé)	1952	*062579	Warning light holder (ignition)	1952	304994
Horn	1952	*69011F	Starting motor	1952	26009A	Windshield wipers		
Low note	1952	*69012F	Steering column control	1952	32843D/F	Motor	1952	75151A
High note	1952					Wheelbox	1952	72590A/K
LAMPS			SWITCHES			Crosshead and rack assy.		
Fog	1952	*55094A	Foglamp	1952	31248A	Cut to 31 1/2"	1952	738764
Head, Home	1952	*50959A	Knob	—	315042	Outer casing		
R.H.D., dip left	1952	*50959A	Ignition	1952	31287A	Motor to wheelbox	1952	740482
Head, Export	1952	*50959A	Interior light	1952	*31251A	Wheelbox to wheelbox	1952	739973
R.H.D., dip left	1952	*50959A	Knob	—	315042	End tube	1952	740031
L.H.D., dip right	1952	*50528M	Lighting	1952	*31251A	Arm, left hand	1952	*737431
			Knob	—	315042	" right hand	1952	*737430
						Blade	1952	727707



Equipment Specification

M.G.

M.G. 1½ litre 1947-53

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter (Saloon) ..	1947-53	*36028F	LAMPS—continued			SWITCHES—continued		
" (Tourer) ..	1947-50	*369269	Head, Export			Panel ..	1947-53	31201B
Battery ..	1947-52	SG9A	R.H.D., vertical dip			Knob ..	—	*314683
" ..	1953	GT9A	Saloon ..	1949-50	*50458A	Reverse lamp ..	1947-53	*31077A
Coil, ignition ..	1947-53	*45020A	R.H.D., dip left			Starting motor ..	1947-49	*76406E
Control box ..	1947-49	37057E	Tourer ..	1949-50	*50821D	Adaptor plate ..	—	78275A
" ..	1950-52	37065E	Saloon ..	1951	*50821D	Starting motor ..	Later	1949-53
" ..	1952-53	*37138A/B	R.H.D., dip left	Later	1951	Coupling ..	—	76423A
Distributor ..	1947-52	40089A/E	" ..	1952	*50985A	Stop lamp, R.H.D. ..	1947-53	31144A
" (Tourer) ..	1949-50	40162A/E	" ..	1953	*51078E	" ..	1947-53	31093A
" ..	1953	*40058D/F	L.H.D., dip right	1949	*50775E	Trafficators (Saloon) ..	1947-48	*539669
" ..	1953	40369D	" ..	1950-51	*A50821D	" ..	1949	*54014D
Fuse box ..	1952-53	033240	" ..	1951	*50775E	" ..	1950-52	*54035A
Generator ..	1947-49	22449A	" ..	1952	*51016A/F	" ..	1953	54044A/D
" (Tourer and U.S.A.) ..	1949	22452A	" ..	1952	50877B	Warning light (ignition)		
" ..	1950-52	*2250E/F	Head, Export Europe			Saloon ..	1947-53	*318534
" (Tourer) ..	1950	*2257A	(not France) ..	1950-51	*B50821D	Tourer ..	1947-50	*38013B
" ..	1952-53	22258D	ditto ..	1951	*50996A	" ..	1951-52	*318534
Horn ..	1947-52	*069399	ditto ..	1952	*51015A/F	Windshield wipers		
Low note ..	1953	*69011F	ditto ..	1952	50986A	Motor (Saloon) ..	1947-50	*75074H
High note ..	1953	*69012F	ditto ..	1953	*51079E	" ..	1951	*75074J
Horn relay ..	1953	*33116B	Reverse, tail and number plate ..	1947-53	53032B	" (Tourer) ..	1949-51	*75051D
Junction box ..	1950-53	78264A	Side ..	1947-53	52030A	Coupling bar (Tourer) ..	1952-53	75144A
LAMPS			" (Tourer, U.S.A.) ..	1949	52134B	Bearing, passenger side (Tourer) ..	1949-51	731721
Fog ..	1947-50	*55010A	Stop tail and number plate	1947-53	*53027B	Wheelbox, with switch ..	1947-53	*72565A/J
" ..	1951-53	*55029E	Mirror ..	1947-50	*62011A	" .. less switch ..	1947-53	*72564A/F
Head, Home			" ..	1951-52	*062581	Crosshead and rack assy. Cut to 42 3/4" ..	1947-53	736307
R.H.D., vertical dip ..	1947-48	*50459A	" ..	1953	062595	Outer casing		
Saloon (L.H.) ..	1949-50	*50458A	Panel light bulb holder ..	1951-53	39007A	Motor to wheelbox ..	1947-53	*739832
R.H.D., non-dip			Starting motor ..	1947-49	*255378	Wheelbox to wheelbox ..	1947-51	739937
Saloon (R.H.) ..	1949-50	50753A	Suppressor ..	1950-53	25022A/L	" ..	1952-53	*739936
R.H.D., dip left			" ..	1951-53	78105A	End tube ..	1947-53	740031
Tourer (L.H.) ..	1949-50	*50821D	SWITCHES			Ferrule, casing retaining	1947-51	738410
R.H.D., non-dip			Dipper ..	1947-48	31226B	Grommet ..	1947-53	734697
Tourer (R.H.) ..	1949-50	*50798D	" ..	1949-53	*31142A	Arm ..	1947-51	*735050
R.H.D., dip left			Cap ..	—	360026	" .. left hand ..	1952-53	*737596
Saloon (L.H.) ..	1951	*50821D	Foglamp ..	1947-48	*314722	" .. (Tourer) ..	1949-51	*732927
R.H.D., non-dip			" ..	1949-53	31201B	" .. right hand ..	1952-53	*737595
Saloon (R.H.) ..	1951	*50798D	Knob ..	—	*314683	" .. (Tourer) ..	1949-51	*732926
R.H.D., dip left	Later	1951	Ignition ..	1947-53	31287A	Blade (Saloon) ..	1947-51	727707
" ..	1952	*50995A	Lighting ..	1947-53	31091B	" ..	1952-53	*737682
" ..	1953	*51078E	Knob ..	—	315002	" (Tourer) ..	1949-51	727784

M.G. 'Midget' 1946-55: MGA 1956-59: MGA 1600 1959-60

Ammeter ..	1946-50	*369269	Generator (temporary alternative) ..	1960	*22704A	LAMPS, Head, Export—continued		
" ..	1951-53	36153A	" (Twin Cam) ..	1958-60	22295A	R.H.D., dip left ..	1949-51	*50821D
" ..	1954-55	36181B/D	" (Police Car) ..	1958-60	*22483D	" ..	1951	*50995A
Battery ..	1946-49	SG9A	Horn ..	1946-49	069248	" ..	1952	*51014A
" (MGA) ..	1950-55	GT9A	Low note ..	1950-55	*69011F	" ..	1952	*50985A
" (MGA 1600) ..	1956-59	SG9E	High note ..	1955-60	69046A/F	" ..	1953	51078A
" ..	1959-60	STGZ9E	" ..	1950-55	*69012F	" ..	1954	51344A
Bulb holder, panel light ..	1951-55	39007A	" ..	1955-60	69047A/F	" ..	1955-59	51344B
" ..	1960	554734	Horn push ..	1953	31269A	" ..	1959-60	51344D/F
Bulb ..	—	987	" ..	1954-60	76205A/D	L.H.D., dip right ..	1949-51	*A50821D
Coil, ignition ..	1946-54	*45020A	Inspection lamp sockets ..	1951-53	39507A	" ..	1951	*50775D
" ..	1955	*45053A	LAMPS			" ..	1952	51016E
" ..	1956-60	*45054	30 m.p.h. warning ..	1946-48	*545145	" ..	1952	50877B
Control box ..	1946-47	*37031A	" ..	1949	56040A	" ..	1953	*51080A
" ..	1948-49	37057E	Dash ..	1946-48	*545138	" ..	1954-55	*51345A & B
" ..	1950-52	37065E	" ..	1949	*56042A	" ..	1956-60	*51345D/F
" ..	1952-55	*37138A/D	Flasher, rear ..	1960	52337A	Head, Export Europe		
" ..	1956-59	37182A/H	" .. (U.S.A.) ..	1960	53600D	(not France) ..	1949-50	*B50821D
" ..	1959	37182J	Fog (optional) ..	1949-53	*55063B	ditto ..	1951	*50996A
" ..	1960	37183K	" ..	1954-60	55128B	ditto ..	1952	*51015E
" .. (Twin Cam) ..	1960	37182K & L	" ..	1960	55128E	ditto ..	1952	50986D
" .. (Police Car) ..	1958-60	*37189J	Bracket ..	1960	056117	ditto ..	1953	*51079E
Distributor ..	1946-49	*40048A/F	Head, Home			ditto ..	1954-59	51346B/E
" ..	1950-52	40162A/E	R.H.D., dip left (L.H.) ..	1946-47	*50103A	(except France & Sweden) ..	1959-60	58272A/B
" ..	1953	40368D/E	" .. non-dip (R.H.) ..	1946-47	*50102A	Head, Export France ..	1954-55	51411A
" ..	1953-55	40367D/E	" .. dip left (L.H.) ..	1948	*50474A	" ..	1956-59	51411B
" ..	1956	40488A	" .. non-dip (R.H.) ..	1948	*50475A	" ..	1959-60	58273A/B
" ..	1956-59	40510A	" .. vertical dip ..	1949	*50458A	Head, Export Sweden ..	1959-60	58451A/B
" ..	1959-60	40510B/D & F	" .. (L.H.) ..	1949	*50490A	Head, Export U.S.A. ..	1950-51	*A50821D
" ..	1960	40510E & H	" .. non-dip (R.H.) ..	1949	*50821D	" ..	1951	*50775E
" .. (Twin Cam) ..	1960	40718A	" .. dip left (L.H.) ..	1949-51	*50798D	" ..	1952	*51016E
Flasher unit ..	1954-56	*35003A	" .. non-dip (R.H.) ..	1949-51	*50798D	" ..	1952	50877B
" ..	1957-60	35010A	" .. dip left ..	1951	*50995A	" ..	1953	51405A
Fuse box ..	1952-55	033240	(L.H. and R.H.) ..	1951	*501014A	" ..	1954-60	51467A
" ..	1956-60	033239	" ..	1952	*50985A	" ..	1960	*58499A/B
Generator ..	1946-49	22452A	" ..	1953	*51078E	Head, Export N. America		
" ..	1950-52	*2257A	" ..	1954-55	51344A	(except U.S.A.) ..	1958-60	51533D/F
" ..	1952-55	22265A/B	" ..	1956-59	51344B	Map reading ..	1949	56040A
" ..	1956	22258D/E	" ..	1959-60	51344D/F	Cover ..	1956	574825
" ..	1956-59	22258E/F	Head, Export			" ..	1957-60	573914
" ..	1960	22700D	Vertical dip ..	1949	*50458A	Lens ..	1956-60	573915
						Gasket ..	1956-60	573916
						Number plate illumination	1949-60	53093E/J
						ditto ..	1960	53836B

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. ... Left hand drive

R.H.D. ... Right hand drive

continued



Equipment Specification

M.G.

M.G. 'Midget' 1946-55: MGA 1956-59: MGA 1600 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued			Warning lights—continued		
Side	1946-51	52030A	Foglamp	1946-53	*31276A	Main beam bulb holder	1959-60	554734
Side and flasher (U.S.A.)	1952-54	*52197A	"	1955	31248B	Bulb	1959-60	987
"	1953-54	52134B	Knob	1955	316390	Petrol reserve	1950-53	38054A
"	1954-55	52134A	Foglamp	1956-60	*31515A	"	1954-55	38101A
"	1956-59	*52236A	Knob	—	312866	Windshield wipers		
" (U.S.A.)	1960	52425D	Headlamp flasher (when fitted)	1959-60	31898A	Motor	1946-53	75051D
Stop tail and number plate	1946-49	*53029A	Horn push and dipper ..	1946-50	*380191	"	1954-55	75144A
Stop tail	1950	*53197A	Ignition	1954-55	31187D	" Later	1956-59	75297E
"	1951-52	*53220A	"	1956-60	*31449A/F	Coupling bar	1959-60	732191
"	1953-55	53178D/E	Ignition and lighting ..	1946-53	*34018A	Bearing, passenger side	1946-53	731721
Stop tail and flasher	1956-60	53330D	Lighting	1954-60	*31251A/E	Wheelbox, with switch	1954-55	72659A
Mirror	1946-50	580435	Knob	1954-55	*316136	" less switch ..	1954-55	72658A
" (optional)	1954	*062604	"	1956-60	316154	"	1956-60	*72674A/B
" (left hand)	1956-60	062590	Map light	1956-60	*31515A	Crosshead and rack assy.		
" (right hand)	1956-60	062587	Knob	—	316102	Cut to 46"	1954-55	738499
Reflex reflector	1953	*57035A	Panel	1946-51	*31276A	Crosshead and rack assy.	1956-60	743221
" Later	1953-54	*57052A	"	1952-53	78294A	Outer casing		
Relay, flasher	1955	*57031A	Knob	—	*768896	Motor to wheelbox ..	1954-55	*739832
Relay, foglamp (U.S.A.)	1951-59	33117A/D	"	1954-55	*31251A	"	1956-60	743664
Relay, headlamp flasher (when fitted)	1958-60	33169B	Knob	—	316137	Wheelbox to wheelbox	1954-55	*739979
Sleeve, Lucar connector			Panel	1956-59	78311A	"	1956-60	743665
14 amp.	1960	54190042	"	1960	78346A	End tube	1954-55	740031
35 amp.	1960	54190043	Knob	1956-60	768945	"	1956-60	740746
Starting motor	1946-49	*255378	Starting motor	1946	76428A	Ferrule, casing retaining	1956-60	740715
"	1950-57	25022A/L	"	1947-48	*76406E	Grommet, wheelbox ..	1956-60	740811
"	1958-59	25022M	"	1949	76428A	Arm, left hand	1946-52	*732927
"	1960	25022N/Q	Coupling	1950-60	76423A	"	1953	735111
Suppressor	1951-54	78114A	Stop lamp	1954-60	31082B/J	"	1946-52	*732926
" (when fitted)	1959	78106A	Windshield wiper	1956-60	*31515A	"	1953	735110
SWITCHES			Knob	—	312865	"	1954-55	*737517
Auxiliary	1954	31248A	Warning lights			"	1956-57	745084
Knob	—	316390	Flasher	1953	*38013B	"	1956-57	745075
Dipper	1953-60	31284A/D	"	1954-55	38102A	" Later	1957-60	745083
Flasher	1953-60	31250A/H	"	1956-60	38132A	" Later	1957-60	745082
Knob	1953-55	*311132	Ignition	1946-49	*38013B	Blade	1946-53	727784
Lever	1956-60	*311097	"	1950-53	38049A	"	1954-55	737680
			"	1954-55	38100A	"	1956	738724
			" bulb holder ..	1959-60	863511	"	1957-60	737910

M.G. 'Magnetite' 1954-59

Ammeter	1954-59	*36180A/B	LAMPS—continued			SWITCHES—continued		
Battery	1954-58	GT9A	L.H.D., dip right	1954	*51345A	Panel	1954-59	*31251A/D
"	1959	BT9A	"	1955	*51345B	Knob	1957-59	316137
Coil, ignition	1954	*45020A	"	1956-59	*51345D/F	"	1957-59	*316158
"	1955-56	*45053A/D	Head, Export Europe (not France) ..	1954-55	51346A	Reverse lamp	1954-59	*31077A
"	1957-59	*45054H/K	ditto	1956-59	51346B/E	Solenoid, starting motor	1954-59	*76411D/E
Control box	1954-55	*37138A/D	(except France & Sweden) Later	1959	58272A/B	Solenoid operating ..	1954-59	31253A/E
"	1956-59	37182A/H	"	1954-55	51411A	Knob	1954	317362
" (Police Car)	1959	37182J	Head, Export France ..	1956-59	51411B	"	1955-56	317372
Distributor	1958-59	*37189H/J	" Later	1959	58273A/B	"	1957-59	317381
"	1954-56	*40414A & E	Head, Export Sweden ..	1959	51346B/E	Stop lamp	1954-59	31082B/E
"	1956	40509A/D	Head, Export U.S.A. ..	1955-59	51467A	Windshield wiper ..	1954-59	31248A/B
"	1957	40510A	Head, Export Canada ..	1958-59	51533D/F	Knob	—	316391
"	1958	40587A	Number plate illumination and reverse ..	1954-59	53317A	Trafficators (Saloon) ..	1954	54044D
"	1959	40587B/D	Side	1954-59	52139B/D	" (R.H.D.)	1955-59	54044D/E
Flasher unit (L.H.D. and optional R.H.D.) ..	1955-56	*35003A	Side and flasher (L.H.D. and optional R.H.D.) ..	1955	*52162B	Windshield wipers		
ditto	1957-59	35010A	ditto	1956-59	52240B	Motor	1954-55	*75192D
Fuse box	1954-59	033239	Stop tail and flasher ..	1954	*53298A	"	1956-59	75296A/D
Generator	1954-56	22258D	"	1955-59	53377A/B	" Later	1959	75296E
"	1956-59	22258E/F	Mirror	1954-55	062602	Wheelbox	1954-59	72645D
" (Police Car)	1958-59	*22483D	"	1956-59	062615	Crosshead and rack assy.		
Horn			(alternative in 1959)	1955-59	33117A	Cut to 32"	1954-55	*743220
Low note	1954-55	*69011F/J	Relay, flasher (when fitted)	1955-59	33116B	" 32"	1956-59	743221
"	1956-59	69046A/F	Relay, horn	1954-59	25022A/L	Outer casing		
Gauze and rubber ..	1957-59	707083	Starting motor	1954-57	25022M	Motor to wheelbox ..	1954-59	745050
High note	1954-55	*69012F/J	Suppressor (when fitted) ..	1958-59	78105A	Wheelbox to wheelbox	1954-59	745032
"	1956-59	69047A/F	"	1954-57	78106A	End tube	1954-59	740746
Gauze and rubber ..	1957-59	707085	SWITCHES	1958-59		Ferrule, casing retaining	1954-59	740715
Grommet	1957-59	690936	Dipper	1954-59	31284A/D	Grommet, wheelbox ..	1959	740811
LAMPS			Foglamp	1954-59	*31251A	Arm, left hand	1954	741837
Fog	1954-59	55128B	Knob	1954-56	316140	"	1954	741836
Head, Home	1954-55	51538A	"	1957-59	*316159	"	1955-58	741839
R.H.D., dip left	1956-59	51538B	Ignition	1954-57	31187D	"	1959	743524
"	1959	51538D/E	Lighting	1958-59	*31484B	"	1955-58	741838
Head, Export			Knob	1954-59	*31251A/D	"	1959	743523
R.H.D., dip left	1954-56	51344A	"	1954-55	316136	Blade	1954-56	*738735
"	1956-59	51344B	"	1956-59	316141	"	1957-59	737897

M.G. 'Magnetite' Mk. III 1959-60

Ammeter	1959-60	36247A/B	Bulb holder, panel light (1 off)	1959-60	861845	Control box	1959	37283A/B
Battery	1959-60	BT9A	Bulb	—	989	"	1960	37290D/E
Bulb holder, panel light (3 off)	1959-60	554734	Coil, ignition	1959	*45103A/D	Distributor	1959-60	40644A/B
Bulb	—	987	"	1960	*45113D	" Later	1960	40644D & F
						Flasher unit	1959-60	35020A
						Fuse box	1959-60	033285

* See Supersession Chart

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)

continued



Equipment Specification

M.G.—MORGAN

M.G. 'Magnetite' Mk. III 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Generator	1959	22297A	Reflex reflector	1959-60	57113A	Windshield wipers—cont'd		
"	1960	22700D	Relay, horn	1959-60	33188A	Wheelbox		
" (temporary alternative)	1960	*22704A	Sleeve, Lucar connector			Driver side	1959-60	72713A/B
Horn			14 amp.	1959-60	54190042	Passenger side	1959-60	72707A
Low note	1959-60	69046F	35 amp.	1959-60	54190043	Crosshead and rack assy.	1959-60	744254
High note	1959-60	69047F	Twin	1960	54190119	Outer casing		
LAMPS			Starting motor	1959	25022M	Motor to wheelbox ..	1959-60	54710207
Head, Home			"	1960	25022N/Q	Wheelbox to wheelbox	1959-60	54710208
R.H.D., dip left ..	1959-60	58251A/F	SWITCHES			End tube	1959-60	740746
Head, Export			Dipper	1959-60	31800A	Ferrule, casing retaining	1959-60	740715
R.H.D., dip left ..	1959-60	58251A/F	Flasher	1959-60	31885A	Grommet, wheelbox ..	1959-60	740811
L.H.D., dip right ..	1959-60	58252A/F	Heater	1959-60	31828A	Arm, left hand drive ..	1959	744134
Head, Export Europe			Ignition and starting	1959	*31781A/D	" .. right hand drive ..	1960	54711539
(except France & Sweden)	1959-60	58253A/E	Lighting	1960	31973B	"	1960	54711538
Head, Export France ..	1959-60	58254A/E	Panel light	1959-60	31841A/D	Blade	1959	744133
Head, Export Sweden ..	1959	58315A/E	Reverse lamp	1959-60	31840A/D	"	1960	54711283
" Later	1959	58446A/D	Solenoid, starting motor	1959-60	*76465A	Windshield wipers (later)		
"	1960	*58455B	ditto Later	1960	76464A	From Chassis No. 11012		
Head, Export U.S.A. ..	1959	58255A/B	ditto (automatic transmission)	1959	*76466A	Motor, left hand drive	1960	75357A
"	1960	*58488A/D	Stop lamp	1959-60	31882A	" .. right hand drive	1960	75358A
Number plate illumination	1959-60	53763A	Windshield wiper ..	1959-60	31839A/D	Wheelbox		
ditto Later	1960	53814A	Warning lights			Driver side	1960	72707A
Reverse	1959-60	53787A/D	Ignition, bulb holder ..	1959-60	863511	Passenger side	1960	72713A/B
Side and flasher			Main beam, bulb holder	1959-60	554734	Crosshead and rack assy.	1960	744254
Left hand	1959-60	52432A/E	Bulb	—	987	Outer casing		
Right hand	1959-60	52433A/E	Windshield wipers			Motor to wheelbox ..	1960	54710207
Left hand (N. America)	1959-60	52434A/E	Motor, left hand drive	1959-60	75358A	Wheelbox to wheelbox	1960	54710208
Right hand	1959-60	52435A/E	" .. right hand drive	1959-60	75357A	End tube	1960	740746
Stop tail and flasher						Ferrule, casing retaining	1960	740715
Left hand	1959-60	53792A/E				Grommet, wheelbox ..	1960	740811
Right hand	1959-60	53793A/E				Arm, left hand drive ..	1960	54711538
Left hand (N. America)	1959-60	53794A/E				" .. right hand drive ..	1960	54711539
Right hand	1959-60	53795A/E				Blade	1960	54711283

MIDLAND VEHICLES Battery Vehicle 1951-55

Horn	1951-55	*069206	LAMPS—continued			Trafficators	1951-55	54028D
Horn push	1951-55	76205A	Tail and number plate ..	1951-55	*53041B	Windshield wipers		
Junction box	1951-55	78264A	Mirror	1951-55	62515A	Motor	1951-55	*75120A
LAMPS			SWITCHES			Arm	1951-54	*735045
Head	1951-55	50124B	Stop lamp	1951-55	31281B	Blade	1951-54	727802
Side	1951-55	Serviced by Butlers Ltd.	Spring	—	315543			

MORGAN 3-wheeler 1948-52

Ammeter	1948-52	*369047	Inspection lamp sockets ..	1948-52	*39511A	Panel light bulb holder ..	1948-52	39007A
Battery	1948-52	SLG11E	LAMPS			Starting motor	1948-50	*250498
Coil, ignition	1948-52	*45016A	Dash	1948-50	A56031A	"	1951-52	25043A
Control box	1948-52	*332179	"	1952	*A56030A	SWITCHES		
Distributor	1948-52	40286A	Head, Home			Dipper	1948-52	*359831
Generator	1948-52	22005B	Dip left (L.H.)	1948-52	50414D	Ignition and lighting ..	1948-52	*344694
Horn	1948-52	069225	Non-dip (R.H.)	1948-52	50415D	Starting motor	1948-52	*764150
Horn push	1948-52	*76213A	Tail and number plate ..	1948-52	*A53007B	Warning light (ignition) ..	1948-52	*38012B

MORGAN 'Plus Four' 1946-60

Ammeter	1946-50	*36036A	Distributor—continued			LAMPS—continued		
"	1951-60	36023F	('Vanguard' Eng.) ..	1959-60	40548D	Flasher, front and rear ..	1955-60	52337A
Battery			Flasher unit (Export, Coupé & Special Orders)			Flasher, rear (U.S.A.) ..	1960	53600B
(2-seater and Coupé) ..	1950-51	SLG11E	ditto	1955-57	*35003A	Fog (U.S.A. and Special Orders)		
(2-seater Tourer) ..	1952-55	SG9E	ditto	1958-59	35010A	ditto	1946-51	*55063B
"	1956-58	STXW9E	ditto	1960	35020A	ditto	1952-55	*55049B
"	1959-60	STGW9E	Fuse box	1951-53	37134A	ditto Later	1955-60	55128B
(4-seater)	1946-55	SLG11A	" Later	1953-59	033240	Head, Home		
"	1956-58	SLTW11A	Generator	1960	033285	R.H.D., non-dip	1946-47	*50102A
"	1959	SLG11A	"	1946-48	*228137	"	1948-50	50753A
"	1960	STGK9E	"	1949-50	22449A	"	1951	*50798D
Bulb holder, panel light	1946-60	39007A	"	1951-53	*22250E/F	" .. dip left	1952-53	*50995A
Bulb	—	987	" Later	1953-55	22258D	"	1953	*51353A
Coil, ignition	1946-57	*45012A/D	"	1956-60	22258E/H	"	1954	51344A
"	1958-60	*45054J	Horn	1946-52	069344	"	1954-55	51336A
Control box	1946-48	*332202	"	1953-55	*69012F/J	"	1956-60	51336B/J
"	1949-50	37057E	"	1956-60	69047D/F	Head, Export		
"	1951-53	*37048E	Horn push			Vertical dip	1946-47	*50291A
"	1953-55	*37138A/D	(2 and 4-seater) ..	1946-54	*76208A	"	1949-50	*50458A
"	1956-59	37182H	(Coupé)	1946-54	*76211A	R.H.D., dip left	1951	*50821D
"	1960	37290D/E	Horn push	1955-60	*76211B/D	"	1952-53	*50995A
Distributor	1946-47	*406345	Inspection lamp sockets ..	1946-60	39507A	"	1953	*51353A
"	1948-50	*409639	Junction box	1946-50	78266A	"	1954	51344A
"	1951-54	*40201A/B	LAMPS	1951-55	78264A	"	1954-55	51336A
" (TR2/3 Engine) ..	1955-57	*40403D	Flasher, front			"	1956-60	51336B/J
"	1958-59	*40480A	(Export, Coupé and Special Orders)			L.H.D., dip right	1951	*A50821D
"	1960	40698A	"	1955-58	*52246A	"	1952	50877B
"	1960	40698B	"	1960	52345A	"	1953	*50775E
" ('Vanguard' Eng.)	1956-57	*40365D				"	1953-54	*51355A
"	1958	40559A						

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued



Equipment Specification

MORGAN

MORGAN 'Plus Four' 1946-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS, Head, Export— <i>continued</i>			SWITCHES— <i>continued</i>			Windshield wipers— <i>cont'd</i>		
L.H.D., dip right ..	1954	*51337A	Solenoid operating ..	1951-58	31253A/B	Outer casing		
" " " ..	1955	*51337B	Knob " " ..	1959-60	31377A	Motor to wheelbox		
" " " ..	1956-59	*51337D/E	" " " ..	1951-54	*317364	(Coupe) ..	1951-52	*739855
" " " Later	1959-60	*51337F/K	" " " ..	1955-58	317362	" " " ..	1953-55	*739870
Head, Export Europe			Starting motor ..	1946-50	76428A	(2-seater) ..	1954	*739868
(not France) ..	1951-53	*50996A	Stop lamp ..	1946-50	31281B	(2 and 4-seater) ..	1955	*739868
ditto ..	1953-54	*51354A	Spring ..	—	315543	(All Models) ..	1956-60	*739868
ditto .. Later	1954-55	51339A	Trafficator ..	1946-48	31379A	Wheelbox to wheelbox		
ditto ..	1956-59	51339B/H	(when fitted)	1949-60	*31306A	(Coupe) ..	1951-55	*739956
ditto .. Later	1959-60	58230A/B	Windshield wiper ..	1951-57	31248A/B	(2-seater) ..	1954	*739979
Head, Export U.S.A. ..	1951-53	*50775E	Knob " " ..	1951-54	*316375	(2 and 4-seater) ..	1955	*739979
" " " Later	1953	*51355A	" " " ..	1955-57	315042	(All Models) ..	1956-60	*739979
" " " ..	1954-60	51509A/E	" " " ..	1958-60	316393	End tube ..	1951-60	740031
Number plate illumination	1955-60	53093E/J	Trafficators (when fitted)	1946-55	*54039A	Grommet (Coupe)		
Side ..	1946-52	52030A	" " " ..	1956-60	54044E	(Housing or wheelbox)	1946-55	729313
Stop tail and number plate	1946-50	*52182B	Warning lights			(Scuttle) ..	1946-50	729378
" " " ..	1951-54	53178D	Ignition ..	1946-50	*38013B	Arm		
Stop tail " " " ..	1955-58	53178E/H	" " " ..	1951-57	38059A	L.H.D. and R.H.D.		
Starting motor ..	1946-48	*250231	" " " ..	1958-60	38145A	(Coupe) ..	1946-50	735099
" " (TR2/3 Eng.)	1949-50	25017A	Main beam ..	1951-52	38052B	L.H.D. (Coupe) ..	1951-55	*737678
" " ('Vanguard' Eng.)	1951-54	25526A/J	" " " ..	1953-57	38059A	R.H.D. ..	1951-55	*737651
" " " ..	1955-60	25541H	" " " ..	1958-60	38150A	L.H. (2-seater) ..	1946-53	*735103
	1959-60	25550A	Windshield wipers			R.H. " " ..	1946-53	*735102
SWITCHES			Motor (Coupe) ..	1946-50	†75066A	L.H. (4-seater) ..	1946-50	735111
Dipper ..	1949-59	31284A/D	" " " ..	1951-52	*75074J	" " " ..	1951-52	*735103
" " " ..	1960	31800A	" " " ..	1953-55	75144A	" " " ..	1953	*735107
Fan ..	1955	31248B	" (2 and 4-seater)	1946-50	*75059A	R.H. " " ..	1946-50	735110
Knob ..	—	315042	" (4-seater) ..	1951-54	*733147	" " " ..	1951-52	*735102
Flasher (when fitted) ..	1955-60	31476A/B	" (2-seater) ..	1951-53	*733147	" " " ..	1953	*735107
Foglamp (when fitted) ..	1951-57	31248A/B	" " " ..	1954	75150A	L.H.D. (2 and 4-seater)	1954-55	*737814
" " " ..	1958-60	31434B	" (2 and 4-seater)	1955	75150A	R.H.D. " " " ..	1954-55	*737815
Knob " " " ..	1951-54	*316374	(All Models)	1956-60	75150A/B	(Coupe and 4-seater)	1956	742159
" " " ..	1955	315042	Shaft, short (Coupe) ..	1946-50	737243	R.H.D. ..	1956	742158
" " " ..	1956-57	*316374	Coupling (Coupe) ..	1946-50	729036/S	(Coupe and 4-seater)	1957-60	742291
" " " ..	1958-60	313619	Coupling bar			L.H.D. ..	1956	742156
Ignition and lighting	1946-50	*34027B	(2 and 4-seater) ..	1946-50	727293	(Coupe and 4-seater)	1956	742157
" " " ..	1951-60	31270A/B	(4-seater) ..	1951-54	732968	L.H.D. and R.H.D.	1957-60	742291
Knob " " " ..	1951-54	*316425	(2-seater) ..	1951-53	732968	(Coupe and 4-seater)	1956	742156
" " " ..	1955-60	316276	Wheelbox			L.H.D. ..	1956	742157
" " " ..	1946-50	31201B	(Coupe) ..	1951-54	*72548A/K	(2-seater Tourer) ..	1957-60	742295
" " " ..	1951-57	31248A/B	" " " ..	1955	72662A	R.H.D. ..	1956	742157
" " " ..	1958-60	*31557A	(2-seater) ..	1954	72629A/D	(Coupe and 4-seater)	1956	742157
Knob ..	1946-50	314026	(2 and 4-seater)	1955	72629A/D	L.H.D. and R.H.D.	1957-60	742291
" " " ..	1951-54	*316373	(All Models)	1956-60	72629A/D	(Coupe and 4-seater)	1956	742156
" " " ..	1955-57	315042	Crosshead and rack assy.			(Coupe and 4-seater)	1956	742157
" " " ..	1958-60	312955	(Coupe) ..	1951-55	736177	(2-seater) ..	1956	742157
Solenoid, starting motor	1951-59	*76411D/E	(2-seater) ..	1954	736307	(4-seater) ..	1953	727784
" " " ..	1960	*76465B	(2 and 4-seater)	1955	736307	(2 and 4-seater)	1954-55	*737811
			(All Models) ..	1956-60	736307	(2-seater Tourer) ..	1956-60	737811

MORGAN 'Four-Four' (Standard Engine) 1949-50

Ammeter ..	1949-50	*36036A	LAMPS— <i>continued</i>			Windshield wipers		
Battery			Head, Home			Motor (Coupe) ..	1949-50	†75066A
(4-seater) ..	1949-50	SLTW11A	Non-dip ..	1949	*50490A	" (2 and 4-seater)	1949	*75059A
(2-seater and Coupe) ..	1949-50	SLTW11E	" " " ..	1950	50753A	" " " ..	1950	732480
Coil, ignition ..	1949	402032	Head, Export			" " " ..		
" " " ..	1950	*45012A/D	Vertical dip ..	1949-50	*50458A	Clutch housing ..	1949-50	737412
Control box ..	1949-50	37057D	Side ..	1949-50	52030A	Coupling bar		
Distributor ..	1949-50	*409639	Stop tail ..	1949-50	*53031B	(2 and 4-seater) ..	1949	*725151
Generator ..	1949	*228139	Starting motor ..	1949-50	25017A	" " " ..	1950	727293
" " " ..	1950	22449A	SWITCHES			Bearing ..	1950	732583
Horn ..	1949-50	069344	Dipper ..	1949-50	*360007	Arm		
Horn push			Ignition and lighting	1949-50	34055A	(Coupe) ..	1949-50	735099
(Coupe) ..	1949-50	76205B	Panel ..	1949	*314014	L.H.D. (2-seater) ..	1949-50	*735103
(2 and 4-seater) ..	1949-50	76218A	" " " ..	1950	031218	R.H. " " ..	1949-50	*735102
Inspection lamp sockets ..	1950	39507A/B	Starting motor ..	1949	*764251	L.H. (4-seater) ..	1949-50	*735111
Junction box ..	1949	*770017	" " " ..	1950	76428A	R.H. " " ..	1949-50	*735110
" " " ..	1950	78266A	Stop lamp ..	1949-50	*315725	Blade		
LAMPS			Trafficator ..	1949	*310656	(Coupe) ..	1949-50	727784
Fog or pass ..	1949	*55049A	" " " ..	1950	31190A	(2 and 4-seater)	1949	727804
" " " ..	1950	*55063A	Trafficators (Coupe) ..	1949-50	*54018D	" " " ..	1950	727809
			Warning light (ignition) ..	1949-50	*38013B	" " " ..		

MORGAN 'Four-Four' Series II (Ford Engine) 1956-60

Ammeter ..	1956-60	36226A	Flasher relay ..	1956-58	33117D	LAMPS		
Battery ..	1956-58	GLT7A	Fuse box ..	1956-60	033240	Flasher, front (Coupe,		
" " " ..	1959-60	BT7A	Generator ..	1956-60	22258E/H	Export & Special Orders)	1956-58	*52246A
Coil, ignition ..	1956-60	*45053D/K	" " " ..	1956-57	*69012J	ditto	1959-60	52337A
Control box ..	1956-60	37182H	Horn ..	1958-60	69047F	ditto (U.S.A.) ..	1960	52345A
Distributor ..	1956-60	*40402H/N	" " " ..	1956-60	*76211B/D	Flasher, rear	1959-60	52337A
" " " ..		& Q/T	Horn push ..	1956-60	39507A	(U.S.A.) ..	1960	53600B
Flasher unit (Coupe,	1956-57	*35003A	Inspection lamp sockets ..	1956-60	78264A	Fog (L.H.D. and optional		
Export & Special Orders)	1958-60	35010A	Junction box (L.H.D.) ..	1956-57		R.H.D.) ..	1956-60	55128B
ditto ..								

* See Supersession Chart
L.H.D. .. Left hand drive

† No longer available—refer to Wiper Conversion Set Section
R.H.D. .. Right hand drive

L.H. .. Left hand

R.H. .. Right hand

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

MORGAN—MORRIS

MORGAN 'Four-Four' Series II (Ford Engine) 1956-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES			Trafficators (when fitted)		
Head, Home			Dipper	1956-60	31284A/D	Warning lights	1956-60	54044E
R.H.D., dip left ..	1956-60	51336B/J	Flasher (when fitted) ..	1956-60	31476A/B	Ignition	1956-60	38145A
Head, Export			Foglamp (when fitted) ..	1956-57	31248B	Main beam	1956-60	38150A
R.H.D., dip left ..	1956-60	51336B/J	Knob	—	*31637A	Windshield wipers		
L.H.D., dip right ..	1956-60	*51337D/E & F/K	Foglamp (when fitted) ..	1958-60	31434B	Motor	1956-60	75150A/B
			Knob	—	313619	Wheelbox	1956-60	72629A/D
Head, Export Europe (not France) ..	1956-58	51339E	Ignition and lighting ..	1956-60	31270B	Crosshead and rack assy. Cut to 44" ..	1956-60	736307
ditto	1959-60	58230A	Knob	—	316276	Outer casing	1956-60	739868
Head, Export France ..	1956-60	*51590A/H	Panel	1956-57	31248B	Motor to wheelbox ..	1956-60	739956
Number plate illumination	1956-60	53093H	Knob	—	315042	Wheelbox to wheelbox	1956-57	*739979
Side	1956-60	*52182D	Panel	1958-60	*31557A	End tube " " "	1956-60	740031
Stop tail	1956-58	53178F	Knob	—	312955	Arm, left hand drive ..	1956-57	742156
	1959-60	53330D	Solenoid, starting motor	1956-60	*76411E	" right hand drive ..	1956	742157
Starting motor	1956-58	25022F/L	ditto Later	1960	*76445A	" left hand drive and		
"	1959	25022M	Solenoid operating ..	1956-60	31377A	right hand drive ..	1957-60	742295
"	1960	25022N/Q	Trafficator (when fitted)	1956-60	*31306A	Blade	1956-60	737811
			Windshield wiper ..	1956-60	*31557A			
			Knob	—	316393			

MORRIS 8 h.p. 1946-48

Battery	1946-48	SG9E	LAMPS—continued			Windshield wipers		
Coil, ignition	1946-48	*45016A	Stop tail and number plate	1946-48	*53060B	Motor	1946-48	†75065A
Control box	1946	*37033A	Mirror	1946-48	*58057A	Clutch housing	1946-48	735471
"	1947-48	37081H	Starting motor	1946-48	*250405	Bracket, with shaft and coupling	1946-48	734747
Distributor	1946	*406335				Shaft, short	1946-48	737243
" Later	1946-48	*40056D	SWITCHES			Coupling	1946-48	729036/S
Generator	1946-48	22448B	Dipper	1946-48	*360020	Link	1946-48	737285
Horn	1946-48	069343	Ignition and lighting ..	1946-48	*344484	Grommet, scuttle ..	1946-48	729378
			Panel	1946-48	*314146	Arm (Saloon)	1946-48	*735048
LAMPS			Starting motor	1946-48	*764401	Blade (Saloon) ..	1946-48	727802
Head, Home			Stop lamp	1946-48	31281B			
R.H.D., dip left (L.H.)	1946-48	*50089A	Spring	—	*315714			
" non-dip (R.H.)	1946-48	*50088A	Trafficators (Saloon) ..	1946-48	*539322			
Head, Export			Warning light (ignition)	1946-48	*38012B			
Vertical dip	1948	50426A						

MORRIS 10 h.p. 1946-48

Ammeter	1946	*364536	LAMPS, Head, Home—continued			Trafficators	1946-48	*539671
"	1947-48	*364576	R.H.D., non-dip (R.H.)			Warning light (ignition) ..	1946-48	*38013B
Battery	1946-48	SG9A	Later	1946-48	*50453A			
Coil, ignition	1946-48	*45020A	Side	1946-47	*524982	Windshield wipers		
Control box	1946	*37031A	"	1948	*52110A	Motor	1946-48	†75066A
"	1947-48	37057E	Stop tail and number plate	1946-47	*524753	Clutch housing	1946-48	735471
Distributor	1946	*405569	Mirror " " " "	1948	*53060B	Bracket, with shaft and coupling	1946-48	734453
" Later	1946-47	*40058A	Starting motor	1946-48	*620708	Shaft, short	1946-48	737243
"	1948	*40058D		1946-48	*255378	Coupling	1946-48	729036/S
Generator	1946-48	22449A	SWITCHES			Link, primary	1946-48	734457
Horn	1946-48	069344	Dipper	1946-48	31284A	" secondary	1946-48	734455
Junction box	1946-48	78264A	Ignition and lighting ..	1946	*344472	Grommet, housing ..	1946-48	734458
			Panel	1947-48	*34041B	Arm " scuttle ..	1946-48	729378
LAMPS			Stop lamp	1946-48	*314090	Blade	1946-48	727802
Head, Home			Spring	1946-48	*315739			
R.H.D., dip left (L.H.)	1946	*50454A		—	*315714			
" non-dip (R.H.)	1946	*50455A						
" dip left (L.H.)	Later	*50452A						

MORRIS 'Minor' 2-door Saloon and Tourer 1948-56: 4-door Saloon 1951-56: 'Traveller' 1954-56

Battery	1948-56	GT7A	LAMPS			LAMPS, Head, Export—continued		
Coil, ignition	1948-54	*45020A/B	Head, Home			L.H.D., dip right ..	1948-50	A50529B
"	1955-56	*45053A/D	R.H.D., dip left (L.H.)	1948-50	50529B	" " " (2-door) ..	1951	A50529B
Control box	1948-52	37065E	" non-dip (R.H.)	1948-50	*50537B	" " " (4-door) ..	1951	*A50445K
" Later	1952-55	*37138B/D	" dip left (L.H.)			" " " Later	1951-53	*50804D
"	1956	37182A/H	" 2-door	1951	50529B	" " " " "	1953-54	*51338A
Distributor	1948-52	*40056A/J	" non-dip (R.H.)			" " " " "	1954-56	*51337A & D/E
" Later	1952	40251F	" 2-door	1951	*50537B			
"	1953-56	*40299E & L	" dip left (L.H.)			Head, Export Europe (not France) ..	1948-50	B50529B
"	1956	40494A	" 4-door	1951	*50445K	ditto (2-door) ..	1951	B50529B
" (S.V. Engine) ..	1953	40333A	" non-dip (R.H.)			ditto (4-door) ..	1951	*B50445K
Flasher unit (L.H.D.)	1954-56	*35003A	" 4-door	1951	*50446K	ditto .. Later	1951-52	*50963A
Flasher relay (L.H.D.)	1954-56	33117A	R.H.D., dip left (L.H. and R.H.)	Later		ditto	1953	*51340A
Fuse box	1952-56	033239	" " " " "	1952	*50954A	ditto .. Later	1953-56	51339A & B/H
Generator	1948-49	*22250A	" " " " "	1953	*51335A	Head, Export France ..	1950	50822B
" Later	1949-52	*22250E/F	" " " " "	1953-54	51336A	ditto (2-door) ..	1951	50822B
"	1952-55	22258D	" " " " "	1955-56	51336B/J	ditto .. Later	1951-52	*50790E
"	1956	22258E	Head, Export			ditto	1952	*50962A
Horn	1948-56	*069399	R.H.D., dip left ..	1948-50	50529B	ditto	1953-56	*51341A & B/F
Low note (U.S.A. and Canada)	1950-55	*69011F/J	" " " (2-door) ..	1951	50529B	Head, Export U.S.A. and Canada	1948-49	A50529B
ditto	1956	69046A	" " " (4-door) ..	1951	*50445K	ditto	1950-52	*50804M
"			" " " Later	1951-52	*50954A	ditto	1953-56	51343A & B/E
High note (U.S.A. and Canada)	1950-55	*69012F/J	" " " " "	1952	50941A	Number plate illumination	1950-56	53101E/J
ditto	1956	69047A	" " " " "	1953	*51335A	ditto (4-door) ..	1951	53093E
			" " " " "	1955-56	51336B/J	ditto ("Traveller")	1954-56	53093E



Equipment Specification

MORRIS

MORRIS 'Minor' 2-door Saloon and Tourer 1948-56: 4-door Saloon 1951-56: 'Traveller' 1954-56—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued			Windshield wipers		
Side	1950-56	52139B/F	Panel	1948-56	*31140A	Motor	1948-50	*75088L
Side/Flasher (L.H.D.) ..	1953-55	*52162A/B	Starting motor	1948-50	*764401		1951-56	75151A
.. .. .	1956	52240D		1951-56	76423A	Wheelbox	1948-52	72590A/K
Stop tail ('Traveller') ..	1954-56	53178D/F	Coupling	1951-56	764428		1953-56	72642A/E
" " (Export)	1949	*53102D	Stop lamp	1954-56	31082B/E	Crosshead and rack assy.	1948-50	738006
.. .. .	1950	*53102D	Trafficator (2-door) ..	1948-53	31190A	Cut to 31 1/2"	1951-56	738764
Stop tail and number plate	1948-49	*53029A	 (4-door) ..	1951-52	031046	Outer casing		
ditto	1951	53200A	 Later	1952-53	31250A	Motor to wheelbox ..	1948-56	740482
ditto	1952-53	*53197A	Knob	1952-53	*311132	Wheelbox to wheelbox	1951-56	739973
ditto Later	1953-54	53288A	Trafficator	1952-53	31190A	ditto (Export)	1948-50	739973
Stop tail and flasher ..	1955-56	53330A/D	 (2-door, Tourer & 'Traveller')	1955-56	31190A	End tube	1948-56	740031
Mirror	1948-50	*62030A	 (4-door) ..	1956	031296	Arm, left hand (2-door)	1948-54	737445
.. .. .	1951	062556	Windshield wiper ..	1948-54	*31271A	ditto (4-door) ..	1950-54	*737431
.. .. .	1952-56	062592	Knob	—	*315094	ditto ('Traveller')	1955	*737431
Reflex reflector	1954-56	57052A/B	Windshield wiper ..	1955-56	*31515A	ditto (Saloon and Tourer)	1955-56	737445
('Traveller')	1948-55	39015A	Knob	—	316388	Arm, right hand (2-door)	1948-54	737444
Panel light bulb holder ..	1948-56	25022A/F		1951-52	*54017B	ditto (4-door) ..	1950-54	*737430
Starting motor	1951-53	78105A	Trafficators	1952-53	*54040A	ditto	1955	*737430
Suppressor	1954-55	78106A	 Later	1952-53	*54040A	ditto ('Traveller')	1955-56	737444
.. .. .			 (R.H.D.) ..	1954-56	*54049A	ditto (Saloon and Tourer)	1956	742272
SWITCHES			(4-door)	1951-52	*54041A	Blade (2-door)	1948-54	727802
Dipper	1948-56	31284A		1953	54044D	 (4-door) ..	1950-54	727707
Flasher	1954-55	31250A/F	 ('Traveller' and 4-door)	1954-56	54044D	 (Saloon and Tourer)	1955-56	727707
Knob	1956	031296	 (R.H.D.) ..	1948-56	*38013B	 ('Traveller')	1955-56	727802
Flasher	1948-56	31287A	Warning light (ignition) ..					
Ignition	1948-55	31126B						
Lighting	1956	*31251A						
Knob	—	*316117						

MORRIS 'Minor 1000' Series III and 'Traveller' 1957-60

Battery	1957	GT7A	LAMPS—continued	1957-59	51739B	SWITCHES—continued	1957	31633B
Coil, ignition	1958-60	BT7A	Head, Export France ..	1959-60	58271A	Horn push and indicator	1958-59	31756D/F
.. .. .	1957-60	*45053	 Later	1960	58231B	 flasher ..	1958-59	31755D/F
Control box	1957-59	37182H & J	Head, Export Sweden ..	1959-60	58450A	Ignition	1957-60	31287B/F
.. .. .	1960	37183K & L	 Later	1960	58456B	Lighting	1957-60	*31251A/E
Distributor	1957-58	40561B	Head, Export U.S.A. ..	1957-59	51741B	Knob	1957-60	316154
High compression	1958-59	40561D/H & K		1960	*58497A	Panel	1957-60	31140B
.. .. . Later	1960	40561J & L	Number plate illumination	1957-60	53101H/J	Starting motor	1957-60	76423A
.. .. .	1957-58	40569A	ditto (Denmark)	1960	53836A/B	Coupling	—	764428
Low compression	1958-59	40569B/F	ditto ('Traveller', Denmark)	1960	53837A/B	Boot, rubber	—	860556
.. .. . Later	1960	40569J	Side	1957-60	52139E	Stop lamp	1957-60	31082E/J
.. .. .	1960	40569H & K	Side flasher	1957-60	52240B	Trafficator	1960	31924A
Flasher unit (L.H.D.) ..	1957-60	35010A	Left hand drive	1957-60	52338A	Windshield wiper ..	1957-60	*31515A
Flasher relay (L.H.D.) ..	1957-60	33117D	(Switzerland)	1960	53178F/H	Knob	—	312865
Fuse box	1957-60	033239	Stop tail ('Traveller')	1957-60		Trafficators		
Generator	1957-59	22258E/H	Stop tail and reflex	1957-60		Right hand drive	1957-60	*54049E
.. .. .	1960	22700D	Left hand	1957-60	53577A	(2-door and Tourer)	1957-60	54044E
.. .. . (temporary alternative)	1960	*22704A	Right hand	1957-60	53576A	(4-door and 'Traveller')		
Horn			Stop tail and flasher	1957-60		Warning lights (bulb holders)		
Low note	1957-60	69046E/F	Left hand (L.H.D.) ..	1957-60	53577A	Ignition and oil pressure	1959-60	863511
High note (N. America and optional) ..	1957-60	69047E/F	Right hand (L.H.D.) ..	1957-60	53576A	Main beam	1959-60	554734
LAMPS			Reflex reflector	1957-58	70522B	Bulb	—	987
Head, Home	1957-60	51736B/D	(Traveller')	1959-60	57124A	Windshield wipers		
R.H.D., dip left	1960	51336B/J	 (Switzerland) ..	1960	57098A	Motor	1957	75213A
.. .. . Later			Mirror	1957	062592		1958-59	75295B/D
Head, Export	1957-60	51736B/D	Sleeve, Lucas connector	1958-59	062636A/B	 Later	1959-60	75295E
R.H.D., dip left	1960	51736J	14 amp.	1960	54190042	Wheelbox	1957-60	72693A/B
.. .. . Later			35 amp.	1960	54190043	Crosshead and rack assy.	1957-60	743251
L.H.D., dip right	1957-60	51737B	Starting motor	1957-59	25022A/L & M	Outer casing		
.. .. . Later	1960	*51337F/K		1960	25022N/Q	Motor to wheelbox ..	1957-60	744546
Head, Export Europe (except France & Sweden) ..	1957-59	51738B/D	Suppressor (when fitted)	1958-60	78106A	Wheelbox to wheelbox	1957-60	744547
.. .. . Later	1959-60	58270A	SWITCHES			End tube	1957-60	740746
ditto	1960	58230A/E	Dipper	1957-60	31284A/D	Ferrule, casing retaining	1957-60	740715
			Flasher	1959	31760A	Grommet, wheelbox ..	1957-60	740811
			(N. America)	1959	31883A	Arm, left hand	1957-60	745075
			Other left hand drive destinations	1959-60	31883A	 right hand ..	1957-60	745084
						Blade	1957-60	738734

MORRIS 'Mini-minor' 850 1959-60: Quarter Ton 'Minivan' 1960

Battery	1959-60	GLT7A	Horn	1959-60	70141B	LAMPS—continued		
.. .. . Later	1960	BLT7A	LAMPS			Side and flasher (Export)	1959-60	52338A/D
.. .. . (cold climates) ..	1959	BT7A	Flasher, front (Home) ..	1959-60	52337A	Stop tail and flasher		
.. .. . (Van)	1960	GLT9A	Head, Home	1959-60	58388A/E	Left hand	1959-60	53797B
Bulb holder, panel light and parcel shelf	1959-60	554734	R.H.D., dip left	1959-60		Right hand	1959-60	53798B
Bulb	—	987	Head, Export	1959-60	51336B/J	Left hand (N. America)	1959-60	53799B
Coil, ignition	1959-60	*45113D	R.H.D., dip left	1959-60		Right hand	1959-60	53800B
Control box	1959	37290A/B	L.H.D., dip right	1959-60	*51337F/K	(Van)	1960	53833A
.. .. .	1960	37290D	Head, Export Europe (except France & Sweden) ..	1959-60	58230A/E	(Van, U.S.A.)	1960	53846A
Distributor	1959-60	40648A/D & F	Head, Export France ..	1959-60	58231A/E	Sleeve, Lucas connector		
.. .. . Later	1960	40648E & H	Head, Export Sweden ..	1959-60	58456B	14 amp.	1959-60	54190042
.. .. . (low grade fuel, special orders) ..	1959-60	40707A/D	Head, Export U.S.A. ..	1959-60	*58497B	25 amp.	1959-60	54190043
Flasher unit	1959-60	35020A	Number plate illumination	1959-60	53101H/J	14 amp. twin	1959-60	54190119
Fuse box	1959-60	033283	ditto Later	1960	53837A/B	Starting motor	1959	*25071A/B
Generator	1959-60	22700D	ditto (De Luxe)	1959-60	53093H/J		1960	25075A
.. .. . (temporary alternative)	1959-60	*22704A	ditto Later	1960	53836A/B	 (alternative)	1960	*25071A/B

* See Suppression Chart L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)

continued



MORRIS 'Mini-minor' 850 1959-60: Quarter Ton 'Minivan' 1960—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers—cont'd		
Dipper	1959-60	31800A	Windshield wiper ..	1959-60	31780B	Outer casing ..	1959-60	54711059
Flasher	1959-60	31945B				Motor to wheelbox ..	1959-60	54711060
Heater	1959-60	78339A				Wheelbox to wheelbox ..	1959-60	740746
" Later	1960	78384A	Windshield wipers			End tube	1959-60	54711556
Knob	—	54331278	Motor	1959	75315D	Arm, left hand drive ..	1959-60	54712031
Ignition	1959-60	31899A	"	1960	75385A	ditto Later	1960	54711555
Lighting	1959-60	31788B	" Later	1960	75385B	Arm, right hand drive ..	1959-60	54712030
Starting motor ..	1959-60	76438B	Wheelbox	1959-60	72728A	ditto Later	1960	738734
Stop lamp	1959-60	31802D	Crosshead and rack assy.	1959-60	743209	Blade	1959-60	54711613
						" Later	1960	

MORRIS 'Cowley' Van and Pick-up Truck 1950-53

Ammeter	1950-52	*36072D	LAMPS, Head, Export—			Starting motor	1950-53	25021A/F
" Later	1952-53	36149A	<i>continued</i>			Suppressor	1950-53	78105A
Battery	1950-53	GT9A	R.H.D., dip left ..	1950-51	*50445K	SWITCHES		
Coil, ignition ..	1951-53	*45020A/B	" Later	1951-52	*50954A	Dipper	1950-53	31284A
Control box	1950-52	37065E	"	1952	50941A	Ignition	1950-53	31287A
" Later	1952-53	*37138D	"	1953	*51335A	Lighting	1950-53	31126B
Distributor	1950	40152B	" Later	1953	51336A	Knob	—	*316117
"	1951-53	*40237A/B	L.H.D., dip right, pilot			Panel	1950-53	*31271A
Fuse box	1950-52	*385211	type	1950-51	*A50793B	Knob	—	315062
" Later	1952-53	033239	L.H.D., dip right ..	1950-51	*A50445K	Panel Later	1953	*78292A
Generator	1950-52	*22250E/F	" Later	1951-52	*50804D	Knob	—	*768890
" Later	1952-53	22258D	"	1953	*51338A	Starting motor	1950-53	76423A
Horn	1950-52	*069399	" Later	1953	*51337A	Coupling	—	764428
LAMPS			Head, Export Europe			Windshield wiper ..	1950-53	*31199A
Head, Home			(not France), pilot type	1950-51	*B50793B	Trafficators	1950	*54036A
R.H.D., dip left, pilot			Head, Export Europe			Warning lights		
type (L.H.)	1950-51	*50793B	(not France)	1950-51	*B50445K	Ignition	1950-53	*38013B
R.H.D., non-dip, pilot			ditto Later	1951-52	*50963A	Main beam	1950-53	*38087A
type (R.H.)	1950-51	*50362F	ditto	1953	*51340A	Windshield wipers		
R.H.D., dip left (L.H.)	1950-51	*50445K	ditto Later	1953	51339A	Motor	1950	*75084K
non-dip (R.H.) ..	1950-51	*50446K	Head, Export France, pilot			"	1951	*75084L
R.H.D., dip left			type	1950-51	50679E	"	1952-53	75143A
(L.H. and R.H.)	1951-52	*50954A	Head, Export France ..	1950-51	*50790E	Wheelbox	1950-52	72590A/K
" Later	1952	50941A	" Later	1951-52	*50962A	" Later	1952-53	72629A/D
"	1953	*51335A	"	1953	*51341A	Crosshead and rack assy.		
" Later	1953	51336A	"	1953	51342A	Cut to 39"	1950-53	736307
Head, Export			Head, Export U.S.A. ..	1953	51343A	Outer casing		
R.H.D., dip left, pilot			Number plate illumination	1950-53	53101E	Motor to wheelbox ..	1950-53	740482
type	1950-51	*50793B	Roof	1950-53	56022D	Wheelbox to wheelbox	1950-53	739972
			Side	1950-53	52139B	End tube	1950-53	740031
			Stop tail	1950-53	53178D	Arm, left hand	1950-53	737496
			Panel light bulb holder	1950-53	39015A	" right hand	1950-53	737495
						Blade	1950-53	727803

MORRIS 'Cowley' Saloon 1955-59

Ammeter	1955-56	36182B	LAMPS—continued			SWITCHES—continued		
"	1957-59	36234A	Head, Export Europe			Heater or blower		
Battery	1955-56	GT9A	(not France)	1955	51339A	(optional)	1956	31126B
"	1957	GT7A	ditto	1956	51339B/H	Knob	—	316162
"	1958	BT7A	ditto	1957-59	51738B/D	Ignition	1955-56	31497A
"	1959	GT9A-3	Head, Export France ..	1955	*51341A	Ignition and lighting	1957-59	31655A
Coil, ignition ..	1955-59	*45053A/L	"	1956	*51341B/E	Knob	—	316449
Control box	1955	*37138D	"	1957-59	51739B	Lighting	1955-56	31126B
"	1956-59	37182A/H	Head, Export U.S.A. ..	1955	51343A	Knob	—	316144
" Later	1959	37182J	"	1956	51343B/E	Panel	1955-59	78311A
Distributor	1955-56	*40452B/E	"	1957-59	51741B	Knob	1955-56	768930
"	1957-58	40499A	Head, Export Canada ..	1957-58	51987A/B	"	1955-59	768945
" Later	1958-59	40499B/D	Number plate illumination	1955-59	53093E/H	Starting motor	1955-59	76423A
Flasher unit (L.H.D.)	1955-56	*35003A	Side	1955-59	52215A/D	Coupling	—	764428
"	1957-59	35010A	Side flasher (L.H.D.)	1955-59	52216A/D	Boot, rubber	1955-59	860556
Fuse box	1955-52	033239	Stop tail (R.H.D.) (L.H.)	1955-56	53310D	Stop lamp	1955-59	31082D/H
Generator	1955-56	22258D	" (R.H.)	1955-56	53311D	Trafficators (R.H.D.)	1955-59	54044D/E
" Later	1956-59	22258E/F	"	1957	*53589A	Warning light (side lamp,		
Horn	1955-56	*069399	"	1957	*53589B	bulb holder)	1956	39007A
"	1957-59	69046E/F	" Later	1957-59	*53589E/F	Bulb	—	987
Low note (U.S.A. and			Stop tail and flasher			Windshield wipers		
Canada)	1955	*69011J	L.H.D. (left hand) ..	1955-56	53313D	Motor	1955	*75238A
ditto	1956-59	69046A/F	" (right hand)	1955-56	53312D	"	1956-57	75295A
High note (U.S.A. and			U.S.A.	1957	53590A	"	1958-59	75212D/E
Canada)	1955	*69012J	" Later	1957	53590B	Wheelbox	1955-56	72666A
ditto	1956-59	69047A/F	"	1959	53590H	" Later	1956-59	72680A/B
Horn relay (U.S.A. and			Other models	1957	53588A	Crosshead and rack assy.	1955-56	*743232
Canada)	1955-59	*33116B	"	1957	53588B	Cut to 44"	1957-59	743235
LAMPS			"	1957-59	53588E/F	Outer casing		
Head, Home			Mirror	1955	*062605	Motor to wheelbox ..	1955-59	745150
R.H.D., dip left ..	1955	51336A	"	1956-59	062612	Wheelbox to wheelbox	1955-59	745151
"	1956	51336B/J	Starting motor	1955-57	25022F/L	End tube	1955-59	740746
"	1957-59	51736B/D	Suppressor	1958-59	25022M	Ferrule, casing retaining	1955-59	740715
Head, Export			"	1955	78113A	Arm, left hand	1955	741838
R.H.D., dip left ..	1955	51336A	"	1956-59	78106A	" right hand	1956-59	743524
"	1956	51336B/J	SWITCHES			"	1955	741839
"	1957-59	51736B/D	Dipper	1955-59	31284A/D	Blade	1956-59	743523
L.H.D., dip right ..	1955	*51337B	Heater or blower			"	1955-56	*738735
"	1956	*51337D/E	(optional)	1955	31474A	"	1957-59	737897
"	1957-59	51737B	Knob	—	318378			



Equipment Specification

MORRIS

MORRIS 'Oxford' Saloon Series I-III 1948-59: 'Traveller' Series I-IV 1953-60: 'Hindustan' Series I-III 1955-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1950-51	*36072D	LAMPS—continued			SWITCHES—continued		
" Later	1952-54	36149A	Head, Export Europe			Dipper	1948-60	31284A/D
Battery	1954-56	36182B	(not France)	1951	*B50445K	Heater or fan	1948-54	78206A
"	1957-60	36234A	ditto Later	1951-53	*50963A	Knob	—	768378
"	1948-57	GT9A	ditto	1953	*51340A	Heater or fan Later	1954-55	31474A
"	1958-59	GT9A-3	ditto	1953-56	51339A & B/H	Knob	—	318378
"	1960	BT9A	ditto	1957-59	58008B	Heater or fan	1956	31126B
Bulb holder, panel light ..	1950-54	39015A	(except France & Sweden)			Knob	—	316162
ditto ('Traveller') ..	1955	39015A	Later	1959-60	58268A	Ignition	1948-54	31287A
Bulb holder, warning light	1956	39007A	type	1948-51	50679E	" Later	1954	31187D
Bulb	—	987	Head, Export France ..	1951	*50790E	" and lighting	1955-56	31497A
Coil, ignition	1948-54	*45020A	Head, Export France ..	1951-52	*50962A	Knob	1957-60	31655A/E
"	1955-60	*45053	" Later	1953	*51341A	Lighting	—	316449
Control box	1948-52	37065E	" Later	1953-54	51342A	Knob	1948-56	31126B
" Later	1952-55	*37138A/D	"	1955-56	*51341A & B/E	Panel	1948-54	*316117
"	1956-59	37182A/H	"	1957-59	58009B	"	1955-56	316144
" ('Hindustan')	1960	37183K & L	Head, Export Sweden ..	1959-60	58269A	"	1948	31140A
Distributor	1960	37182J & K	Head, Export U.S.A. ..	1959-60	58008B/D	Knob	1949-51	*31217A
"	1948-49	40152A	"	1959-60	58008B/D	Panel	1948-51	315062
"	1950	40152B	"	1949-52	*50804D	Knob	1952-54	*78292A
"	1951-53	*40237A/B	"	1953-56	51343A & B/E	Panel	—	*768890
" Later	1953-54	40358A/B & D/H	"	1957-60	58011B	Panel Later	1954-59	78311A
"	1954-56	*40427D & F	(indirect)	1959-60	58010B	Knob	1960	78346A
"	1956	40499A	Number plate (Export) ..	1948-49	53101E	" Later	1954-56	768930
High compression ..	1957-58	40570A	"	1950-51	53093E	Panel ('Traveller') ..	1957-60	768945
" Later	1959-60	40570B/D & F	" ('Oxford') ..	1952-54	53101E	Knob	1955	*78292A
Low compression ..	1960	40570E & H	" Later	1954-59	53093H	Starting motor	1948-49	76428A
" Later	1957-60	40499A/D & F	" ('Hindustan')	1955-60	53093H/J	" Later	1949-50	*764401
"	1960	40499E & H	" ('Traveller')	1955-57	53101H	"	1951-60	76423A
Flasher unit (L.H.D. and optional)	1954-56	*35003A	Side (U.S.A.)	1958-60	53630A	Coupling	1951-60	764428
ditto	1957-60	35010A	"	1948-50	*52142D	Boot, rubber	1955-60	860556
Fuse box	1948-52	*37107A	" Later	1951-54	52139B	Stop lamp	1954-60	31082B/J
Generator	1952-60	033239	Side and flasher (L.H.D. and optional R.H.D.) ..	1954-60	52215A/D	Windshield wiper ..	1948-54	*31179A
" Later	1948-49	*22250A	Stop tail ('Traveller') ..	1955-60	52216A/D	Knob	1954-56	315075
"	1949-52	*22250E/F	Stop tail and number plate	1953-56	53178D/F	Windshield wiper ..	1954-56	31248B
"	1952-56	22258D	Stop tail (Export) ..	1948-49	*53060A	Knob	1957-60	31515A
"	1956-59	22258E/H	"	1950	*53102A	Trafficators	1948-49	*54013B
"	1960	22700D	"	1951	53200A	"	1950	*54036A
" (temporary alternative)	1960	*22704A	"	1952-53	*53197A	"	1951-52	*54041A
" ('Hindustan')	1960	22258E/H	" Later	1953-54	53288A	" (R.H.D.) ..	1952-53	54044A/D
Horn	1948-49	*069344	Stop tail and reflex R.H.D. ..			Warning lights	1954-60	54044D/E
Low note	1950-55	*69011F/J	Left hand	1955-56	53310B	Ignition	1948-54	*38013B
High note	1956-60	69046A/F	Right hand	1955-56	53311B	Main beam	1951-54	*38087A
"	1950-55	*69012F/J	When trafficators fitted	1957	53589B	Windshield wipers		
"	1956-60	69047A/F	Stop tail and flasher ..	1958-60	53589E/F	Motor	1948-50	*75084K
LAMPS			"	1957	53588A	"	1951	*75084L
Boot	1948-49	56035E	Stop tail, flasher and reflex L.H.D. ..	1958-60	53588E/F	" Later	1951-54	75143A
Head, Home			Left hand	1955-56	53312B	"	1954	*75247A
R.H.D., dip left, pilot type (L.H.)	1948-51	*50793B	Right hand	1955-56	53313B	"	1954-55	*75238A
R.H.D., non-dip, pilot type (R.H.)	1948-51	*50362F	Except U.S.A.	1957	53588B	"	1956-57	75295A
R.H.D., dip left (L.H.) ..	1951	*50445K	U.S.A.	1958-60	53588E/F	" Later	1958-59	75212D/E
non-dip (R.H.)	1951	*50446K	"	1957	53590B	Wheelbox	1959-60	75212F
R.H.D., dip left (L.H. and R.H.) Later	1951-52	*50954A	"	1958-59	53590E/F	"	1948-52	72590A/K
"	1952	50941A	"	1960	53590H	" Later	1953-54	72629A/D
"	1953	*51335A	Mirror	1948-51	*62031A	"	1954-56	72666A
" Later	1953-56	51336A & B/J	"	1952-54	062596	Crosshead and rack assy. Cut to 39 $\frac{1}{2}$..	1956-60	72680A/D
"	1957-58	58006B	"	1955	*062605	"	1948-54	736307
"	1959-60	58006D/E	Reflector, rear (Home) ..	1956-60	062612	Crosshead and rack assy. ditto Cut to 44 $\frac{1}{2}$..	1954-56	*743232
Head, Export			Reflex reflector	1948-49	65423A	"	1957-60	743235
R.H.D., dip left, pilot type	1948-51	*50793B	('Traveller')	1955-56	57052A/B	Outer casing		
R.H.D., dip left	1951	*50445K	Relay, flasher ('Traveller', U.S.A.)	1955	33117A	Motor to wheelbox ..	1948-54	740482
" Later	1951-52	*50954A	Relay, horn			"	1954-60	745150
"	1952	50941A	(Series I)	1950-54	33095A	Wheelbox to wheelbox ..	1948-54	739972
"	1953	*51335A	(Series II-IV)	1954-60	*33116B	ditto Later	1954-60	745151
" Later	1953-56	51336A & B/J	Starting motor	1948	*25015A/D	End tube	1948-54	740031
"	1957-58	58006B	"	1949-54	25021A/H	"	1954-60	740746
"	1959-60	58006D/E	" Later	1954-57	25022F/L	Ferrule, casing retaining	1948-54	*737526
L.H.D., dip right, pilot type	1948-51	*A50793B	"	1958-59	25022M	"	1954-55	740715
L.H.D., dip right	1951	A50445K	"	1960	25022N/Q	" Later	1956-59	741838
" Later	1951-53	*50804D	Suppressor ('Traveller')	1955	25021F	"	1960	54711571
"	1953-54	*51338A	"	1951-54	78105A	" right hand ..	1948-54	*737525
"	1954-56	*51337A/B & D/E	"	1955	78113A	"	1954-55	741839
"	1957-60	58007A/E	SWITCHES	1956-60	78106A	"	1956-59	743524
Head, Export Europe (not France), pilot type	1948-51	*B50793B	Boot lamp	1948-49	*31180A	Blade	1960	54711572
						" Later	1948-54	727759
							1954-56	*738735
							1957-60	737897

MORRIS 'Oxford' Saloon Series V 1959-60

Battery	1959-60	BT9A	Flasher unit	1959-60	35020A	LAMPS		
Bulb holder, panel light ..	1959-60	554734	Fuse box	1959-60	033285	Head, Home		
Bulb	1959	987	Generator	1959	*22297A	R.H.D., dip left	1959-60	58251A/F
Coil, ignition	1959	*45103D	" (temporary alternative)	1960	22700D	Head, Export		
Control box	1960	*45113D	"			R.H.D., dip left	1959-60	58251A/F
Distributor	1959	37283A	Horn			L.H.D., dip right	1959-60	58252A/F
"	1960	37290D/E	Low note	1959-60	69046F	Head, Export Europe (except France & Sweden)	1959-60	58253A/E
High compression	1959-60	40643A/D & F	High note (De Luxe and optional)	1959-60	69047F	Head, Export France ..	1959-60	58254A/E
Low compression	1960	40624A/D & F						
"	1960	40624E & H						

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



MORRIS 'Oxford' Saloon Series V 1959-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS—continued			SWITCHES—continued			Windshield wipers—cont'd		
Head, Export Sweden ..	1959	58315A/E	Ignition and starting ..	1959	31781D	Ferrule, casing retaining	1959-60	740715
" " " " Later	1959	58446A/D	" " " " ..	1960	31973B	Grommet, wheelbox ..	1959-60	740811
" " " " ..	1960	*58545B	Lighting ..	1959-60	31837A/D	Arm, left hand drive ..	1959	744134
Head, Export U.S.A. ..	1959	58255A/B	Panel ..	1959-60	31828A	" " " " ..	1960	54711539
" " " " ..	1960	*58488A/D	Reverse lamp (optional)	1959-60	31849A	" " right hand drive ..	1959	744133
Number plate illumination	1959-60	53763A	Solenoid, starting motor	1959-60	*76465A	" " " " ..	1960	54711538
ditto .. Later	1960	53814A	ditto .. Later	1960	76464A	Blade ..	1959	*737907
Side and flasher			ditto (automatic			" " " " ..	1960	54711283
L.H. ..	1959-60	52422B/F	transmission)	1959	*76466A			
R.H. ..	1959-60	52427B/F	Stop lamp ..	1959-60	31882A	Windshield wipers (later)		
L.H. (N. America) ..	1959-60	52423B/F	Windshield wiper ..	1959-60	31836A/B	(from Chassis No.38193)		
R.H. ..	1959-60	52428B/F	Warning lights			Motor (L.H.D.) ..	1960	75357A
Stop tail, flasher and reflex	1959-60	53750A/B	Ignition, bulb holder ..	1959-60	863511	" (R.H.D.) ..	1960	75358A
ditto (N. America)	1959-60	53751A/B	Main beam, bulb holder	1959-60	554734	Wheelbox ..		
Relay, horn ..	1959-60	33188A	Bulb ..	—	987	Driver side ..	1960	72707A
Sleeve, Lucas connector			Windshield wipers			Passenger side ..	1960	72713B
14 amp. ..	1959-60	54190042	Motor, left hand drive	1959-60	75358A	Crosshead and rack assy.	1960	744254
35 amp. ..	1959-60	54190043	" " right hand drive	1959-60	75357A	Outer casing		
Starting motor ..	1959	25022M	Wheelbox ..			Motor to wheelbox	1960	54710207
" " " " ..	1960	25022N/Q	Driver side ..	1959-60	72713A/B	Wheelbox to wheelbox	1960	54710208
			Passenger side ..	1959-60	72707A	End tube ..	1960	740746
SWITCHES			Crosshead and rack assy.	1959-60	744254	Ferrule, casing retaining	1960	740715
Dipper ..	1959-60	31800A	Outer casing			Grommet, wheelbox	1960	740811
Flasher ..	1959-60	31885A	Motor to wheelbox ..	1959-60	54710207	Arm, L.H.D. ..	1960	54711538
Heater ..	1959-60	31828A	Wheelbox to wheelbox	1959-60	54710208	" " R.H.D. ..	1960	54711539
			End tube ..	1959-60	740746	Blade ..	1960	54711283

MORRIS 'Oxford' Taxi and Hire Car 1947-51

Ammeter ..	1947-50	*364428	LAMPS			SWITCHES—continued		
" " " " ..	1951	36047D	'For Hire' sign ..	1947-51	*52115A	Panel ..	1947-51	31201B
Battery ..	1947-51	SG13E	Head, Home			Knob ..	—	314026
Coil, ignition ..	1947-51	*45020A	Dip left (L.H.) ..	1947-50	*50460D	Reverse lamp ..	1949-51	*31077A
Control arm ..	1947-51	*31090A	Non-dip (R.H.) ..	1947-50	*50461D	Solenoid, starting motor	1947-50	76022B
Control box ..	1947-48	*37032A/B	Dip left (L.H.) ..	1951	*50914B	Solenoid operating ..	1947-50	*31071A
" " " " ..	1949-50	37065E	Non-dip (R.H.) ..	1951	*50915B	Starting motor ..	1951	76427A
" " " " ..	1951	*37076E	Number plate illumination	1947-49	*53064A	Stop lamp ..	1947-51	31281B
" " " " " " Later	1951	*37139D	" " " " ..	1950	*53111A	Spring ..	—	*315714
Distributor ..	1947-49	40064A/F	" " " " ..	1951	53101E	Trafficators	1947-51	*54039A
" " " " ..	1950-51	40142A/F	Reverse ..	1951	53210F/H	Warning light (ignition) ..	1947-51	*38013B
Fuse box ..	1947-49	*385019	Side ..	1947-49	*52113A	Windshield wipers		
" " " " ..	1950	*385221	" " " " ..	1950	52121A	Motor ..	1947-50	*75074H
" " " " ..	1951	033239	" " " " ..	1951	52154A	" " " " ..	1951	*75074J
Generator ..	1947-50	*22446A	Stop tail ..	1951	53178D	Wheelbox (with switch)	1947-51	72583A/F
" " " " ..	1951	*22435A/B	Mirror ..	1947-51	*620128	" " (less switch)	1947-51	72584A/D
" " " " " " Later	1951	*22456A/B	Starting motor ..	1947-50	*255378	Crosshead and rack assy.		
Horn ..	1947-49	*69008B	Suppressor ..	1951	25533A/B	Cut to 22 1/2" ..	1947-51	736177
" " " " ..	1950-51	*69040A		1951	78113A	Outer casing		
Inspection lamp sockets ..	1947-51	39507A	SWITCHES			Motor to wheelbox ..	1947-51	739833
Junction box ..	1947-51	78266A	Battery master ..	1947-51	76605B	Wheelbox to wheelbox	1947-51	739937
" " " " ..	1950-51	78264A	Ignition and lighting ..	1947-51	*34018B	End tube ..	1947-51	740031
						Arm ..	1947-51	735064
						Blade ..	1947-51	727803

MORRIS 'Six' Saloon 1948-54

Ammeter ..	1948-51	*36072D	LAMPS, Head, Export—			LAMPS—continued		
" " " " ..	1952-54	36149A	continued			Stop tail ..	1952-53	*53197A
Battery ..	1948-54	GT9A	R.H.D., dip left	1951	*50445K	" " " " " " Later	1953-54	53288A
Coil, ignition ..	1948-53	*45039A	" " " " " " Later	1951-52	*50954A	" " " " " " ..	1948-50	*62031A
" " " " ..	1954	*45012D	" " " " " " ..	1952	50941A	Mirror ..	1951-52	062552
Control box ..	1948-52	*37076E	" " " " " " " " Later	1953	*51335A	" " " " " " ..	1951-52	39015A
" " " " " " Later	1952-54	*37139D	L.H.D., dip right, pilot	1953-54	51336A	Panel light bulb holder ..	1950-54	39015A
Distributor ..	1948-49	40157B/D	type ..	1948-51	*A50793B	Starting motor ..	1948-54	25518A/E
" " " " ..	1950-54	40181A	L.H.D., dip right	1951	*A50445K	Suppressor ..	1951-54	78105A
Flasher relay (U.S.A.) ..	1948-52	33095A	" " " " " " Later	1951-53	*50804D	" " (sparking plug)	1951-54	78113A
Fuse box ..	1948-52	*37107A	" " " " " " ..	1953-54	*51338A			
" " " " " " Later	1952-54	033239	Head, Export Europe			SWITCHES		
Generator ..	1948-49	22434D	(not France), pilot type	1948-51	*B50793B	Boot lamp ..	1948-49	*31180A
" " " " ..	1950-53	*22435A/B	Head, Export Europe			Dipper ..	1948-54	31284A
" " " " " " Later	1953-54	*22456A/B	(not France)	1951	*B50445K	Heater or fan ..	1948-53	78206A
Horn ..	1947-49	*69008B	ditto ..	1951	*50963A	Knob ..	—	768378
Low note ..	1948-54	*69011F	ditto ..	1951-52	*51340A	Heater or fan ..	1954	31248A
High note ..	1948-54	*69012F	ditto ..	1953-54	51339A	Knob ..	—	*316490
LAMPS			Head, Export France, pilot			Ignition ..	1948-54	31287A
Boot ..	1949	56035E	type ..	1948-51	50679E	Lighting ..	1948-54	31126B
Head, Home			Head, Export France ..	1951	*50790E	Knob ..	—	*316117
R.H.D., dip left, pilot	1948-51	*50793B	" " " " " " Later	1951-52	*50962A	Panel ..	1948-52	*31217A
type (L.H.) ..			" " " " " " ..	1953	*51341A	Knob ..	—	315062
R.H.D., non-dip, pilot			" " " " " " " " Later	1953-54	51342A	Panel ..	1953-54	*78292A
type (R.H.) ..	1948-51	*50362F	Head, Export U.S.A. ..	1948-52	*50804D	Knob ..	—	*768890
R.H.D., dip left (L.H.)	1951	*50445K	" " " " " " ..	1953-54	51343A	Starting motor ..	1948-50	*764401
non-dip (R.H.)	1951	*50446K	Number plate illumination	1948-50	53093E	" " " " " " ..	1951-54	76423A
R.H.D., dip left			" " " " " " ..	1951-52	53101E	Coupling ..	1951-54	764428
(L.H. and R.H.) Later	1951-52	*50954A	" " " " " " ..	1953-54	53093E	Stop lamp ..	1954	31082B
" " " " " " ..	1952	50941A	Side ..	1951-54	52139B	Windshield wiper	1948-54	*31199A
" " " " " " ..	1953	*51335A	" (U.S.A.) ..	1948-52	*52142D	Knob ..	—	315075
" " " " " " Later	1953-54	51336A	Stop tail ..	1948-49	*53151A	Trafficators	1948-49	*54013B
Head, Export			" " " " " " ..	1950	*53102B	" " " " " " ..	1950	*54036A
R.H.D., dip left, pilot	1948-51	*50793B	" " " " " " ..	1951	53200A	" " " " " " ..	1951-52	*54041A
type ..						" " " " " " " " Later	1952-54	54044D



Equipment Specification

MORRIS

MORRIS 'Six' Saloon 1948-54—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Warning lights			Windshield wipers— <i>cont'd</i>			Windshield wipers— <i>cont'd</i>		
Ignition	1948-54	*38013B	Motor	1951	*75084L	Outer casing		
Main beam	1951-54	*38087A	"	1952-54	75143A	Motor to wheelbox ..	1948-54	740482
Windshield wipers			Wheelbox	1948-52	72590A/K	Wheelbox to wheelbox	1948-54	739972
Motor	1948-50	*75084K	"	1953-54	72629A/D	End tube	1948-54	740031
			Crosshead and rack assy.			Arm, left hand	1948-54	*737526
			Cut to 36 $\frac{1}{8}$ "	1948-54	736307	" right hand	1948-54	*737525
						Blade	1948-54	727759

MORRIS 'Isis' Saloon 1956-57: Series II 1958: 'Isis Traveller' 1956-57

Ammeter	1956	36182B	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
"	1957-58	36234A	Side and flasher (L.H.D. and optional R.H.D.) ..	1956-58	52216B	Starting motor	1956-58	76423A
Battery	1956-57	GT9A	Stop tail ('Traveller') ..	1956-57	53178F	Coupling	—	764428
"	1958	GT9A-3	Stop tail and reflex			Boot, rubber	—	860556
Coil, ignition	1956-58	*45054D/J	Saloon (when trafficators fitted)			Stop lamp	1956-58	31082E
Control box	1956-58	37183A/H	Left hand	1956	53310D	Windshield wiper ..	1956	31248B
Distributor	1956-57	40442D	Right hand	1956	53311D	Knob	—	316393
Premium Petrol	1958	40580A/B	Saloon (when trafficators fitted)			Windshield wiper ..	1957-58	*31515A
Export, low grade Petrol	1956-58	40470A	ditto	1957	53589B	Knob	—	312865
Flasher unit (L.H.D. and optional R.H.D.) ..	1956	*35003A	Stop tail, flasher and reflex			Trafficators (R.H.D.) ..	1956-58	54044D/E
ditto	1957-58	35010A	Saloon (L.H.D. and optional R.H.D.) ..			Windshield wipers		
Flasher relay ('Traveller')	1956-57	33117D	Left hand	1956	53312D	Motor	1956-57	75295A
Fuse box	1956-58	033239	Right hand	1956	53313D	"	1958	75212D
Generator	1956	*22483A	Except U.S.A.	1957	53588B	Wheelbox	1956	72666A
"	1957-58	*22483B/D	U.S.A.	1958	53588E	" Later	1956-58	72680A/B
Horn			"	1957	53590B	Crosshead and rack assy.	1956	*743232
Low note	1956-58	69046A/F	Mirror	1958	53590E	Cut to 44 $\frac{3}{8}$ "	1957-58	743235
High note	1956-58	69047A/F	Reflex reflector			Outer casing		
Horn relay	1956-58	*33116B	('Traveller')	1956-57	57052B	Motor to wheelbox ..	1956-58	745150
LAMPS			Starting motor	1956-58	25521D	Wheelbox to wheelbox	1956-58	745151
Head, Home			Suppressor	1956-58	78106A	End tube	1956-58	740746
R.H.D., dip left ..	1956	51336B/J	SWITCHES			Ferrule, casing retaining	1956-58	740715
"	1957-58	51736B/D	Dipper	1956-58	31284A	Arm, left hand	1956-58	743524
Head, Export			Heater or fan	1956	31126B	" right hand	1956-58	743523
R.H.D., dip left ..	1956	51336B/J	Knob	1956	316162	Blade	1956	*738735
"	1957-58	51736B/D	Ignition	1956	31497A	"	1957-58	737897
L.H.D., dip right ..	1957-58	51737B	Ignition and lighting ..	1957-58	31655A	Borg Warner automatic transmission (optional)		
Head, Export Europe (not France)	1956	51339B/H	Lighting	1956	31126B	Gear indicator quadrant		
ditto	1957-58	51738B	Knob	1956	316144	Left hand drive	1957-58	56069A
Head, Export France	1956	*51341B/E	Panel rheostat	1956-58	78311A	Right hand drive	1957-58	56068A
"	1957-58	51739B	Knob	1956	768930	Switch		
Head, Export U.S.A. ..	1957-58	*51741B	Solenoid, starting motor (automatic transmission)	1957-58	768945	Cutout	1957-58	*31077E
Head, Export N. America (except U.S.A.)	1957-58	51987A/B	Solenoid operating (automatic transmission)			Borg Warner overdrive equipment (optional)		
Number plate illumination			ditto	1957	*31446B	Relay	1957-58	33177A
Saloon	1956-58	53093H	Knob	1958	*31247D	Switches		
'Traveller'	1956-57	53101H		1957-58	313668	Kick-down	1957-58	31632A/B
Side (when trafficators fitted)	1956-58	52215B				Centrifugal	1957-58	76112A/D

MORRIS 5 cwt. Van 1946-53

Ammeter	1946	*364647	LAMPS			SWITCHES		
"	1947	*364510	Dash	1951-53	A56029B	Dipper	1946-53	*360020
"	1948-53	36047D	Head, Home			Ignition and lighting ..	1946-53	*344694
Battery	1946-53	BNW9F	R.H.D., vertical dip ..	1946-47	*50370A	ditto (Export)	1948-53	*34018A
Bulb holder, panel light ..	1950-53	39007A	" dip left (L.H.) ..	1948-49	*50632D	Starting motor	1946-50	*764401
"	1950-53	39010A	" non-dip (R.H.) ..	1948-49	*50633D	"	1951-53	76423A
Coil, ignition	1946-53	*45016A	" dip left (L.H.) ..			Coupling	1951-53	764428
Control box	1946-50	*332195	" Later	1949-53	50649B	Stop lamp	1946-53	31281B
"	1951-53	332151	" non-dip (R.H.) ..			Spring	1946-53	*31571A
" (Export)	1948-53	37081H	" Later	1949-53	50746B	Trafficator	1946-53	31379A
Distributor	1946-53	*40056A/J	Head, Export			Trafficators	1946-50	*54015B
Fuse box	1947-53	*37130A	R.H.D., dip left	1948-49	*50632D	"	1951-53	*54043A
Generator	1946-51	22007B	" Later	1949-53	50649B	Warning light (ignition) ..	1946-53	*38012B
"	1951-52	22448B	Stop tail and number plate			Windshield wipers		
"	1952-53	22448D	ditto Later	1947-53	*A53008B	Motor	1946-51	*75121A
"	1953	22472A	Mirror	1950-53	62515A	"	1952-53	75165A
" (Export) ..	1946-52	22448B	Starting motor	1946-50	*250405	Arm	1946-53	*735049
Horn	1946-53	*069376	" Later	1951-52	25032A	Blade	1946-53	727802
Horn push	1946-51	*762190	Suppressor	1951-53	78105A			

MORRIS Quarter Ton Van and Pick-up Truck 1954-60

Battery	1954-57	GT7A	Distributor	1954-55	*40299E	Generator	1954-55	22258D
"	1958-60	BT7A	" Later	1956	*40299L	"	1956-59	22258E/H
Coil, ignition	1954	*45020A	" (high compression)	1956	40494A	"	1960	22700D
"	1955-60	*45053	" Later	1957-58	40561B	" (temporary alternative)	1960	*22704A
Control box	1954-56	A/M	"	1958-59	40561D/H & K	Horn		
"	1956-58	37138D	" (low compression)	1960	40561J/L	Low note (N. America)	1954-56	*069399
" Later	1958-59	37182A/H	" Later	1957-58	40569A	ditto	1954-55	*69011F/J
"	1959	37182J	"	1958-59	40569B/F	High note (N. America)	1956-60	*69012F/J
"	1960	37183K & L	" Later	1960	40569J	ditto (and optional)	1954-55	69047A/F
			Fuse box	1954-60	033239	Horn push	1960	*31010B

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

MORRIS

MORRIS Quarter Ton Van and Pick-up Truck 1954-60—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
LAMPS			LAMPS—continued			Warning lights—continued		
Head, Home			Side	1954-60	52139B/E	Ignition bulb holder ..	1959-60	863511
R.H.D., dip left ..	1954-55	51336A	Stop tail	1954-60	53178D/H	Bulb	1959-60	987
" " " " ..	1956	51336B/J	Reflex reflector	1955-60	57047A/D	Main beam, bulb holder	1954-57	39007A
" " " " Later	1957-60	51736B/D	Sleeve, Lucar connector			" " " " " "	1959-60	554734
Head, Export			14 amp.	1960	54190042	Bulb	—	987
R.H.D., dip left ..	1954-55	51336A	35 amp.	1960	54190043	Oil, bulb holder ..	1959-60	863511
" " " " ..	1956	51336B/J	Starting motor	1954-57	25022F/L	Bulb	—	987
" " " " Later	1957-60	51736B/D	" " " " " "	1958-59	25022M	Petrol reserve ..	1955	*38013B
L.H.D., dip right ..	1960	51336B/J	Suppressor (when fitted)	1960	25022N/Q	Side lamp, bulb holder	1954	39007A
" " " " ..	1954	*51337A		1954-60	78106A	Bulb	—	987
" " " " ..	1955	*51337B	SWITCHES			Windshield wipers		
" " " " ..	1956	*51337D/E	Dipper	1954-60	31284A/D	Motor	1954-56	75151A
" " " " Later	1957-60	51737B	Ignition	1954-60	31287A/F	" " " " " "	1957	75213A
" " " " ..	1960	*51337F/K	Lighting	1954-56	31126B	" " " " Later	1958-59	75295B/D
Head, Export Europe			Knob	—	*316117	Wheelbox	1959-60	75295E
(not France) ..	1954-55	51339A	Lighting	1957-60	*31251A/F	" " " " " "	1954-56	72642A/E
ditto	1956	51339B/H	Knob	—	316154	" " " " " "	1957-60	72693A/B
ditto	1957-59	51738B	Panel	1954-60	31140A/B	Crosshead and rack assy.	1954-56	738764
(except France & Sweden)			Starting motor ..	1954-60	76423A	Cut to 31 1/2" ..	1957-60	743251
Later	1959-60	58270A	Coupling	—	764428	Crosshead and rack assy.	1954-56	738764
ditto	1960	58230A/E	Boot, rubber ..	1954-60	860556	Outer casing	1957-60	743251
Head, Export France			Stop lamp	1954-60	31082B/J	Motor to wheelbox ..	1954-56	740482
" " " " ..	1954-55	*51341A	Windshield wiper ..	1954	*31217A	Wheelbox to wheelbox	1957-60	744546
" " " " ..	1956	*51341B/E	Knob	—	315062	" " " " " "	1954-56	739973
" " " " Later	1957-59	51739B	Windshield wiper ..	1955	31474A	End tube	1957-60	744547
" " " " ..	1960	58271A	Knob	—	318378	" " " " " "	1954-56	740031
" " " " ..	1959-60	58231A/E	Windshield wiper ..	1956-60	*31515A	" " " " " "	1957-60	740746
Head, Export Sweden			Knob	1956	316388	Ferrule, casing retaining	1957-60	740715
Head, Export U.S.A.			Warning lights	1957-60	312865	Grommet, wheelbox ..	1957-60	740811
" " " " ..	1954-55	51343A	Flasher, bulb holder ..	1954-57	39007A	Arm, left hand ..	1954-56	737444
" " " " ..	1956	51343B/E	Bulb	—	987	" " right hand ..	1957-60	745075
" " " " ..	1957-59	51741B	Ignition	1954	*38013B	Blade	1954-56	737445
Head, Export Canada						" " " " " "	1957-60	745084
Number plate illumination	1954-60	53291A/B				" " " " " "	1954-56	727802
						" " " " " "	1957-60	738734

MORRIS Quarter Ton Van (G.P.O.) 1954-60

Battery	1954-57	GT9A	Reflex reflector	1955-60	57047D	SWITCHES—continued		
" " " " ..	1958-59	GT9A-3	Sleeve, Lucar connector			Windshield wiper ..	1955-60	*31515A
" " " " ..	1960	BT9A	14 amp.	1960	54190042	Knob	1955-59	316388
Bulb holder, panel light	1954	39015A	35 amp.	1960	54190043	" " " " " "	1960	312865
Coil, ignition	1954	*45020A	Starting motor	1954-59	25022A/L & M	Trafficators	1954-58	54050A
" " " " ..	1955-60	*45053	" " " " " "	1960	25022N/Q			
Control box	1954-56	*37138D	Steering column control	1960	33526B	Warning lights		
" " " " Later	1956-59	37182A/H	Slip ring	1960	38269A	Bulb holder, ignition and		
" " " " ..	1960	37183K & L	Suppressor (when fitted)	1954-60	78106A	oil pressure	1958-60	863511
Distributor	1954-55	*40299E				Bulb holder, main beam	1958-60	554734
" " " " ..	1956	*40299L				Bulb	—	987
" " " " Later	1956-59	40494A	SWITCHES			Windshield wipers		
" " " " ..	1960	40494B/D & F	Dipper	1954-60	31284A/D	Motor	1954-59	75143A
" " " " ..	1960	40494E & H	Flasher	1960	31883A	" " " " " "	1957	75295E
Flasher unit	1958-60	35012A	Horn push and trafficator	1958	31755D/F	Wheelbox	1954-59	72654A
Fuse box	1954-58	033239	Horn push and flasher			" " " " " "	1960	72693B
" " " " Later	1958-60	*37131A	Ignition	1958-59	31756F	Crosshead and rack assy.		
Generator	1954-56	22258D	" (Engineers' Van)	1954-57	31287A/B	Cut to 44 1/2" ..	1954-59	736307
" " " " ..	1956-59	22258E/F	" (Mail Van,	1958-60	31287F	Crosshead and rack assy.	1960	743251
" " " " ..	1960	22700D	serviced by G.P.O.)	1958-60	31786A/B	Outer casing		
" " (temporary	1960	*22704A	Lighting	1954-57	31126B	Motor to wheelbox ..	1954-59	739858
alternative)	1954-57	069399	Knob	1958-60	*316117	Wheelbox to wheelbox	1960	744546
Horn	1958-60	69046F	Lighting	1958-60	*31251D	" " " " " "	1954-59	739937
			Knob	—	316154	End tube	1960	744547
LAMPS			Panel	1954-60	31140A/B	" " " " " "	1954-59	740031
Flasher	1958-60	53778A	Starting motor ..	1954-60	76423A	" " " " " "	1960	740746
Head			Coupling	1954-60	860556	Ferrule, casing retaining	1954-59	738410
Metal wings	1954-56	51336A & B/J	Boot, rubber ..	1954-60	31082B/J	" " " " " "	1960	740715
" " " " ..	1957-60	51736B/D	Stop lamp	1954-60	031296	Arm, left hand ..	1954-59	737444
" " " " ..	1955-57	51026A	Trafficator	1954-57	*31217A	" " right hand ..	1960	745075
Rubber wings	1954-60	53291A/B	Windshield wiper ..	1954	315062	" " " " " "	1954-59	737445
Number plate illumination	1954-60	52139B/E	Knob	—		Blade	1954-59	745084
Side	1954-60	53178D/H				" " " " " "	1960	727803
Stop tail	1954-60					" " " " " "		738734

MORRIS 10 cwt. Van 1946-50

Ammeter	1946-50	*364428	LAMPS, Head, Home—			Starting motor	1946-47	*256044
Battery	1946-50	BNW9A	continued			" " " " " "	1948-50	25516A/E
Coil, ignition	1946-50	*45020A/B	R.H.D., vertical dip			SWITCHES		
Control box	1946-47	*37003A	" " " " (L.H.)	1948-49	*50632D	Battery master	1946-50	76605B
" " " " ..	1948-50	37057E	" " " " (L.H.) Later	1949	*50633D	Dipper	1946-50	31284A
Distributor	1946-49	*406269	" " " " (L.H.)	1949	50649A/B	Ignition and lighting	1946-48	*34022A
" " " " ..	1950	*40205A/B	" " " " (R.H.) Later	1949	50746B	" " " " " "	1949-50	*34026A
Generator	1946-50	22449A	" " " " dip left (L.H.)	1950	50413D	Panel	1946-50	*31276A
Horn	1946-50	069344	" " " " non-dip (R.H.)	1950	50746B	Starting motor	1946-50	*764150
LAMPS						Trafficator	1946-50	031046
Head, Home			Head, Export			Trafficators	1946-50	*54017B
R.H.D., non-dip ..	1946	50129A	Vertical dip	1948-49	*50632D	Warning light (ignition)	1946-50	*38013B
" " " " vertical dip	1947	*50370A	" " " " " " Later	1949-50	50649A/B	Windshield wipers		
" " " " (L.H.)	1947	*50549A	Stop tail and number plate	1946-49	*53008B	Motor	1946-50	733179
" " " " non-dip (R.H.)	1947		Stop tail	1950	*53060A	Arm	1946-50	*735049
						Blade	1946-50	727802

* See Supersession Chart

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

R.H.D. .. Right hand drive



Equipment Specification

MORRIS—MORRIS COMMERCIAL

MORRIS Half Ton Van and Pick-up Truck 1954-60

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1954-56	36149A	LAMPS— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery	1957-60	36234A	Head, Export Europe			Starting motor	1954-60	76423A
"	1954-57	GT9A	(not France)	1954	*51340A	Coupling	1954-60	764428
"	1958-59	GT9A-3	ditto Later	1954-55	51339A	Boot	1954-60	860556
"	1960	BT9A	ditto	1956	51339B/H	Stop lamp	1955-60	31082D/J
Coil, ignition	1954-56	*45020A/B	ditto	1957-59	51738B/D	Windshield wiper ..	1954	*31199A
"	1957-60	*45053	(except France & Sweden)			Knob	1955-56	315075
Control box	1954-55	A/M	Head, Export France ..	1959-60	58270A	Windshield wiper ..	1955-56	31474A
"	1956-59	*37138A/D	"	1954-55	51341A	Knob	—	318385
"	1959	37182A/H	"	1956	51341B/E	Windshield wiper ..	1957-60	*31515A
"	1960	37182J	"	1957-59	51739B	Knob	—	312865
Distributor	1954-56	37183K	"	1959-60	58271A	Warning lights		
"	1957-59	40358D/E	Head, Export Sweden ..	1959-60	58450A	Flasher	1955-56	*38087A
"	1957-59	40499A/D & F	Head, Export U.S.A. ..	1954-55	51343A	Ignition	1954-56	*38013B
"	1960	40499E & H	"	1956	51343B/E	Main beam	1954-56	*38087A
Flasher relay	1954-56	33117A	"	1957-60	51714B			
Fuse box	1954-60	033239	Head, Export Canada ..	1958-60	51987A/B	Windshield wipers		
Generator	1954-55	22258D	Number plate illumination	1954-60	53101E/J	Motor	1954-56	75143A
"	1956-59	22258E/F	Roof	1954-60	56022D	"	1957	75295A
"	1960	22700D	Side (R.H.D.)	1954-56	52139B	"	1958-59	75212D/E
"	(temporary alternative)	1960	Side and flasher (L.H.D.)	1954-56	*52162B/E	"	1959-60	75212F
Horn	1954-56	*22704A	Stop tail	1957-60	52162B	Wheelbox or clutch		
Low note (N. America)	1955	*069399	Stop tail, flasher and reflex	1954-56	53178D/F	housing	1954-56	72629A/D
"	1956-60	*69011J	ditto (U.S.A.)	1957-60	533479D	ditto	1957-60	72680A/D
High note (N. America)	1955	*69012J	Reflex reflector	1955-56	53634A	Crosshead and rack Assy.		
ditto (and optional)	1956-60	69047A/F	Starting motor	1954-56	57047A/D	Cut to 39 $\frac{3}{4}$ "	1954-56	736307
Horn relay (when twins fitted)	1955-60	*33116B	"	1957-59	25021A/F	" 44 $\frac{3}{4}$ "	1957-60	743235
LAMPS			"	1960	25022N/Q	Outer casing		
Head, Home			Suppressor (when fitted)	1954-57	78105A	Motor to wheelbox ..	1954-56	740482
R.H.D., dip left ..	1954	*51335A	"	1958-60	78106A	"	1957-60	745150
"	1954-55	51336A	SWITCHES			Wheelbox to wheelbox	1954-56	739972
"	1956	51336B/J	Dipper	1954-60	31284A/D	End tube	1957-60	745151
"	1957-60	51736B/D	Ignition	1954-56	31287A	"	1954-56	740031
Head, Export			Ignition and lighting ..	1957-60	31655A	"	1957-60	740746
R.H.D., dip left ..	1954	*51335A	Knob	—	316449	Ferrule, casing retaining	1954-56	737496
"	1954-55	51336A	Lighting	1954-56	31126B	Arm, left hand	1957-59	743524
"	1956	51336B/J	Knob	—	*316117	"	1960	54711571
"	1957-60	51736B/D	Panel	1954-56	*78292A	"	1954-56	737495
L.H.D., dip right ..	1954	*51338A	Knob	1954	*768890	"	1957-59	743523
"	1954	*51337A	Panel	1955-56	768651	"	1960	54711572
"	1955	*51337B	"	1957-59	78311A	Blade	1954-56	727803
"	1956	*51337D/E	"	1960	78346A	"	1957-60	737897
"	1957-60	51737B	Knob	1957-60	768945			

MORRIS COMMERCIAL 15/20 cwt. PV 1946-53

Ammeter	1946-47	*364510	LAMPS, Head, Home— <i>continued</i>			LAMPS— <i>continued</i>		
Battery	1948-53	36047D	R.H.D., non-dip (R.H.)	1946-47	*50432A	Stop tail and number plate	1946-49	*53031D
"	1946-50	SLT13A	"	1948-49	*50433A	ditto	1950-52	*53063B
"	1951-53	GT11A	"	1948-49	*50434A	ditto (G.P.O.) ..	1953	53295A
Coil, ignition	1946-53	*45020A/B	"	1950	*50854D	Mirror	1947-53	*620601
Control box	1946-47	*37031A	"	1950	*50855B	Starting motor	1946-48	*255378
"	1948-50	37057E	"	1950	*50855B	"	1949	*25524A
"	1951-52	37065E	"	1951	*50728D	"	1950-53	25533A/D
"	1952-53	*37138A/B	ditto (L.H. and R.H.)	1951	*51014A/F	Suppressor (distributor) ..	1951-53	78114A
Distributor	1946-49	40069A/B	"	1951-53	*51014A/F	"	1951-53	78106A
"	1950-53	40069D/H	Head, Export			"		
"	1952-53	033240	R.H.D., dip left ..	1950	*50854D	SWITCHES		
Fuse box	1946-49	24524A	"	1951	*50728D	Battery master (G.P.O.)	1951-53	76602B
Generator (L3-T3)	1946-49	22449A	"	1951-53	*51014A/F	Horn push and dipper ..	1946-48	*31061B
(Van)	1950-52	*22250E/F	L.H.D., dip right ..	1950	*A50854A	"	1949-53	*31076B
"	1952-53	22258D	"	1951	*A50728D	Ignition and lighting ..	1946-53	*34018A
"	1946-53	*069213	"	1951-53	*51016A/F	Starting motor	1946-53	76427A
Inspection lamp sockets	1946-53	*39506A	Head, Export Europe			Trafficator (G.P.O.) ..	1951-53	031296
Junction box	1946-53	78266A	(not France)	1950	*B50854D	Starting motor	1951-53	*053830
LAMPS			ditto	1951	*B50728D	Trafficators (G.P.O.) ..	1946-53	*38013B
Dash	1949-53	56031A	ditto	1951-53	*51015A/F	Warning light (ignition) ..		
Head, Home			Number plate illumination	1953	53101E	Windshield wipers		
R.H.D., dip left (L.H.)	1946-47	*50431A	Roof	1949-53	56022D	Motor	1946-47	*733068
			Side	1950-53	52139B	"	1948-53	*75049A
			Stop tail	1953	53178D	Arm	1946-53	735065
						Blade	1946-53	727803

MORRIS COMMERCIAL 25/30 cwt. LC3 1946-52

Ammeter	1946-49	*364428	Inspection lamp sockets ..	1946-52	39507A	LAMPS, Head, Export— <i>continued</i>		
Battery	1950-52	36047D	Junction box	1946-52	78266A	R.H.D., dip left ..		
"	1946-51	SLT13A	LAMPS			ditto (L.H. and R.H.)	1950	*50854D
"	1952	GT11A	Dash (G.P.O.)	1951-52	56031A	"	1951	*50728D
Coil, ignition	1946-52	*45020A/B	Head, Home			ditto	1951-52	*51014A/F
Control box	1946-47	*37031A	R.H.D., dip left (L.H.)	1946-49	50440A	L.H.D., dip right ..	1950	*A50854D
"	1948-49	37057E	"	1946-49	50441A	"	1951	*A50728D
"	1950-52	37065E	"	1950	*50854D	"	1951-52	*51016A/F
"	1952	*37138A/B	"	1950	*50855A	Head, Export Europe		
Distributor	1946	*405516	"	1951	*50728D	(not France)	1950	*B50854D
"	1946-49	40069A/B	"	1951-52	*51014A/F	ditto	1951	*B50728D
"	1950-52	40069D/H	ditto (L.H. and R.H.)	1951-52	*51014A/F	ditto	1951-52	51015A/F
Fuse box	1952	033240	Head, Export			Side	1946-48	*52105A
Generator	1946-49	22449A	Vertical dip (L.H.) ..	1946-47	*50439A	"	1949-52	52154A
"	1950-52	*22250E/F	"	1946-47	*50465A	Stop tail and number plate	1946-52	*53063B
"	1952	22258A/B	"	1948-49	*50427A	Mirror	1946-52	*62528A
"	1946-52	*069213	"	1948-49	*50464A	Panel light bulb holder ..	1946-52	39007A

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)

continued



Equipment Specification

MORRIS COMMERCIAL

MORRIS COMMERCIAL 25/30 cwt. LC3 1946-52—continued

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Starting motor	1946-48	*255378	SWITCHES—continued			Warning light (ignition) ..	1946-49	*318505
" " .. Later	1949	*25524A	Horn push and dipper ..	1946-52	*31329A	" " ..	1950-52	*38013B
Suppressor (distributor) ..	1951-52	78114A	ditto (Export) ..	1946-52	*31061B	Windshield wipers		
(plug) ..	1951-52	78106A	Ignition and lighting ..	1946-49	*344540	Motor	1946-48	733071
SWITCHES			Starting motor	1950-52	*34018A	" (steel cab) ..	1949-52	733071
Battery master (G.P.O.)	1951-52	76602B	Trafficator (G.P.O.) ..	1946-52	76427A	" (Van)	1949-52	*75049A
				1951-52	031296	" (L.H.D.) ..	1951-52	75138B
			Trafficators (G.P.O.) ..	1951-52	*053830	Arm	1946-52	*735045
						Blade	1946-52	727802

MORRIS COMMERCIAL 25/35 cwt. 1946

Ammeter	1946	*364428	LAMPS			SWITCHES—continued		
Battery	1946	SLT13A	Head			Ignition and lighting ..	1946	*344540
Coil, ignition	1946	*45020A	Non-dip	1946	50129A	Starting motor	1946	76427A
Control box	1946	*37031A	Side	1946	*52036A	Adaptor plate	—	78275A
Distributor	1946	40069A/B	Stop tail and number plate	1946	*53028B	Warning light (ignition) ..		*318505
Generator	1946	22449A	Starting motor	1946	*255378	Windshield wipers		
Horn	1946	069344	SWITCHES			Motor	1946	733071
Junction box	1946	78266A	Horn push and dipper ..	1946	*380150	Arm	1946	*735045
						Blade	1946	727802

MORRIS COMMERCIAL 30 cwt. LC4 1953: LC5 (Petrol) 1954-60: LCO 1956-57: LCO5 (Diesel) 1958-60

Ammeter	1954-60	36125A/B	LAMPS—continued			SWITCHES—continued		
Battery (Petrol)	1953-59	GT11A	R.H.D., dip left ..	1956-59	51344B	Panel	1953-54	31192A
" (Diesel)	1960	BT11A	" " .. Later	1959-60	51344D/F	Knob		315062
Bulb holder, speedo. light	1953-60	39007A	L.H.D., dip right ..	1953	*50528M	Panel	1955	31201D
" panel light ..	1953-60	39010A	" " ..	1954	*51345A	Knob	1956-60	*312850
Bulb	—	987	" " ..	1955	*51345B	Panel	1956-60	*31557A
Coil, ignition	1953-54	*45020A/B	" " ..	1956-60	*51345D/F	Knob	—	316132
" " ..	1955	*45053A	Head, Export Europe			Solenoid, starting motor		
" " ..	1956	*45054D	(not France)	1953	*50961A	(Diesel)	1956-60	*76443A
" " ..	1957-60	*45053	ditto	1954-55	51346A	Solenoid operating		
" " ..		H/M	ditto	1956-59	51346B/E	(Diesel)	1956-58	*31294A
Control box	1953-54	37065E	(except France & Sweden)			Starting motor (Petrol)	1953-60	76423A
" " .. Later	1954-55	*37138A/D	Head, Export France ..	1959-60	58272A/B	Coupling	1955-60	764428
" " ..	1956-59	37182A/H	Head, Export Sweden ..	1960	58451A/B	Stop lamp	1953-54	31082E/J
" " .. Later	1959-60	37182J	Head, Export U.S.A. ..	1960	*58499A/B	Windshield wiper ..	1953-54	31192A
" " ..	1960	37182K	Number plate illumination	1953-60	53101E/J	Knob	1955	315062
Distributor	1953	40069D/H	Side	1953-60	52139B/E	Windshield wiper ..	1955	31201D
" " ..	1954-56	*40321E/F	Stop tail	1953-60	53178D/H	Knob	1956-60	*31557A
" " ..	1957-59	40496A/B	Sleeve, Lucas connector			Windshield wiper ..	—	316388
" " ..	1960	40496D & F	14 amp.	1960	54190042	Warning lights		
" " .. Later	1960	40496E & H	35 amp.	1960	54190043	Ignition	1953-60	38049A
Fuse box	1953-60	033239	Starting motor (Petrol) ..	1953	25533A/B	Main beam	1953-60	38052B
Generator	1953-55	22258D	" " (Diesel)	1956-57	26043A	Windshield wipers		
" " ..	1956-59	22258E/F	" " ..	1958-59	26122A	Motor	1953-60	75146A/B
" " ..	1960	22700D	" " ..	1960	26135A	Wheelbox	1953-60	72624A/H
" (temporary alternative)	1960	*22704A	" " .. Later	1960	26051J	Crosshead and rack assy.		
Horn	1953-58	*069213	Suppressor (distributor) ..	1953-55	78114A	Left hand drive ..	1953-60	738499
" " ..	1959-60	69046F	(plug)	1953-60	78106A	Right hand drive ..	1953-60	738987
Junction box	1953-60	78265A	SWITCHES			Outer casing		
LAMPS			Fuel gauge (Diesel) ..	1959-60	*31294A/B	Motor to wheelbox ..	1953-60	739870
Head, Home			Horn push and dipper ..			Wheelbox to wheelbox		
R.H.D., dip left ..	1953	50992A	Left hand drive ..	1953	*31386A	Left hand drive ..	1953-60	*739974
" " ..	1954-55	51344A	Right hand drive ..	1953	*31305A	End tube	1953-60	740031
" " ..	1956-59	51344B	Horn push and dipper ..	1954-60	*31305A	Arm, left hand crank ..	1953-60	737639
" " .. Later	1959-60	51344D/F	Ignition	1953-60	31187D/E	" right hand crank ..	1953-60	737640
Head, Export			Lighting	1953-55	31126D	Blade	1953-60	727803
R.H.D., dip left ..	1953	50992A	Knob	—	315042			
" " ..	1954-55	51344A	Lighting	1956-60	*31251A/E			
" " ..			Knob	—	*316117			

MORRIS COMMERCIAL 30 cwt. LC4 1953: LC5 (Petrol) 1954-59: LCO5X (Diesel) 1958-59 (G.P.O. Models)

Ammeter	1954-59	36125B	Distributor	1953	40069D/H	LAMPS—continued		
Battery (Petrol)	1953-59	GT11A	" " .. Later	1954-56	*40321E/F	Side	1953-56	52139E
" (Diesel)	1958-59	MT19E	Fuse box	1953-59	40496A/B	" " ..	1957-59	*52105A
Bulb holder, panel light	1953-59	39010A	Generator (Petrol) ..	1953-56	033239	Stop tail and number plate	1953-59	53295A/B
" speedo. light	1953-59	39007A	" " .. Later	1956-59	22258D	Reflex reflector ..	1955-59	57116A
Bulb	—	987	" (Diesel)	1958-59	22258E/F	" " (alternative)	1956-58	57033D/E
Coil, ignition	1953-54	*45020A	Horn	1953-59	*22483D	Starting motor (Petrol) ..	1953	25533B
" " ..	1955	*45053D	Junction box	1954-59	*069213	" " (Diesel) ..	1954-59	26043A
" " ..	1956	*45054E			78265A	Suppressor (distributor) ..	1953-59	78114A
" " ..	1957-59	*45053				(plug)	1953-59	78106A
Control box (Petrol) ..	1953-54	H/M	LAMPS					
" " .. Later	1954-55	37065E	Head	1953	*50992A			
" " ..	1956-59	*37138D	" " ..	1954-55	51344B/D			
" " (Diesel) ..	1958-59	37182E/H	" " ..	1956-59	51344B & D/F			

* See Supersession Chart L.H. .. Left hand R.H. .. Right hand L.H.D. .. Left hand drive R.H.D. .. Right hand drive

continued



Equipment Specification

MORRIS COMMERCIAL

MORRIS COMMERCIAL 30 cwt. LC4 1953: LC5 (Petrol) 1954-59: LCO5X (Diesel) 1958-59 (G.P.O. Models)—cont'd

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
SWITCHES			SWITCHES—continued			Windshield wipers		
Battery master	1953-59	76602B	Solenoid, starting motor	1958-59	*76443A	Motor	1953-55	75146A
Fuel gauge (Diesel) ..	1958-59	*31294A	(Diesel)	1953-59	76423A	" (Engineers' cab) ..	1956-59	75299A/B
Heater plug (Diesel) ..	1958-59	31425B	Starting motor (Petrol) ..	1953-59	764428	Wheelbox (offside) ..	1957-59	75146A/B
Knob	—	315042	Coupling	1953-59	31082D/H	(nearside)	1953-59	72624H
Horn push and dipper ..	1953-59	*31305A	Stop lamp	1953-59	031296A/E	Crosshead and rack assy.	1953-59	72643A
Ignition	1953-55	31187D	Trafficator	1953-59	31192D	Outer casing	1953-59	738499
"	1956-59	Serviced	Windshield wiper ..	1953-54	315062	Motor to wheelbox ..	1953-59	739870
Lighting	1953-55	31126B	Knob	1955	31201D	Wheelbox to wheelbox ..	1953-59	739972
Knob	—	315042	Windshield wiper ..	1956-59	318385	End tube	1953-59	740031
Lighting	1956-59	*31251	Windshield wiper ..	—	*31557A	Ferrule, casing retaining	1953-59	738410
Knob	—	A/D	Knob	—	316388	Arm, left hand crank ..	1953-55	737639
Panel	1953-54	*316117	Trafficators	1953-59	54050A	ditto	1956-59	737496
Knob	—	315062	Warning lights	—	—	ditto (Engineers' cab) ..	1957-59	737639
Panel	1955	*31201D	Ignition	1953-55	38049A	Arm, right hand crank ..	1953-55	737640
Knob	—	*312850	"	1956-59	*38013B	ditto	1956-59	737495
Panel	1956-59	*31557A	Main beam	1953-59	38052B	ditto (Engineers' cab) ..	1957-59	737640
Knob	—	316132				Blade	1953-55	727803
						" (Engineers' cab) ..	1956-59	732642
							1957-59	727803

§ FUEL INJECTION EQUIPMENT (B.M.C. 2.2 litre Diesel Engine)

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1958-59	BPE4A65U210S635SEL	Nozzle holder	1958-59	BKB35S668
Governor	1958	BEPAMZ80A131	Nozzle	1958-59	BDN12SP6A
"	1959	BEPBMZ80A131	Filter	1958	F2-9
Venturi	1958-59	BEPK42-42-111S	"	1959	F2B-9

MORRIS COMMERCIAL 35/40, 45/55 and 60/70 cwt., 5 ton Forward Control, Tipper and ECV13/3 1946-48

Ammeter	1946-47	*364510	LAMPS—continued			SWITCHES—continued		
Battery	1948	36047D	Head, Home			Ignition and lighting ..	1946-48	*344540
(ECV13/3)	1946-48	SLT13A	R.H.D., dip left (L.H.)	1946-48	50440A	Solenoid, starting motor	1946-48	76022B
Coil, ignition	1946-48	ST11A	" non-dip (R.H.)	1946-48	50441A	(Forward Control) ..	1946-48	
Control box	1946-47	*45020A	Head, Export			Solenoid operating	1946-48	*317075
"	1948	*37032A	Vertical dip (L.H.) ..	1946-48	*50427A	(Forward Control) ..	1946-48	76427A
Distributor	1946-48	37065E	" (R.H.) ..	1946-48	*52110A	Starting motor	1946-48	31281B
Generator	1946-48	406354	Side	1946-48	*52105A	Stop lamp	1946-48	315543
Horn	1946-48	238395	" (ECV13/3 & Tipper)	1946-48	*53063B	Spring	—	315543
Inspection lamp sockets ..	1946-48	069344	Stop tail and number plate	1946-48	*620601	Warning light (ignition) ..	1946-48	*38013B
Junction box	1946-48	*39511A	Mirror	1946-48	270468	Windshield wipers		
LAMPS		78266A	Starting motor	1946-48		Motor	1946-48	733071
Dash	1946-48	56031A	SWITCHES			Arm	1946-48	*735045
			Horn push and dipper ..	1946-48	*380150	Blade	1946-48	727802

MORRIS COMMERCIAL CV Ambulance 1947-51

Ammeter	1947-49	*364510	LAMPS, Head, Home—			Starting motor	1947-48	270468
Battery	1950-51	36047D	continued			"	1949	26008A/B
Coil, ignition	1947-51	SLT13A	R.H.D., dip left (L.H.)	1948-49	50440A	"	1950-51	26038A
Control box	1947-51	*45020A	" non-dip (R.H.)	1948-49	50441A	Suppressor (distributor) ..	1951	78105A
"	1947	*37032A	" dip left (L.H.)	1950	*50854A	" (plug)	1951	78106A
"	1948-51	37065E	" non-dip (R.H.)	1950	*50855A	SWITCHES		
"	1951	*37138A/B	" dip left			Horn push and dipper ..	1947-51	*31329A
Distributor	1947-48	406354	" (L.H. and R.H.)	1951	*50728D	Ignition and lighting ..	1947-51	*34018A
Fuse box	1949-51	40129D/F	ditto	1951	*51014A/F	Starting motor	1947-51	76427A
Generator	1951	033240	Head, Export			Stop lamp	1947-51	31281B
"	1947	*22446A	R.H.D., dip left ..	1950	*50854A	Spring	1947-51	315543
"	1948-49	238395	"	1951	*50728D	Trafficator	1947-51	31190A
"	1950-51	*22250E/F	"	1951	*51014A/F	Trafficators	1947-48	*539911
"	1951	22258D	L.H.D., dip right ..	1950	*A50854A	"	1949-51	*54039A
Horn	1947-51	*069213	"	1951	*A50728D	Warning light (ignition) ..	1947-51	*38013B
Inspection lamp sockets ..	1947-51	39507A	"	1951	*51016A/F	Windshield wipers		
Junction box	1947-51	78266A	Head, Export Europe			Motor	1947-48	*733107
LAMPS			(not France)	1950	*B50854A	"	1949-51	75089B
Dash	1950-51	56031A	ditto	1951	*B50728D	Arm	1947-48	*735045
Head, Home			ditto	1951	*51015A/F	"	1949-51	*735096
R.H.D., dip left (L.H.)	1947	*50442A	Side	1947-48	*52105A	Blade	1947-48	727802
" non-dip (R.H.)	1947	*50443A	"	1949-51	52154A	"	1949-51	727803
			Stop tail and number plate	1947-51	*53031D			

MORRIS COMMERCIAL CVF13/5 1946-47: CV11/30 1946-48: CV11/40 1946-51 (Lorries): CV9/40 1950-51: CV10 1946-48 (Tippers)

Ammeter	1946-48	*364428	Control box	1946	*37003A	Generator	1946-48	238395
"	1950-51	36047D	"	1947-48	*37032A	" (Export)	1946-48	*22446A
Battery	1946-48	SG11A	"	1950-51	37065E	"	1950-51	*22250E/F
"	1950-51	SLT13A	"	1951	*37138A/B	"	1951	22258D
Coil, ignition	1946-51	*45020A	Distributor	1946-48	406354	Horn	1946-51	*069213
			Fuse box	1950-51	40129D/F	Junction box	1946-51	78266A
				1951	033240			

* See Supersession Chart
R.H.D. .. Right hand drive

§ Serviced by C.A.V. Ltd.

 
L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



100

1

L.H.D. . . Left hand drive

A114



Equipment Specification

MORRIS COMMERCIAL

MORRIS COMMERCIAL FVO 1949-53: FVSO 1954: FVSO12/5 1955

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1949-54	*36018B	LAMPS			Starting motor (served by C.A.V.)	1949-55	BS524K60
"	1955	36125B	Head, Home					
Battery	1949-52	LMCXB	R.H.D., dip left (L.H.)	1949-51	*50728D	SWITCHES		
		EW9A	" non-dip (R.H.)	1949-51	*50729D	Fuel gauge	1949-54	*31071A
	1953-55	MCX9A	" dip left			Horn push and dipper ..	1949-54	*380191
Bulb holder, panel light ..	1949-54	39007A	(L.H. and R.H.) Later	1951-54	*51017A	Lighting	1949-54	*31418A
Bulb holder, flasher ..	1955	39007A	ditto	1955	51344A	"	1955	31126B
Bulb holder, speedo. ..	1955	39010A	Head, Export			Knob	1955	*34031A
Bulb	1949-55	987	R.H.D., dip left ..	1949-51	*50728D	"	1955	315042
Control box (Home) ..	1949-54	*37076E	" " " Later ..	1951-54	*51017A	Panel	1949-54	*31276A
" " (Export) ..	1949-52	*37076E	L.H.D., dip right ..	1949-51	*A50728D	Solenoid operating ..	1949-54	*31071A
" " " Later ..	1952-54	*37139D	" " " Later ..	1951-54	50873E	"	1955	31107A
" " " ..	1955	*37139E	" " " ..	1955	*51345B	" " " Later ..	1955	31253A
Fuse box	1952-55	033240	Head, Export Europe			Knob	1955	*317366
Generator	1949	*22424A	(not France)	1949-51	*B50728D	Windshield wiper ..	1955	31201D
"	1950-52	*22441A	ditto	1951-54	*51018A	Knob	1955	*312850
"	1952-55	*22458A/B	ditto	1955	51346A	Warning light (main beam)	1949-55	38052B
Horn	1949-55	*069213	Number plate illumination	1954-55	53101E			
Inspection lamp sockets ..	1949-50	39507A	Side	1949-54	52047A	Windshield wipers		
" " " ..	1951-52	39515A	Stop tail and number plate	1949-53	*53063B	Motor	1949-55	*75069B
Junction box	1949-55	78265A	Mirror	1949-55	53178D/E	Arm	1949-55	735156
" " " ..	1949-55	78266A			*062519	Blade	1949-55	727803

§ FUEL INJECTION EQUIPMENT

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1949-50	BPE6A60Q320-3S338E	Venturi	1949-55	BEPK60-46-80
Governor	1951-55	BPE6A60S320-3S6222E	Nozzle holder	1949-55	PNH2
"	1949-50	BEPMZ80A83	Nozzle	1949-55	PN150-2
"	1951-55	BEPMZ80A96	Filter	1949-55	BFA5P2
Coupling	1949-55	BZKG31-502			

MORRIS COMMERCIAL NV 1954: NV12/3 1955

Ammeter	1954-55	36125A	LAMPS—continued			SWITCHES—continued		
Battery	1954-55	GT11A	Side	1954-55	52139B	Windshield wiper ..	1955	31201D
Bulb holder, panel light ..	1954-55	39010A	Stop tail	1954-55	53178D/E	Knob	—	318385
Bulb holder, speedo. ..	1954-55	39007A	Reflex reflector ..	1955	57052A	Warning lights		
Coil, ignition	1954	*45020A/B	Starting motor ..	1954-55	26038A	Ignition	1954-55	38049A
"	1955	*45053A	Suppressor (distributor) ..	1954	78105A	Main beam	1954-55	38052B
Control box	1954	37065E	" (plug)	1954-55	78106A			
" " " Later ..	1954-55	*37138A/D				Windshield wipers		
Distributor	1954-55	40129D/F				Motor	1954-55	75146A
Fuse box	1954-55	033239	SWITCHES			Wheelbox	1954-55	72624H
Generator	1954-55	22258D	Horn push and dipper ..	1954-55	*31305A	Crosshead and rack assy.		
Horn	1954-55	*069213	Ignition	1954-55	31187D	(Left hand drive) ..	1954-55	738499
			Lighting	1954-55	31126B	(Right hand drive) ..	1954-55	738987
LAMPS			Knob		315042	Outer casing		
Head, Home			Panel	1954	31192A	Motor to wheelbox ..	1954-55	739870
R.H.D., dip left ..	1954-55	51344A	Knob		315062	Wheelbox to wheelbox		
Head, Export			Panel	1955	31201D	(Left hand drive) ..	1954-55	*73997A
R.H.D., dip left ..	1954-55	51344A	Knob		312850	End tube	1954-55	740031
L.H.D., dip right ..	1954-55	*51345A & B	Starting motor ..	1954-55	76442A	Arm, left hand ..	1954-55	737639
Head, Export Europe			Coupling		76442B	" right hand ..	1954-55	737640
(not France)	1954-55	51346A	Windshield wiper ..	1954	31192A	Blade	1954-55	727803
Number plate illumination	1954-55	53101E	Knob	—	315062			

MORRIS COMMERCIAL NVS 1951-54: NVS12/3 and NVS13/5 1955

Ammeter	1951-55	36125A/B	LAMPS, Head, Export—			SWITCHES—continued		
Battery	1951-55	GT11A	continued			Starting motor	1951-55	76423A
Bulb holder, panel light ..	1951-55	39007A	L.H.D., dip right ..	1951	*A50799D	Coupling	—	764428
"	1953-55	39010A	" " " Later ..	1951-53	*50528M	Windshield wiper ..	1951-54	*31252A
Coil, ignition	1951-54	*45020A/B	" " " ..	1954-55	*51345A & B	Knob	—	*31509A
"	1955	*45053A	Head, Export Europe			Windshield wiper ..	1955	31201D
Control box	1951-52	37065E	(not France)	1951	*B50799D	Knob	—	318385
" " " Later ..	1952-55	*37138B	ditto	1951-54	*50961A	Warning lights		
Distributor	1951	40228A	ditto	1954-55	51346A	Ignition	1951-54	*38013B
"	1951-55	40228B/D	Number plate illumination	1953-55	53101E	"	1955	38049A
Fuse box	1952-55	033239	Side	1951-55	52139B	Main beam	1951-55	38052B
Generator	1951-52	*22250E/F	Stop tail and number plate	1951-55	*53063B	Windshield wipers		
"	1952-55	22258D	ditto	1953-55	53178D	Motor	1951-52	*75100D
Horn (low note)	1951-55	*069213	Starting motor ..	1951-55	26038A	"	1953-55	75146A
LAMPS			Suppressor (distributor) ..	1951-55	78114A	Wheelbox	1951-55	72624A/H
Head, Home			" (plug)	1951-55	78106A	Crosshead and rack assy.		
R.H.D., dip left (L.H.)	1951	*50799D	SWITCHES			(Left hand drive) ..	1951-55	738499
" non-dip (R.H.)	1951	*50579K	Horn push and dipper ..	1951-55	*31305A	(Right hand drive) ..	1951-55	738987
" dip left			Ignition	1951-55	31187D	Outer casing		
(L.H. and R.H.) Later	1951	*50959A	Lighting	1951-54	*31251A	Motor to wheelbox ..	1951-55	739870
ditto	1952-53	*50992A	Knob		311617	Wheelbox to wheelbox		
ditto	1954-55	51344A	Lighting	1955	31126B	(Left hand drive) ..	1953-55	*73997A
Head, Export			Knob		315042	End tube	1951-55	740031
R.H.D., dip left ..	1951	*50799D	Panel	1951-54	*31252A	Arm, left hand ..	1951-55	737639
" " " " Later ..	1951	*50959A	Knob		315098	" right hand ..	1951-55	737640
" " " " ..	1952-53	*50992A	Panel	1955	31201D	Blade	1951-55	727803
" " " " ..	1954-55	51344A	Knob	—	*312850			

* See Supersession Chart
R.H.D. ... Right hand drive

§ Serviced by C.A.V. Ltd.

L.H. ... Left hand

R.H. ... Right hand

L.H.D. ... Left hand drive

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)



Equipment Specification

MORRIS COMMERCIAL

MORRIS COMMERCIAL NVO 1951-54: NVO12/3 and NVO11/5 1955

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Ammeter	1951-55	36125A/B	LAMPS, Head, Export— <i>continued</i>			SWITCHES— <i>continued</i>		
Battery	1951-52	LMCXB	L.H.D., dip right ..	1951	*A50799D	Solenoid, starting motor ..	1955	*76411E
" (NVO12/3) ..	1955	MCX9A	" " " Later ..	1951-53	*50528M	Solenoid operating ..	1951-52	31253A
Bulb holder, panel light ..	1951-55	39007A	" " " ..	1954-55	*51345A & B	Knob	—	*317366
Control box	1951-55	39010A	Head, Export Europe ..	1951	*B50799D	Solenoid operating ..	1953-55	31107A
" " " Later ..	1952-55	*37076E	(not France)	1951	*50961A	Starting motor (series- parallel, serviced by C.A.V.)	1951-55	1820410
" " (NVO12/3) ..	1955	*37138D/E	ditto Later	1951-53	51346A	Windshield wiper ..	1951-54	*31252A
Fuse box	1952-55	033239	ditto	1954-55	53101E	Knob	—	*315094
Generator	1951-52	*22441A	Number plate illumination	1953-55	52139B	Windshield wiper ..	1955	31201D
" " " Later ..	1952-55	*22458A/B	Side	1951-53	*53063B	Knob	—	*312850
" " (NVO12/3) ..	1955	22258D	Stop tail and number plate	1954-55	53178D/E	Windshield wipers		
Horn	1951-55	*069213	Starting motor (serviced by C.A.V.)	1951-55	BS524K/ L60	Motor	1951-52	*75100D
LAMPS			Starting motor (NVO12/3)	1955	*26109D	" " " ..	1953-55	75146A
Head, Home			ditto Later	1955	26051H	Wheelbox	1951-55	72624A/H
R.H.D., dip left (L.H.)	1951	*50799D	SWITCHES			Crosshead and rack assy. (Left hand drive) ..	1951-55	738499
" non-dip (R.H.)	1951	*50579K	Horn push and dipper ..	1951-55	*31305A	(Right hand drive) ..	1951-55	738987
" dip left ..	1952-53	*50959A	Lighting	1951-54	*31251A	Outer casing ..	1951-55	739870
(L.H. and R.H.) Later	1951	*50992A	Knob	—	*316117	Motor to wheelbox ..	1951-55	739870
ditto	1954-55	51344A	Lighting	1955	31126B	Wheelbox to wheelbox (Left hand drive) ..	1953-55	*739974
Head, Export			Knob	—	315042	End tube	1951-55	740031
R.H.D., dip left ..	1951	*50799D	Panel	1951-54	*31252A	Arm, left hand ..	1951-55	737639
" " " Later ..	1951	*50959A	Knob	—	*315098	" right hand ..	1951-55	737640
" " " ..	1952-53	*50992A	Panel	1955	31201D	Blade	1951-55	727803
" " " ..	1954-55	51344A	Knob	—	*312850			

§ FUEL INJECTION EQUIPMENT

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1951-55	BPE6A60S320-3S6222E	Nozzle holder	1951-55	PNH2
Governor	1951-55	BEPMZ80A96	Nozzle	1951-55	PN150-2
Coupling	1951-55	BZKG31-502	Filter	1951-52	BFA5P2
Venturi	1951-55	BEPK60-46-80	"	1953-55	F2-1

MORRIS COMMERCIAL OP Passenger Chassis 1949-50

Ammeter	1949-50	*36006B	Generator (24 volt, serviced by C.A.V.) ..	1949-50	1151020	SWITCHES		
Control box (12 volt) ..	1949	37065E	Horn (12 volt)	1949	069344	Horn push and dipper ..	1949	*380150
" (24 volt, serviced by C.A.V.) ..	1949-50	189-4	Junction box	1950	78266A	Ignition and lighting ..	1949-50	34054A
Fuse box	1950	*385211	Starting motor (serviced by C.A.V.)	1949-50	BS524K60	Panel	1949-50	*314722
Generator (12 volt) ..	1949	*22424A				Solenoid operating ..	1949-50	*31071A

§ FUEL INJECTION EQUIPMENT

Unit	Year	Part No.	Unit	Year	Part No.
Fuel pump	1949-50	BPE6A60Q320-3S338E	Nozzle holder	1949-50	PNH2
Governor	1949-50	BEPMZ80A83	Nozzle	1949-50	PN150-2
Coupling	1949-50	BZKG31-502	Filter	1949-50	BFA5P2
Venturi	1949-50	BEPK60-46-80			

MORRIS COMMERCIAL PP Coach 1950-52

Ammeter	1950-51	*36006B	Horn	1950-51	*069213	LAMPS— <i>continued</i>		
Battery	1950-51	LMCXB	Inspection lamp sockets ..	1950-51	39507A	Side	1950-52	52047A
Bulb holder, panel light ..	1950-51	39007A	Junction box	1950-51	78266A	Stop tail and number plate	1950-52	*53062B
Bulb	—	987	LAMPS			Starting motor	1950-51	26038A
Coil, ignition	1950-51	*45020A	Head, Home			Suppressor (distributor) ..	1951	78105A
Control box	1950-51	37065E	R.H.D., dip left (L.H.)	1950-51	*50728D	" (plug)	1951	78106A
" " " Later ..	1951	*37138A/B	" non-dip (R.H.)	1950-51	*50729D	SWITCHES		
" " (heavy duty, serviced by C.A.V.) ..	1950-51	202-1	" dip left	1952	*51017E	Battery master	1950-51	*768061
Distributor	1950-51	40129D/F	(L.H. and R.H.) ..	1952	*51017E	Horn push and dipper ..	1950-51	*380234
Fuse box (standard) ..	1951	033240	Head, Export			Ignition and lighting ..	1950-51	*34018A
" " (heavy duty) ..	1950-51	*385211	R.H.D., dip left ..	1950-51	*50728D	Panel	1950-51	*314722
Generator (standard) ..	1950-51	*22250E/F	L.H.D., dip right ..	1950-51	*A50728D	Starting motor	1950-51	76427A
" " " Later ..	1951	22258D	" " "	1952	50873B	" (series- parallel, serviced by C.A.V.)	1950-51	1820410
" " (heavy duty, serviced by C.A.V.) ..	1950-51	H5512-7	Head, Export Europe (not France)	1950-51	*B50728D	Warning light (ignition) ..	1950-51	*38013B
			ditto	1952	*51018E			

MORRIS COMMERCIAL 10 cwt. 'J' Van 1949-57

Ammeter	1949-50	36047D	Control box	1949-54	37065E	Fuse box— <i>continued</i> ..	1954	033239
" " " ..	1951-54	*36113A	" " "	1955	*37138D	" " "	1955	033240
" " " ..	1955-57	36047E	" " "	1956-57	37182A/H	" " "	1956-57	033239
Battery	1949-57	GT9A	Distributor	1949-50	40152B	Generator	1949-52	*22250E/F
" (G.P.O.)	1951-57	GT11A	" " "	1951-53	*40237A/B	" " " " Later ..	1952-56	22258D
Bulb holder, panel light ..	1949-57	39007A	" " "	1954-57	40358D/F	" " " " ..	1956-57	22258E
Bulb	—	987	Fuse box	1951-53	033240	Horn	1949-57	*069213
Coil, ignition	1949-55	*45020A/B				Inspection lamp sockets ..	1949-55	39507A
" " " Later ..	1955-57	*45053A/H						

* See Supersession Chart
R.H.D. .. Right hand drive

§ Serviced by C.A.V. Ltd.

L.H. .. Left hand

R.H. .. Right hand

L.H.D. .. Left hand drive

continued

Note. Before ordering Steering Column Controls refer to the detailed parts section (P)